

35012

產品編號: 35012

scale 1/35

1:35 比例



1/35 US Heavy Wrecker Ward LaFrance M1000, Series 3

Go through this assembly guide and understand it before you start kit assembly
Use usual plastic kit's cements and tools (not included in the kit)
Follow painting guide supplied, use only hobby paints
Work carefully with photo etched parts if included, use C/A glues to assemble them

請您在組裝此產品前仔細閱讀組裝指南;
請使用通用塑膠模型黏合劑和工具(本產品不附帶);
本產品所以提供的噴塗指南只適用本於模型;
如果本產品含有蝕刻套件,請小心仔細處理, 請使用C/A膠水組裝;

組み立て前にこの組み立てガイドをご覧ください。
プラスチックキット専用接着剤と専用工具をご使用ください。(ともにキットには含まれていません)
塗装ガイドに従ってください。専用塗料をご使用ください。
エッチングパーツの組み立ては細かいパーツのため注意が必要です。また接着には瞬間接着剤を使用してください。



cut/remove 切下 / 移除 切断/切り離し



drill hole 鑽孔 ドリル穴



no glue 不適用膠水 接着しない



bend 折彎 折り曲げ



cyanoacrylate glue 氰基丙烯酸酯膠水 瞬間接着剤



string or wire 細繩或者金屬絲線 糸または金属線









rope 繩 ひも









PE - press rivets (lines) 蝕刻片 - ラインやリベット部分を未エッチング面から圧を与える
from the etched off side 請从蚀刻掉的一侧压铆钉 (线)


1

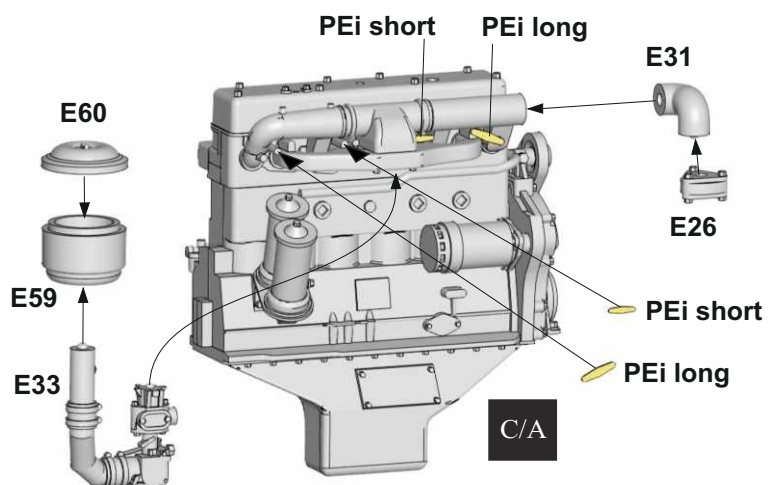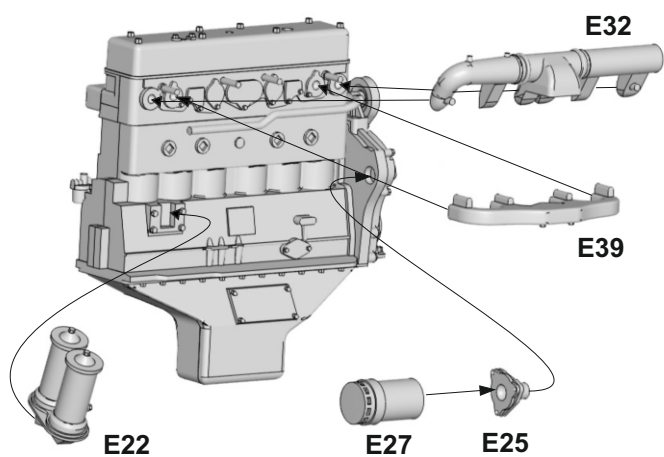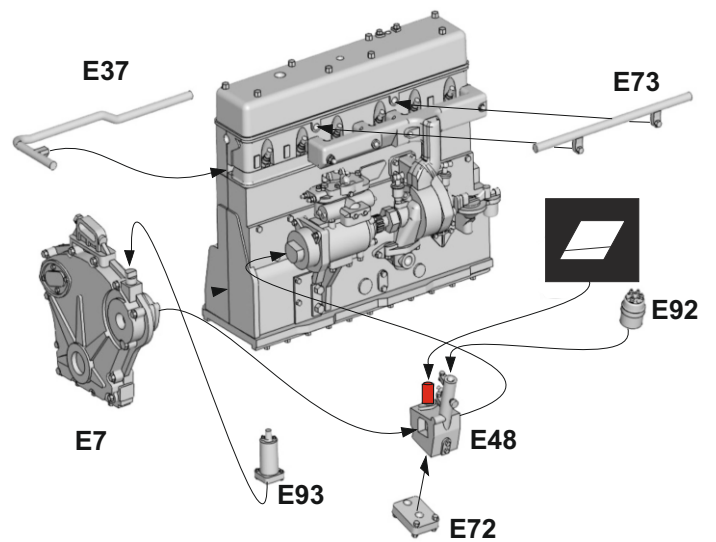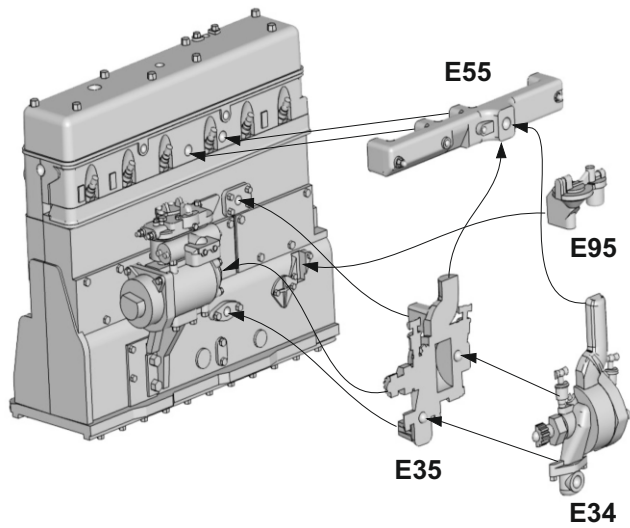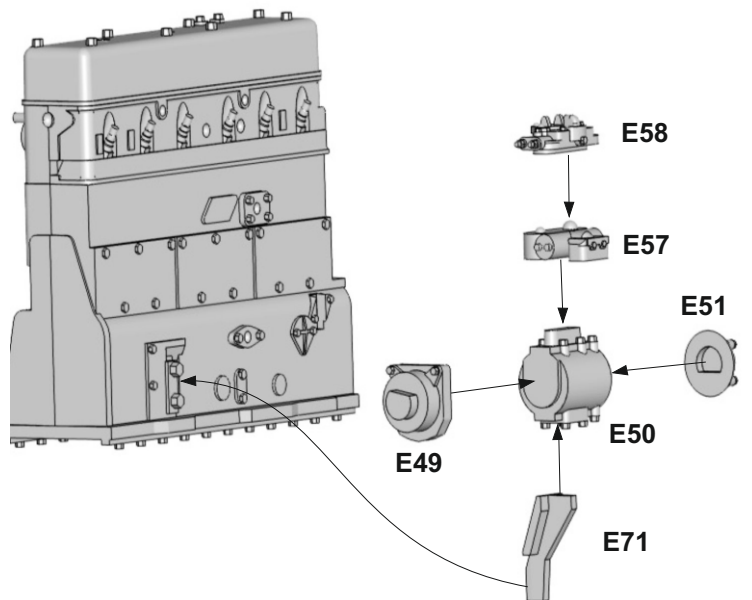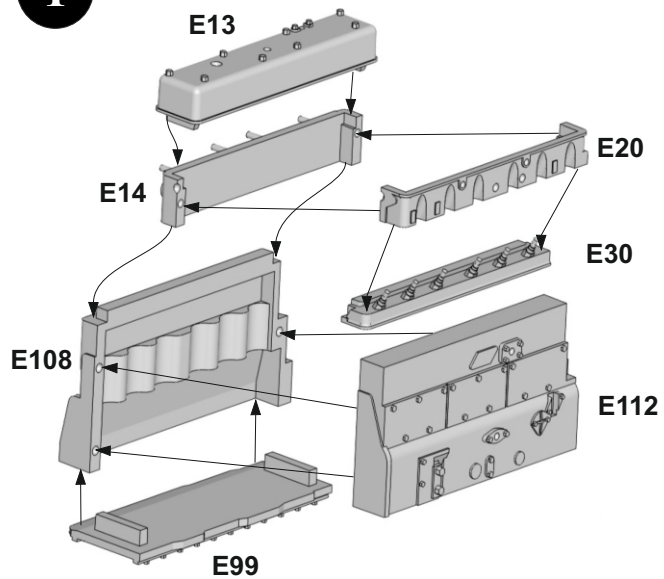


2

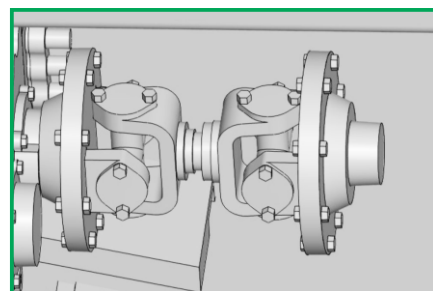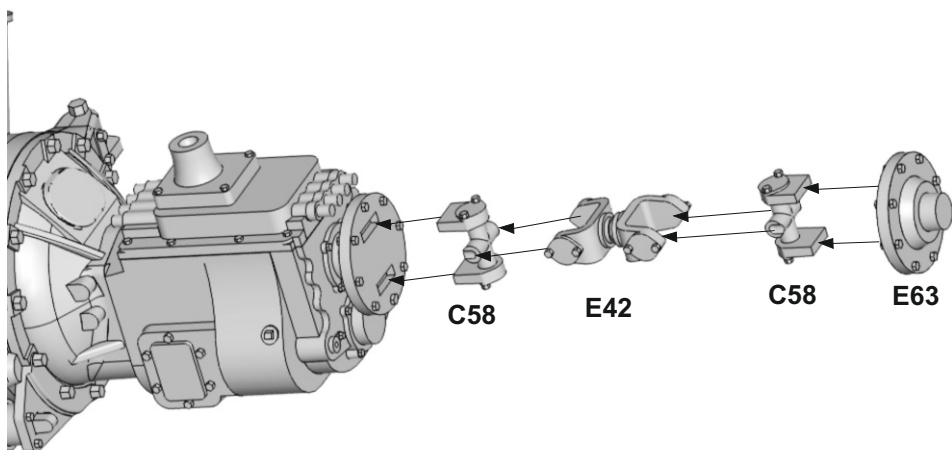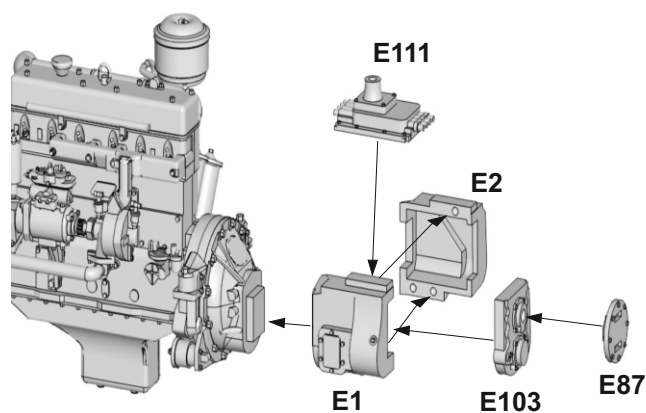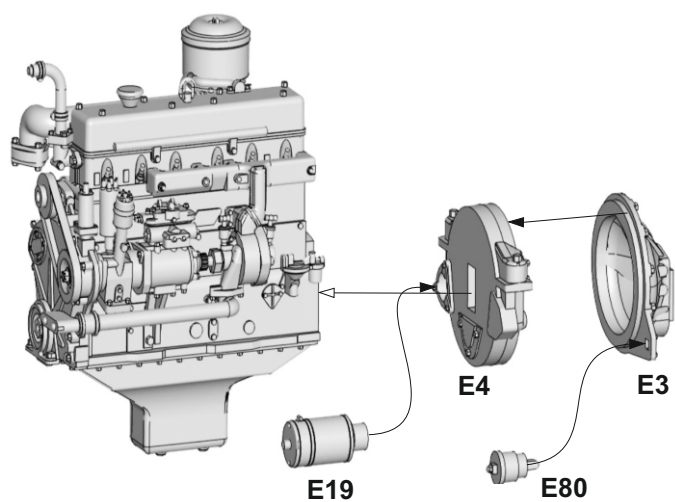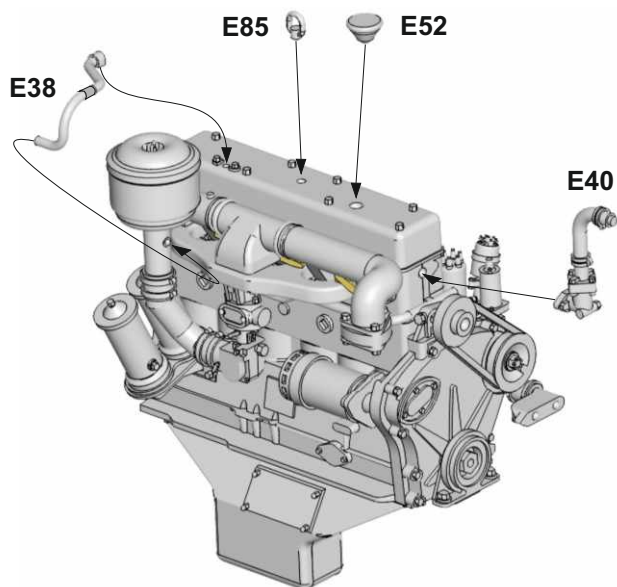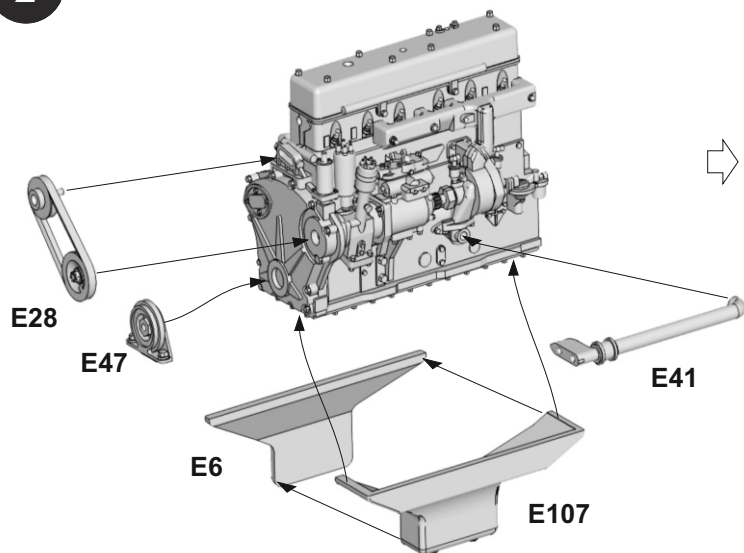



3


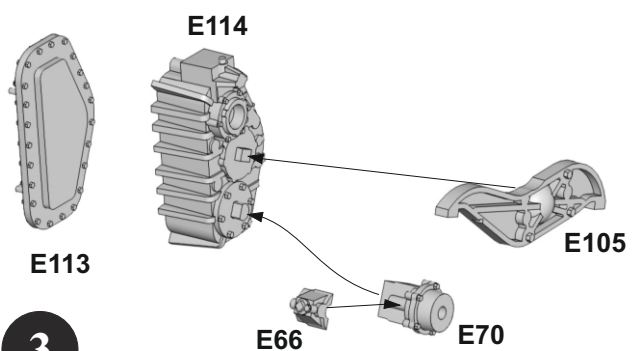


4

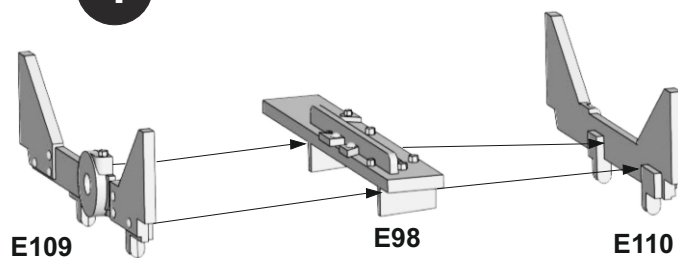


3

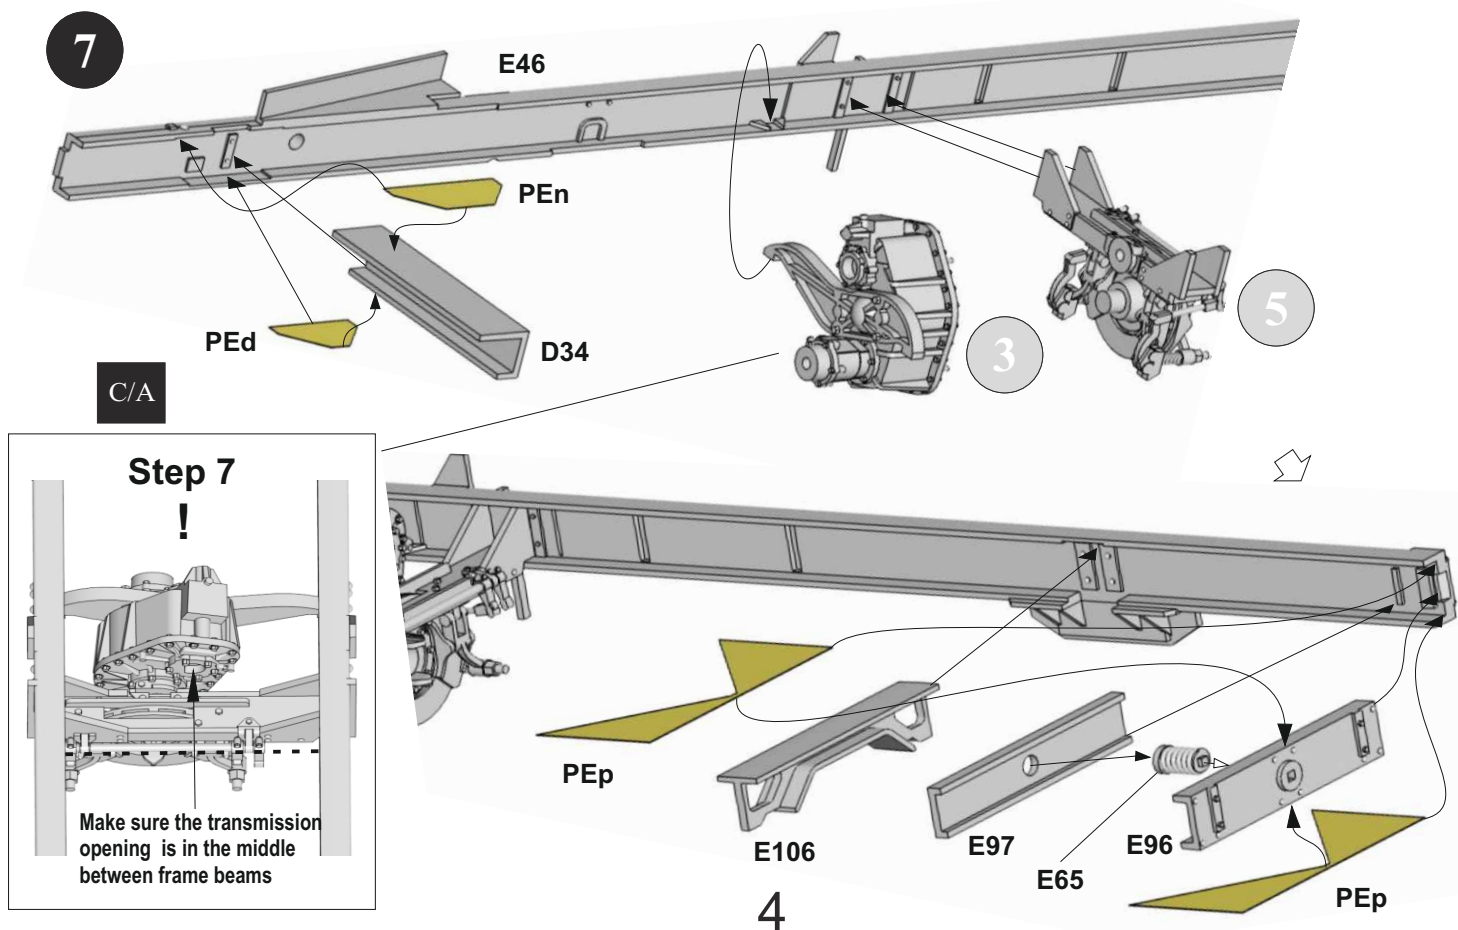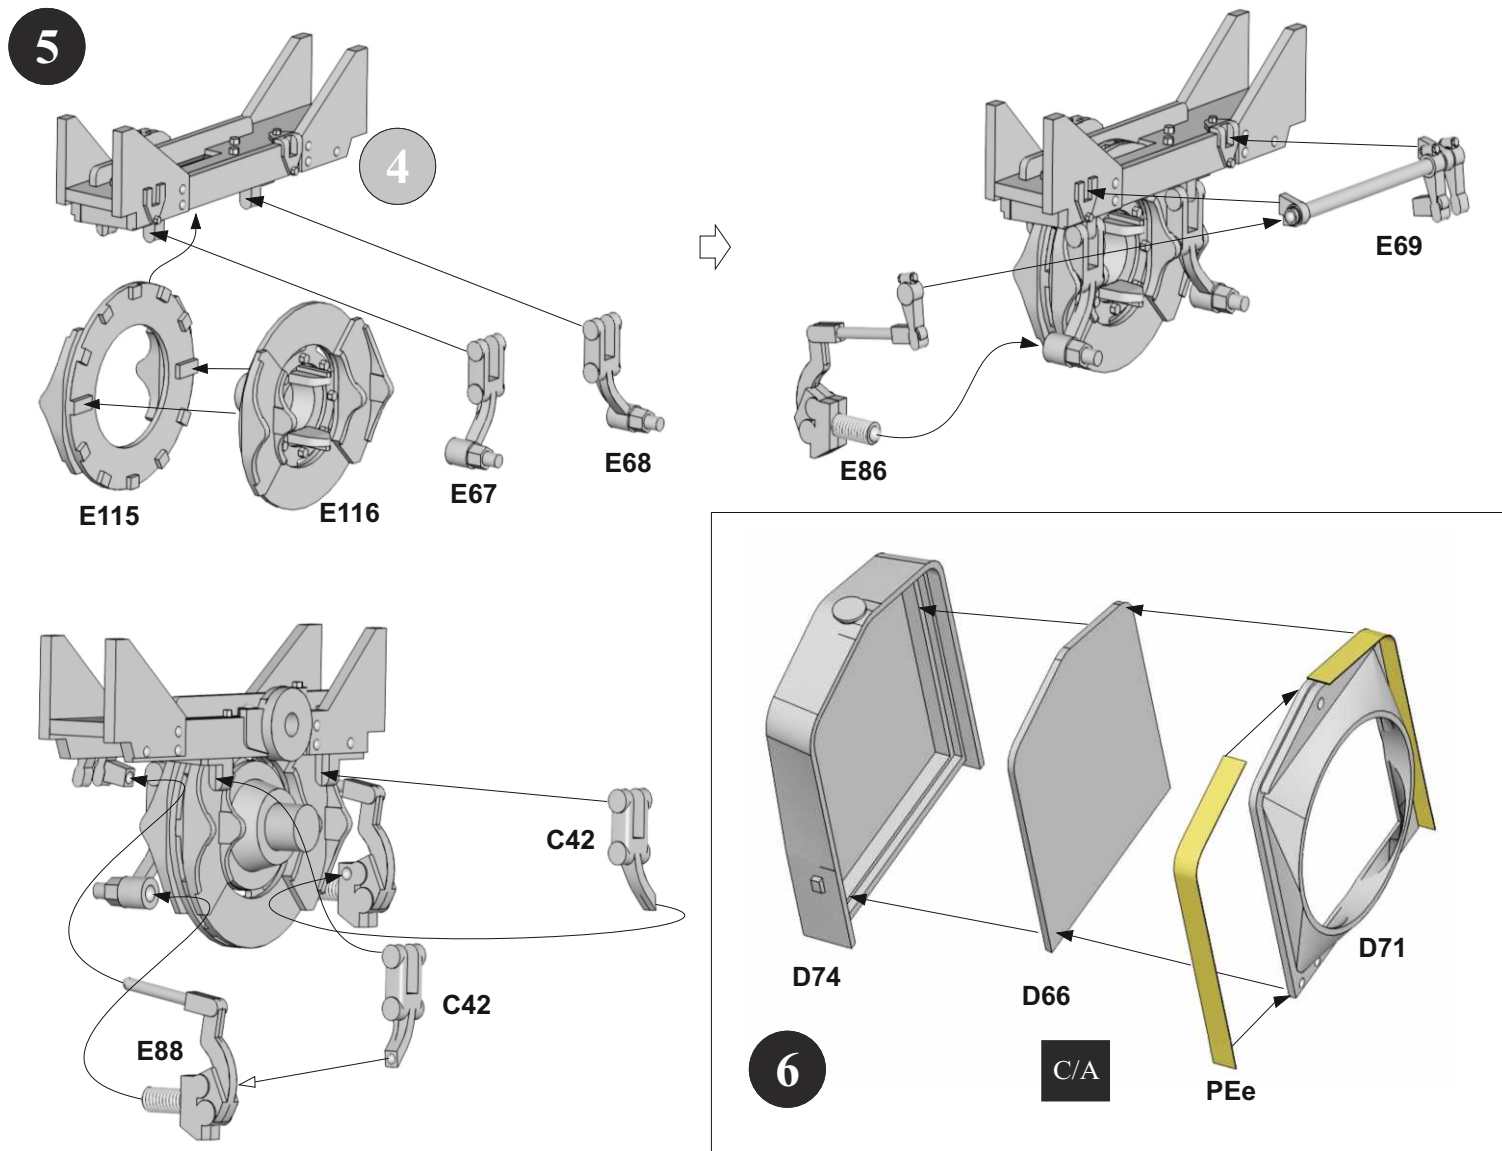


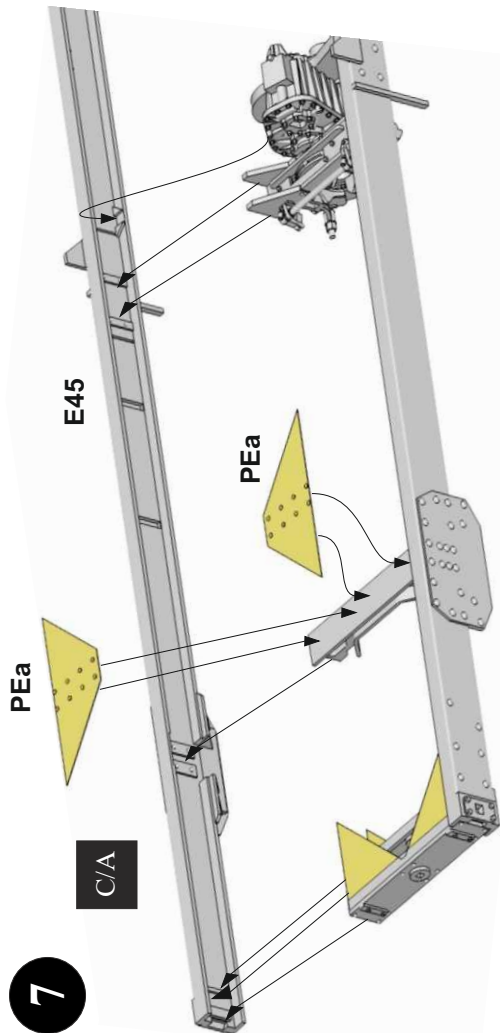



7

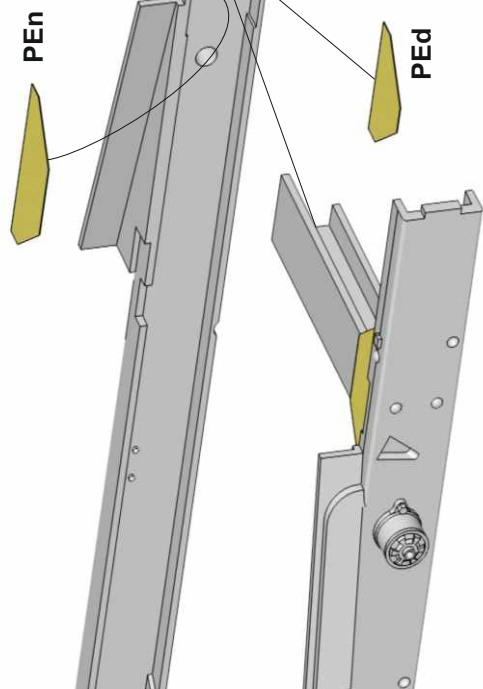






8

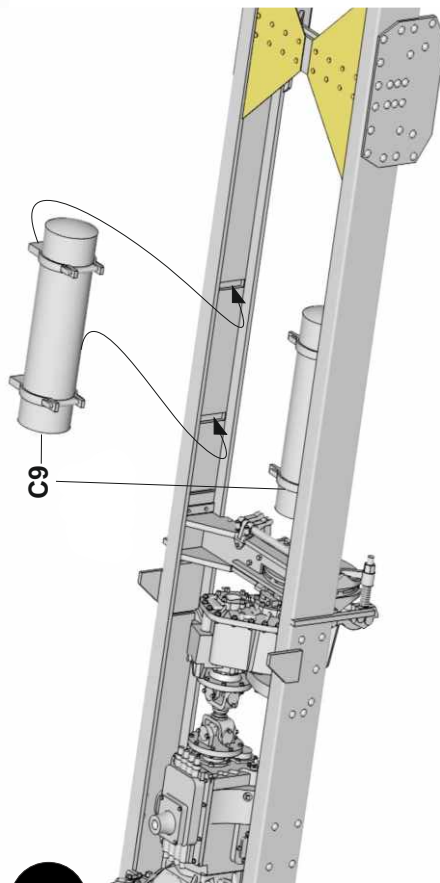

2

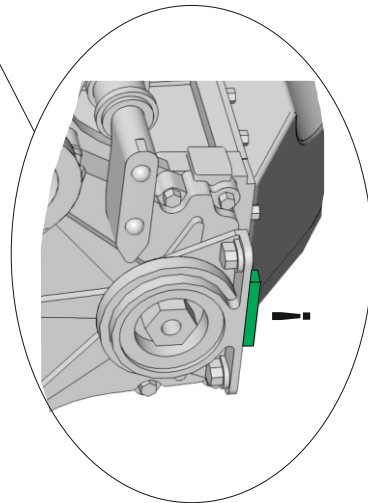
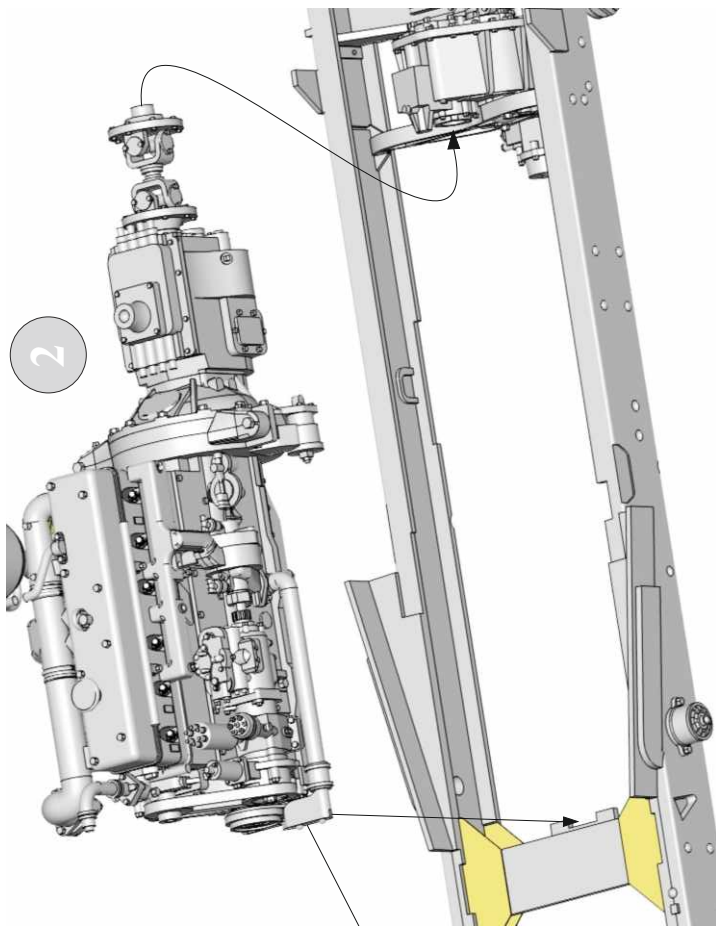





5

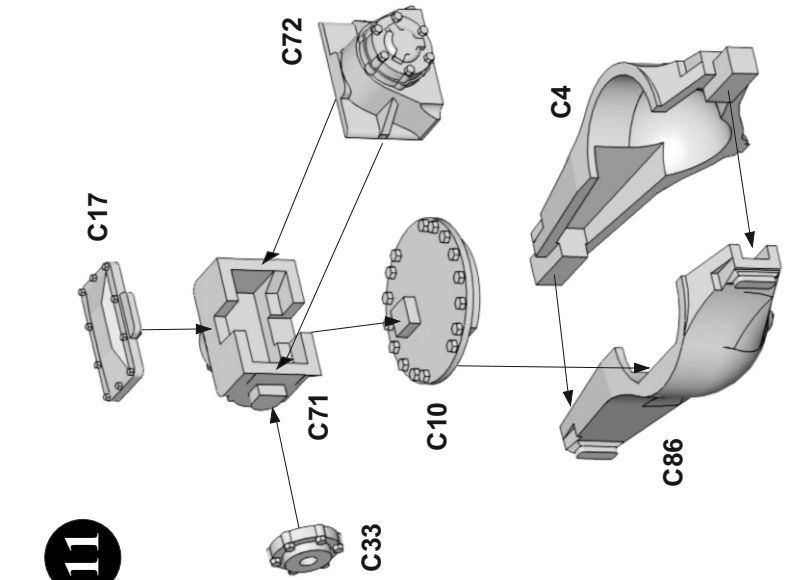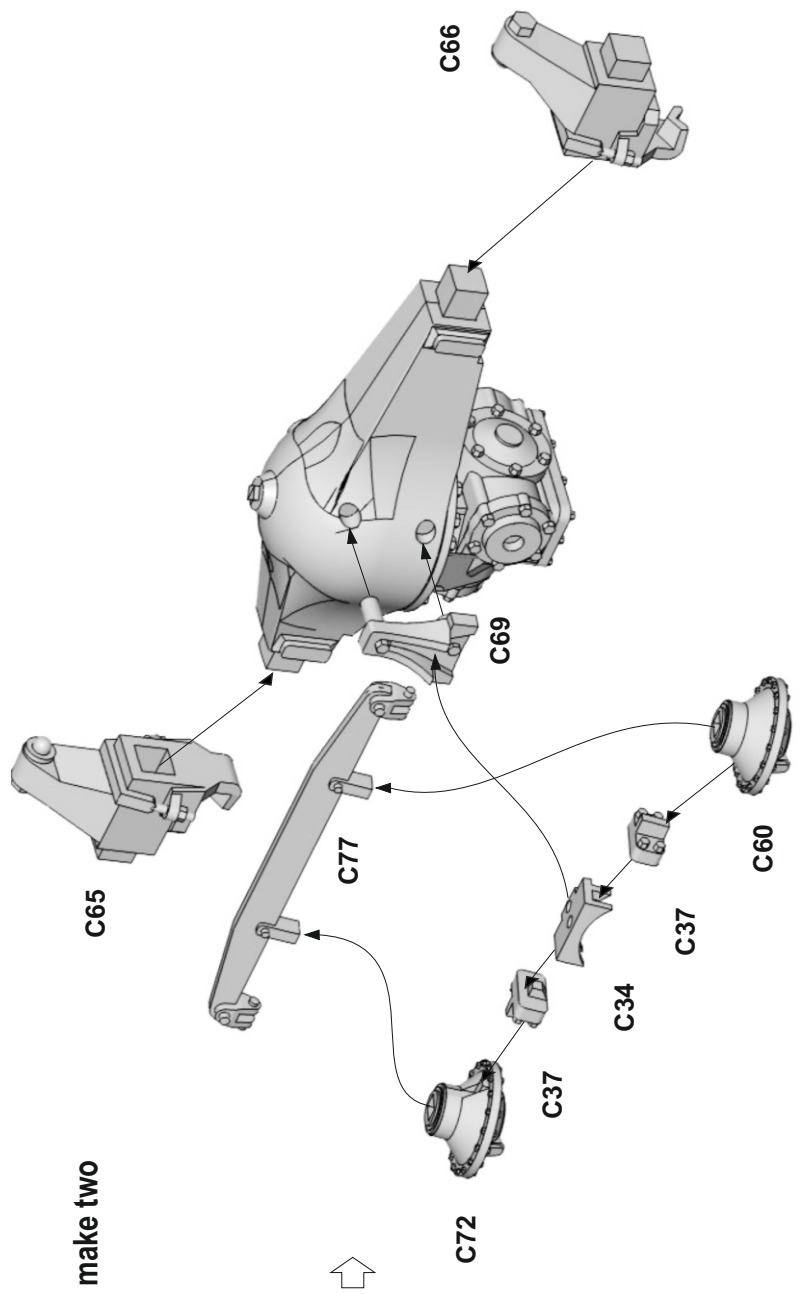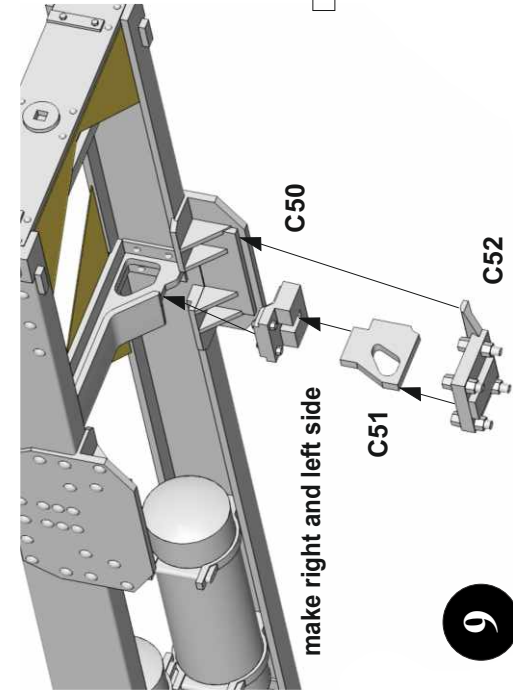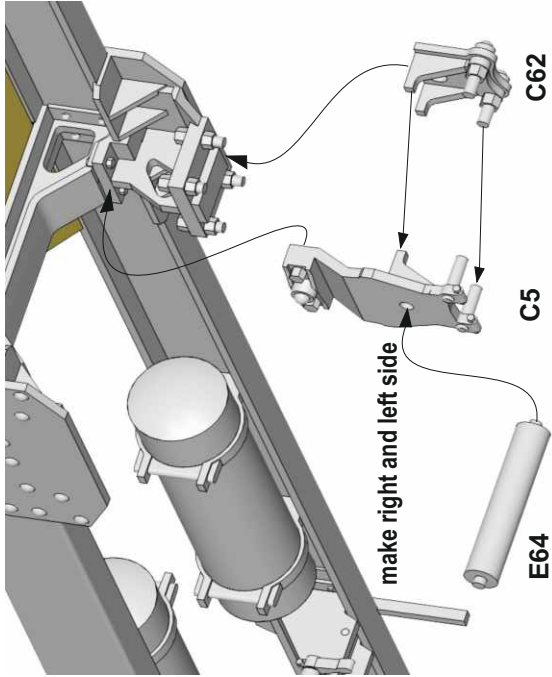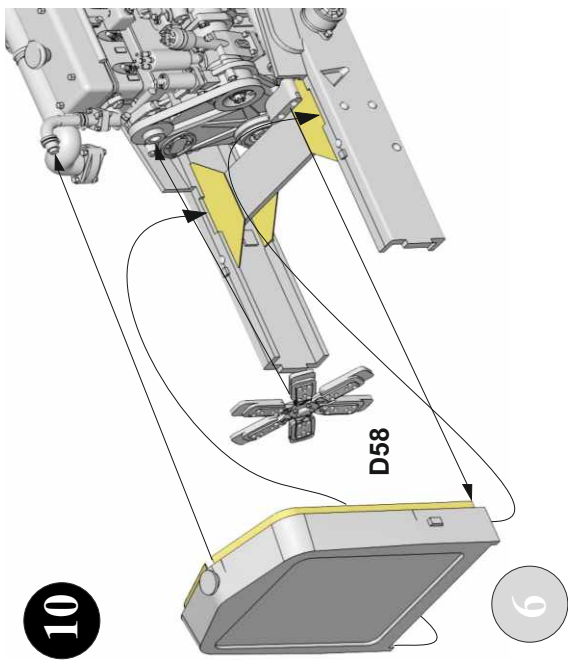


11



6

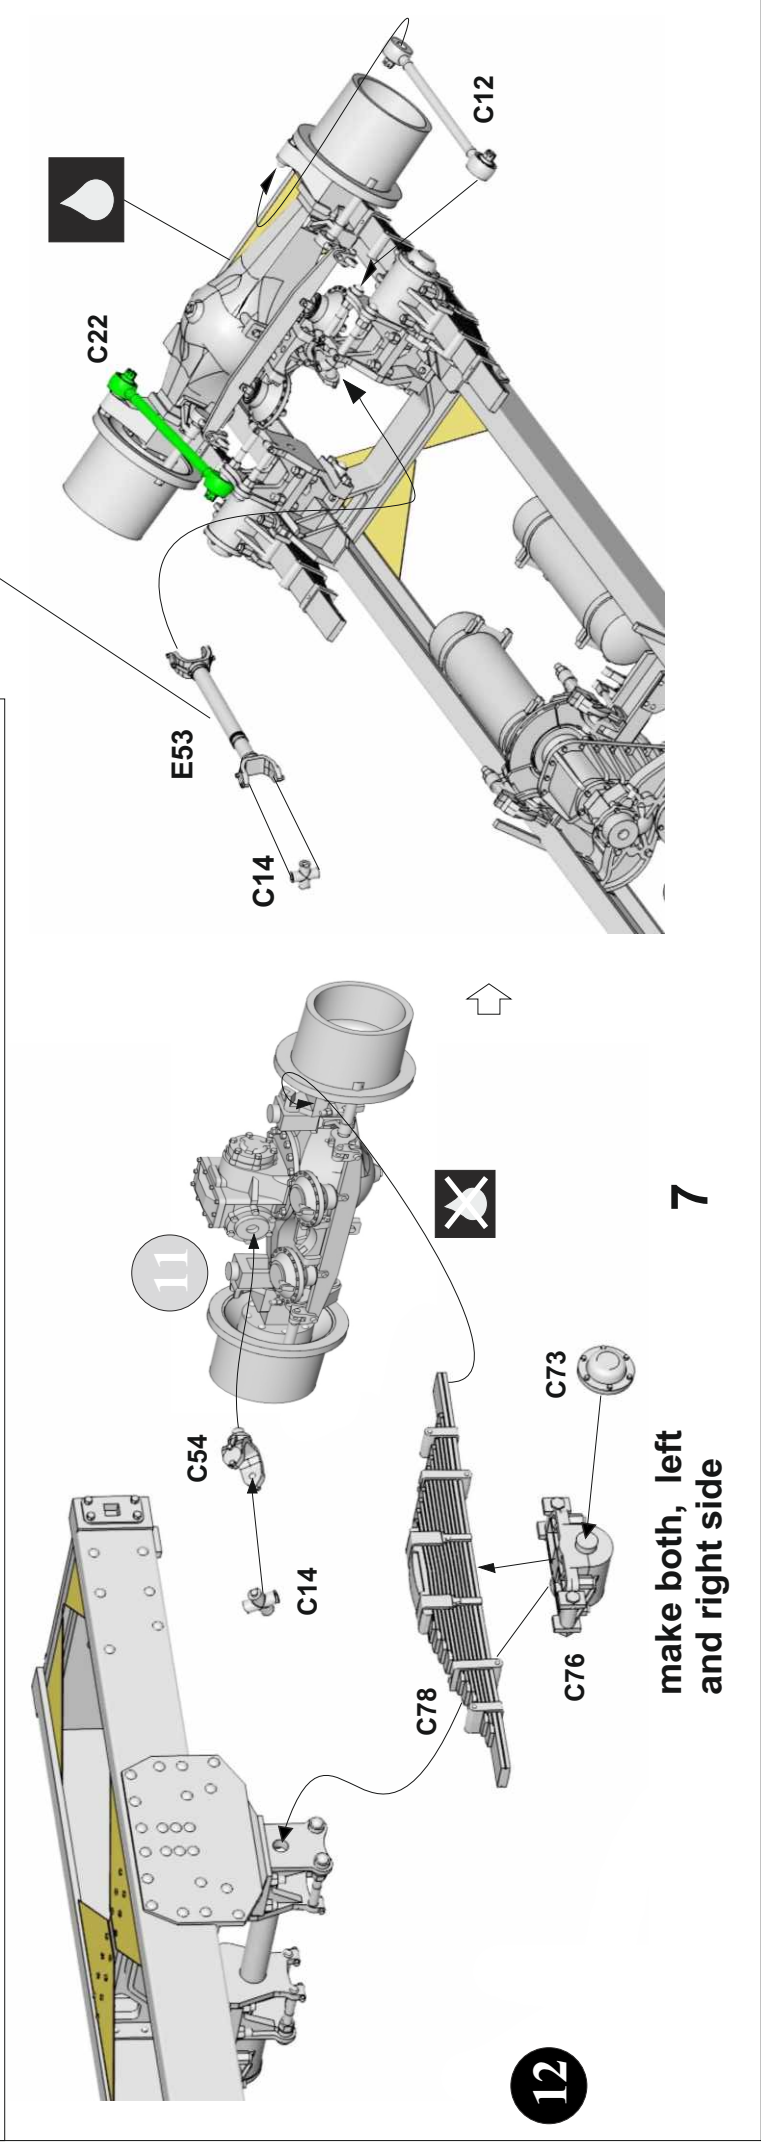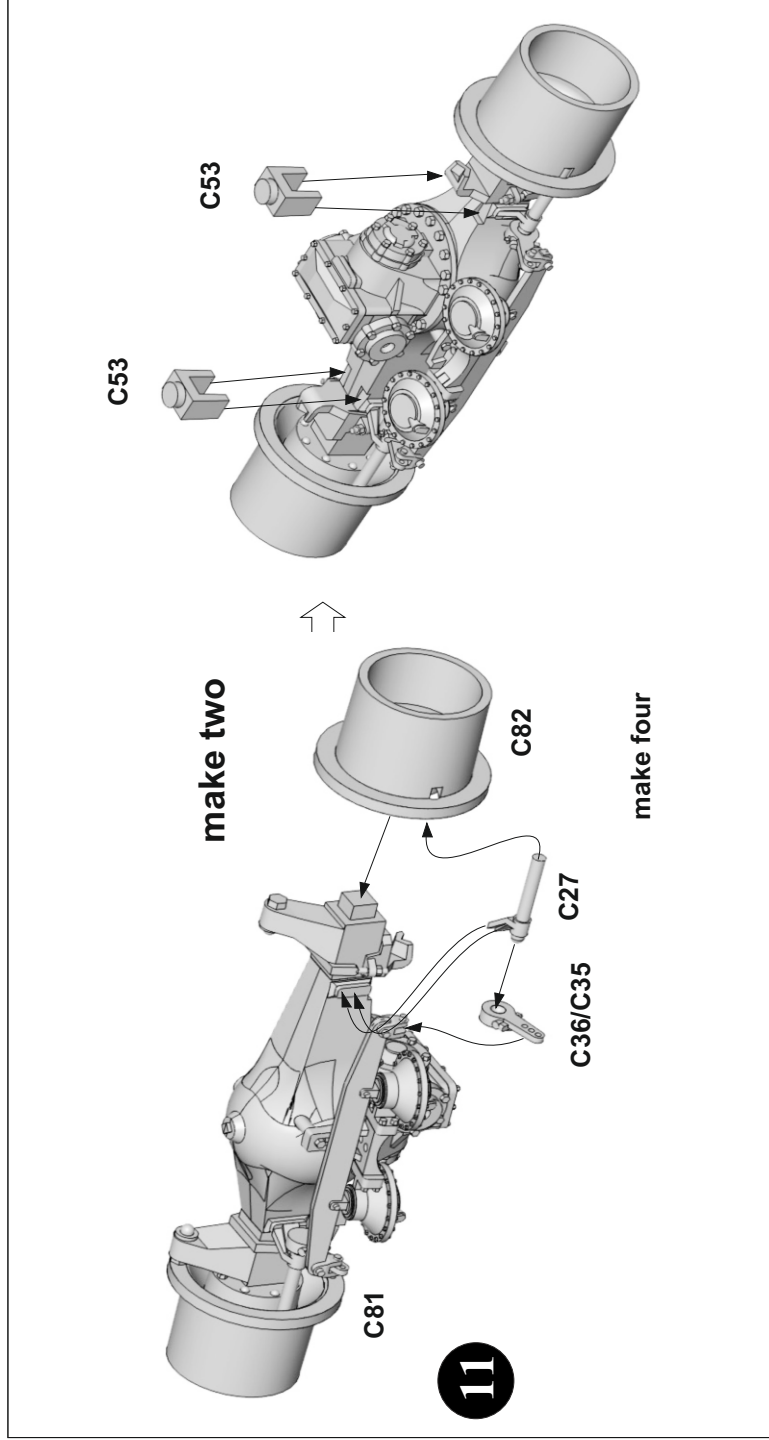

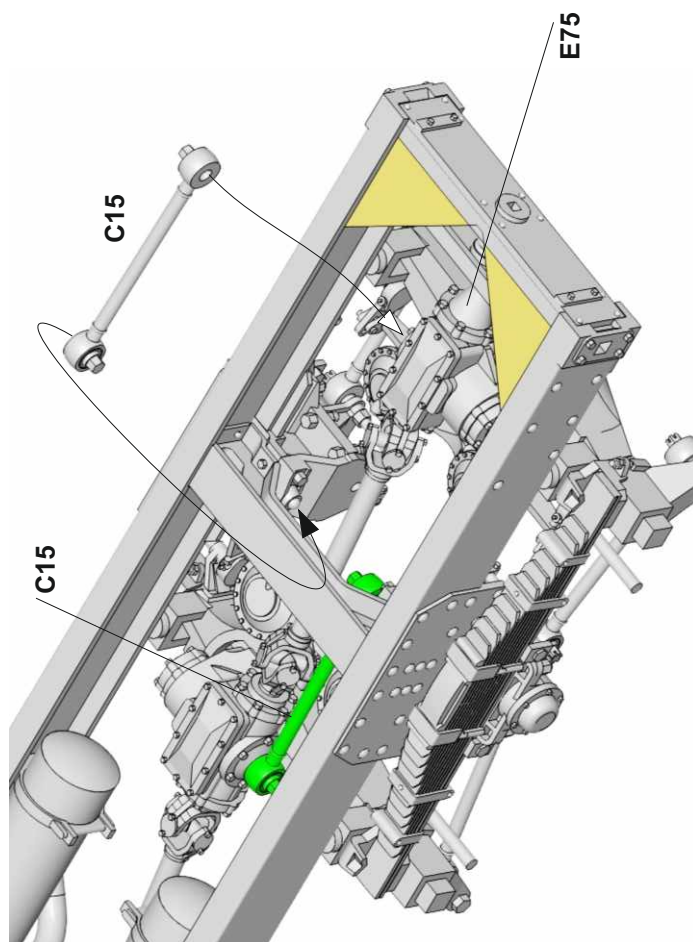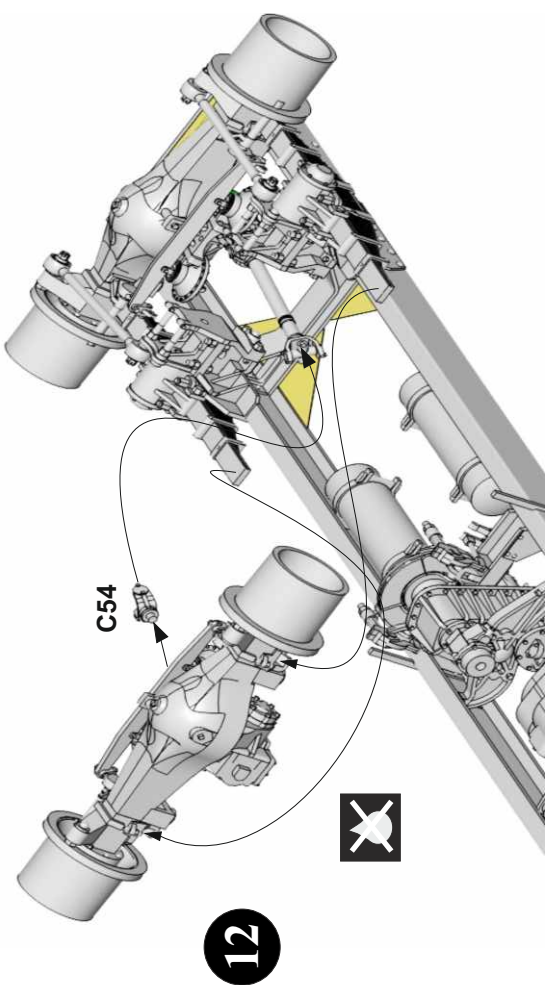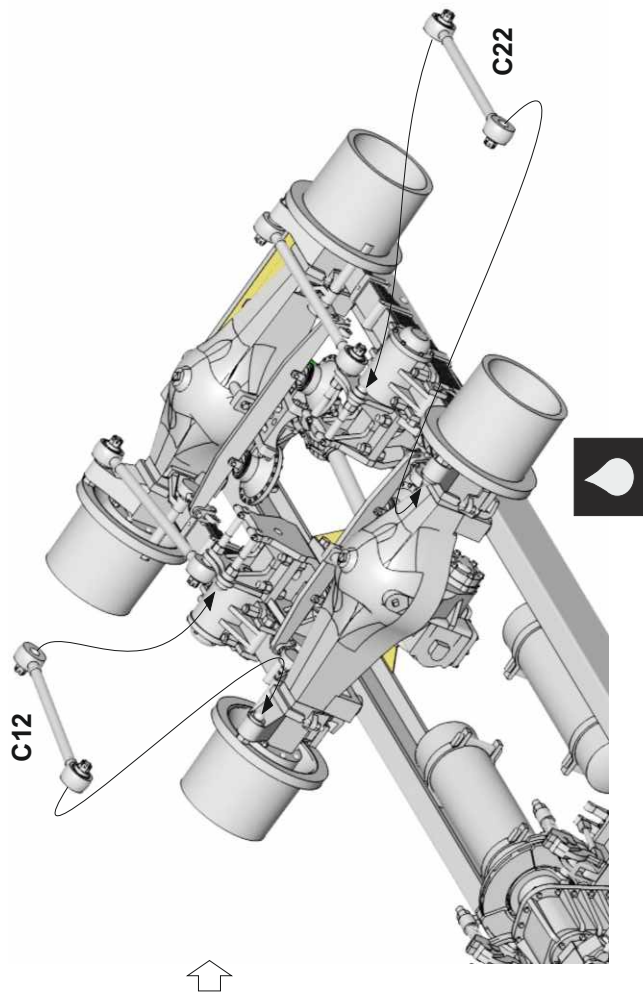


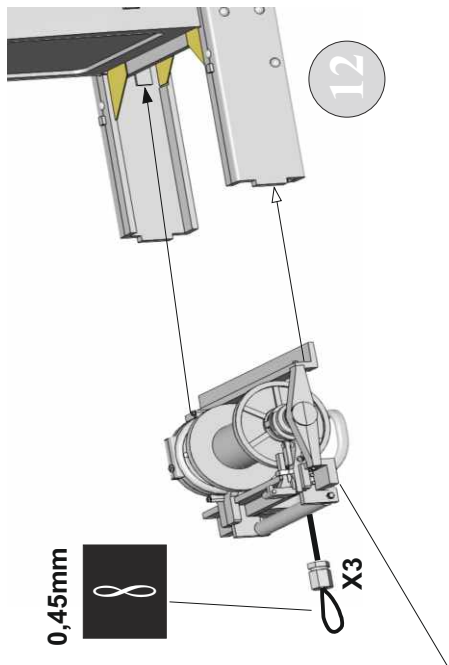


13

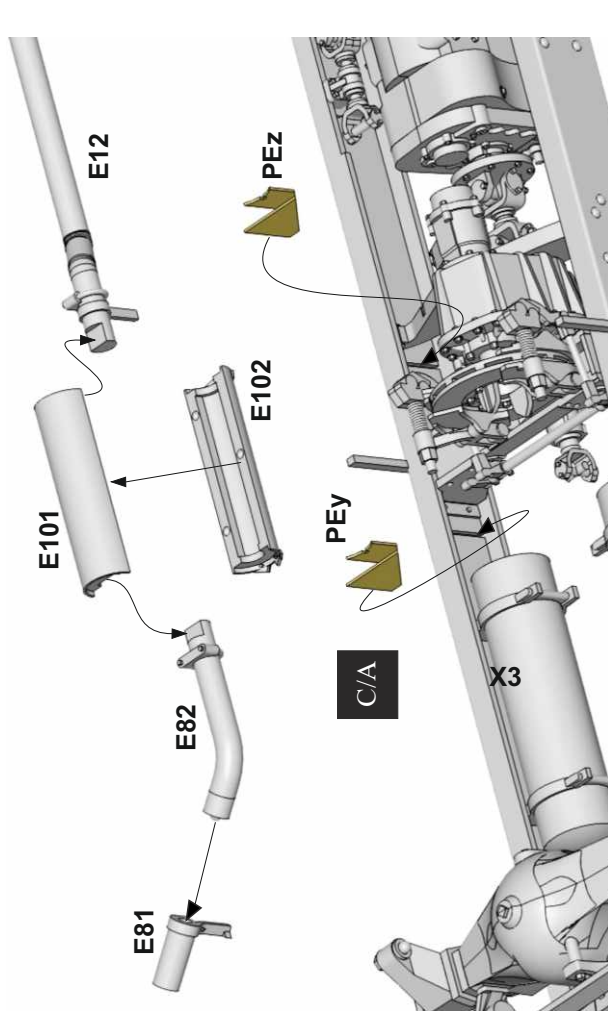
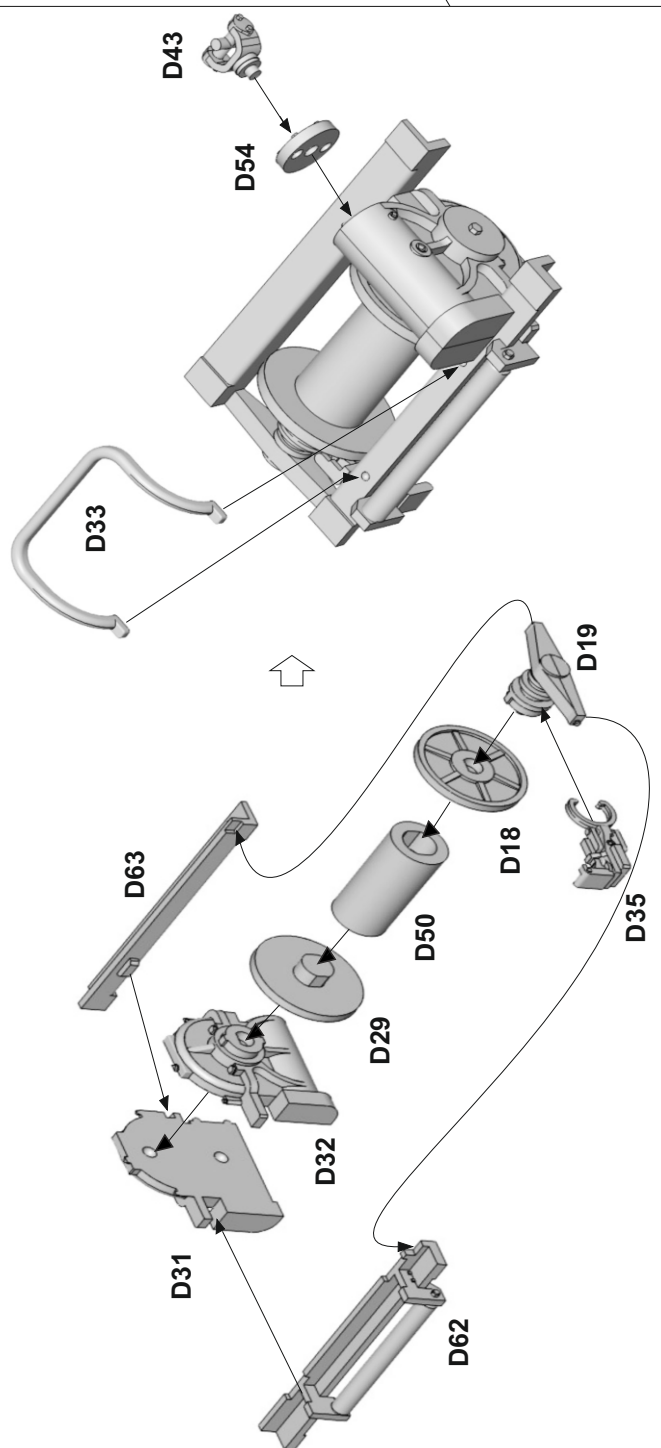


14

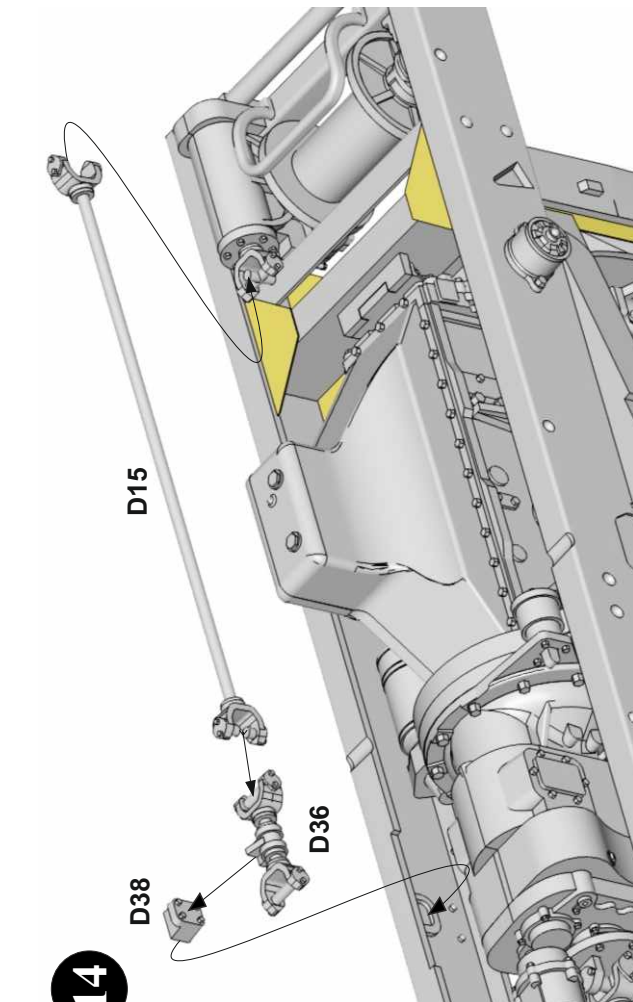


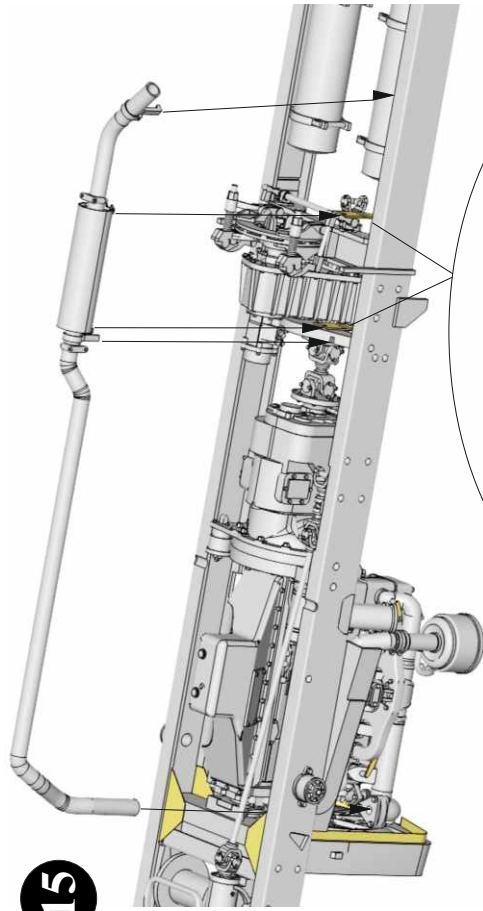


15

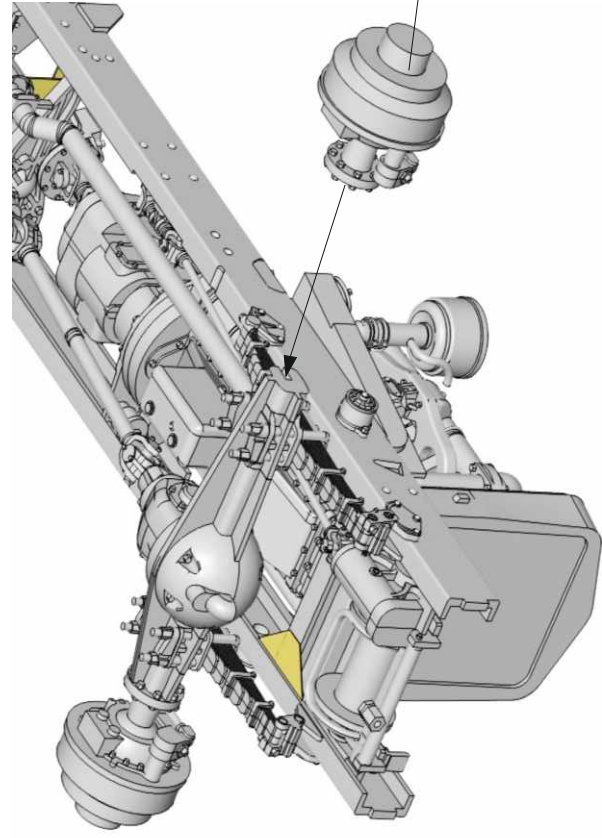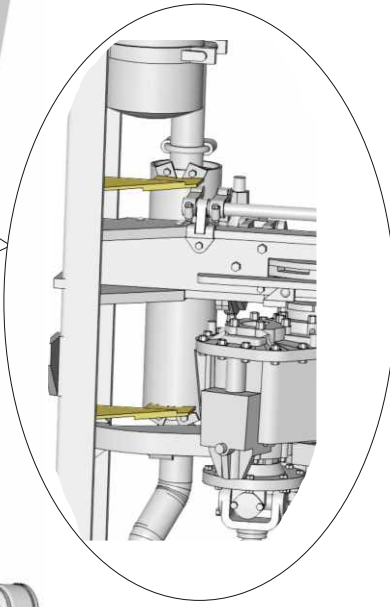


10

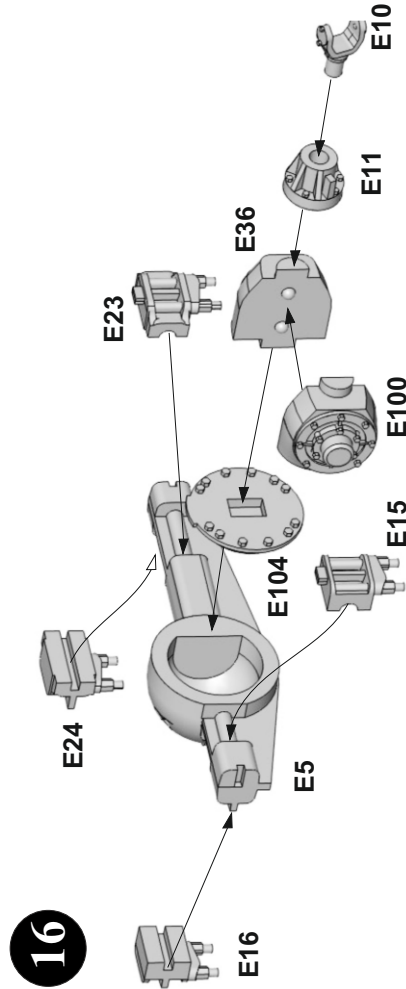






16




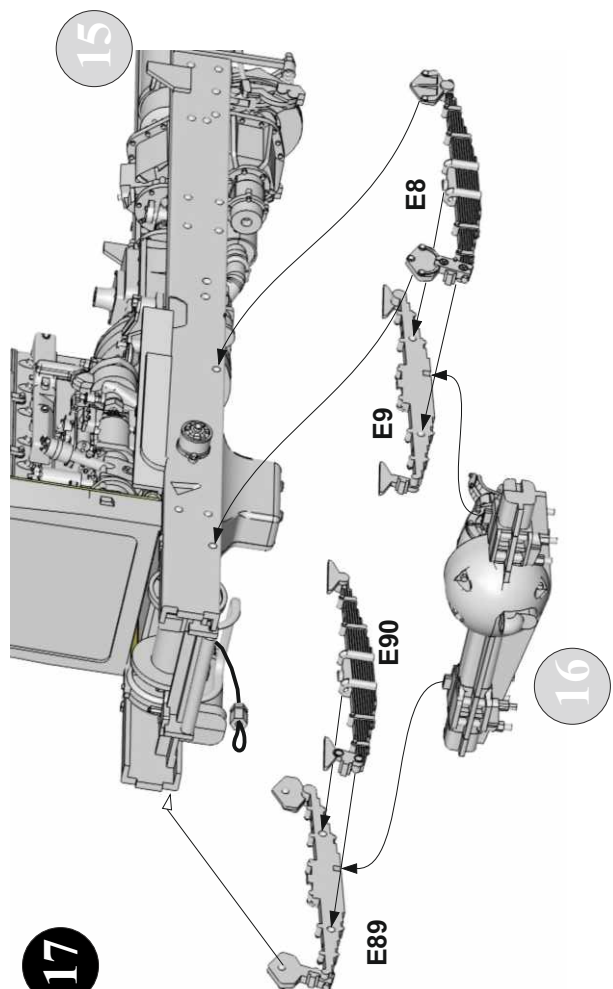


17




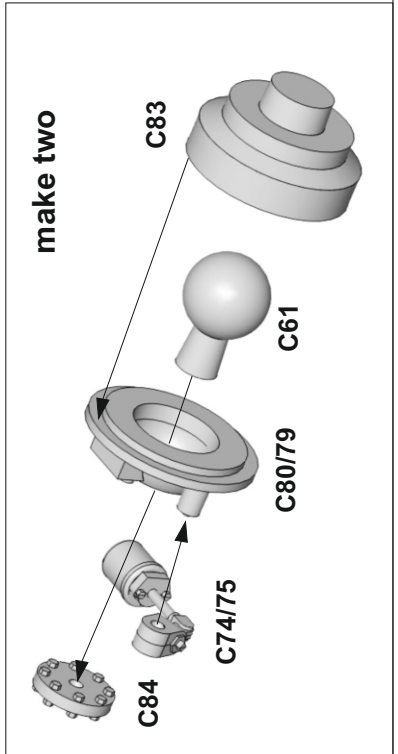


make two

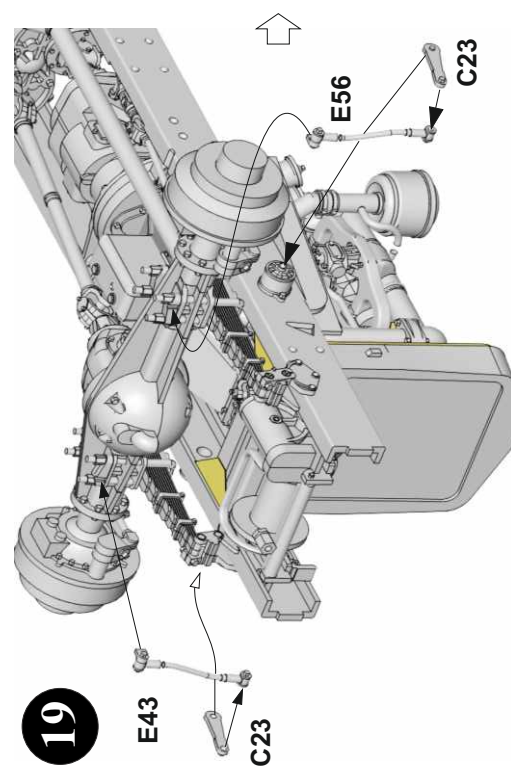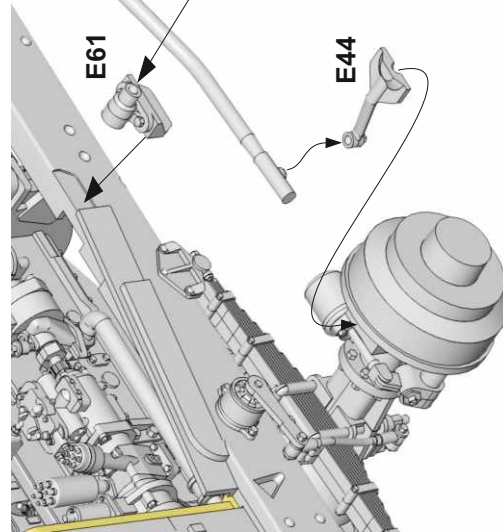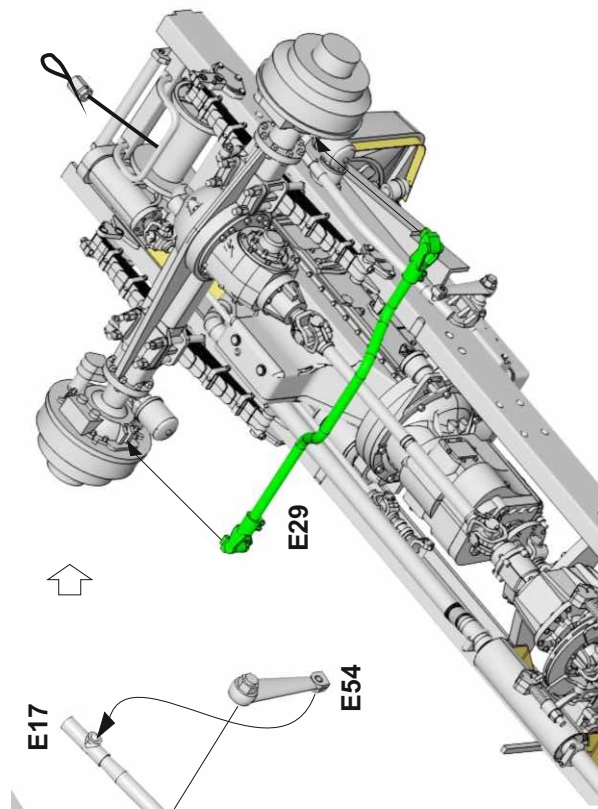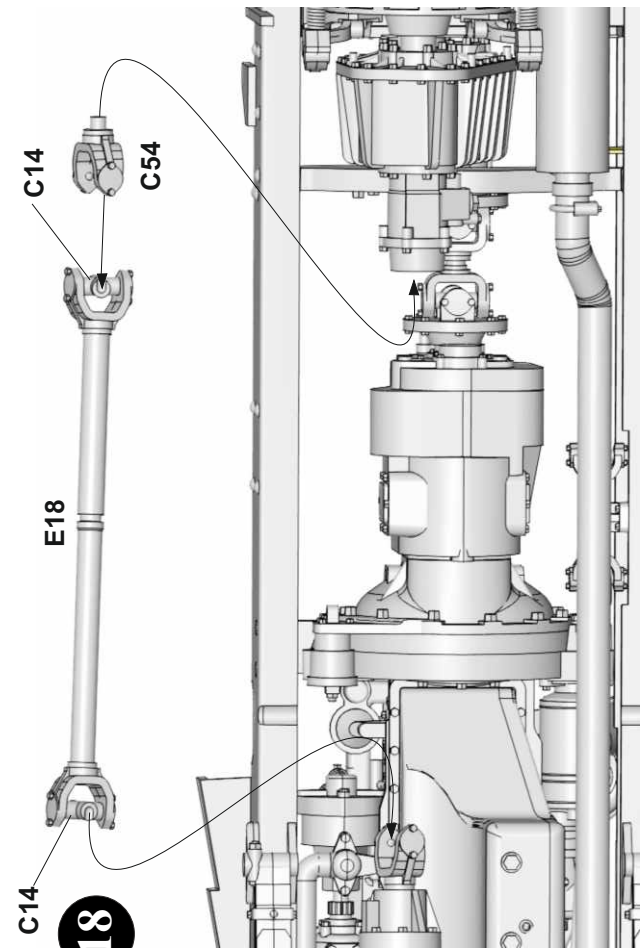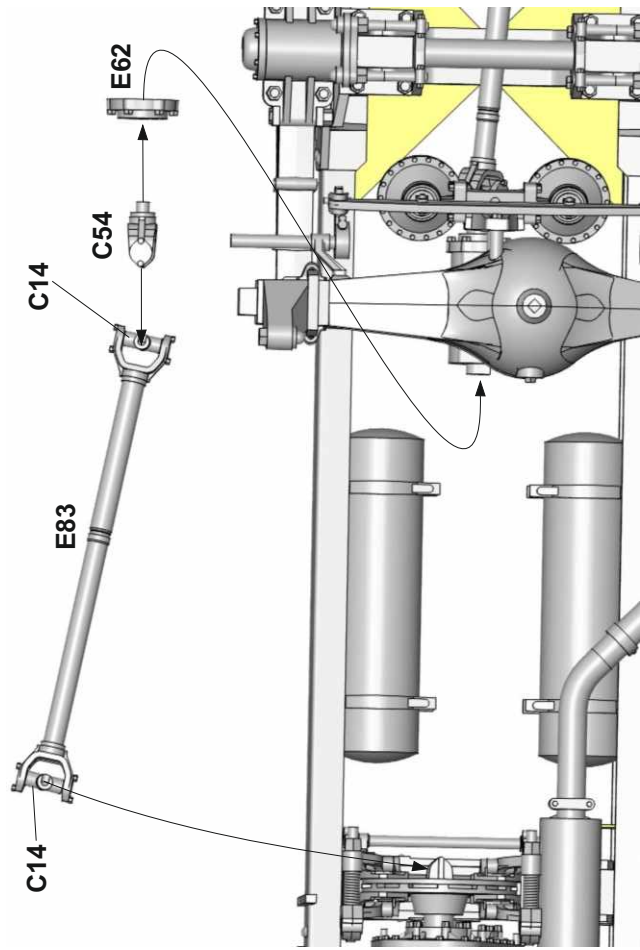

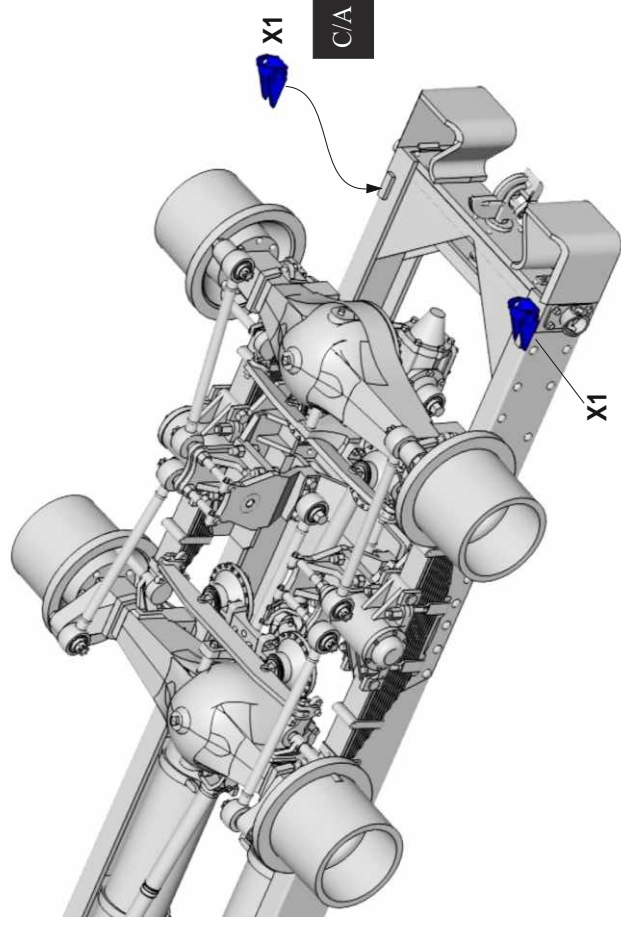
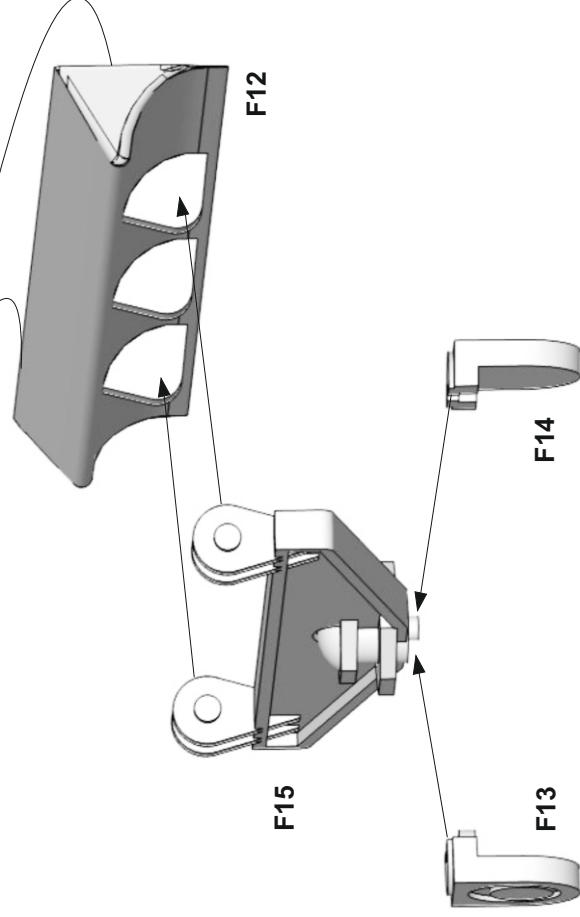
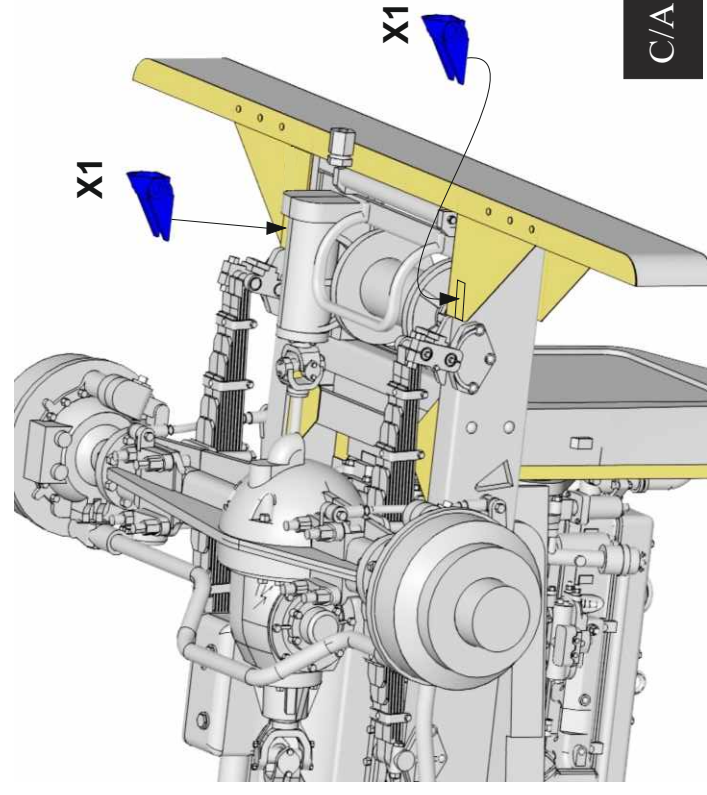
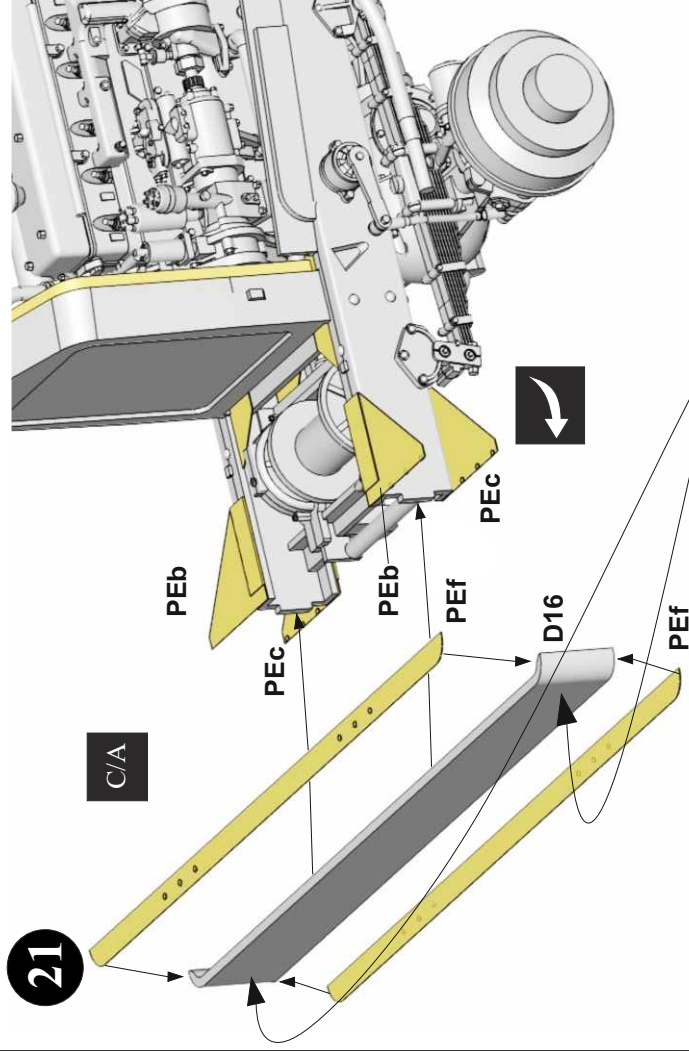


make two

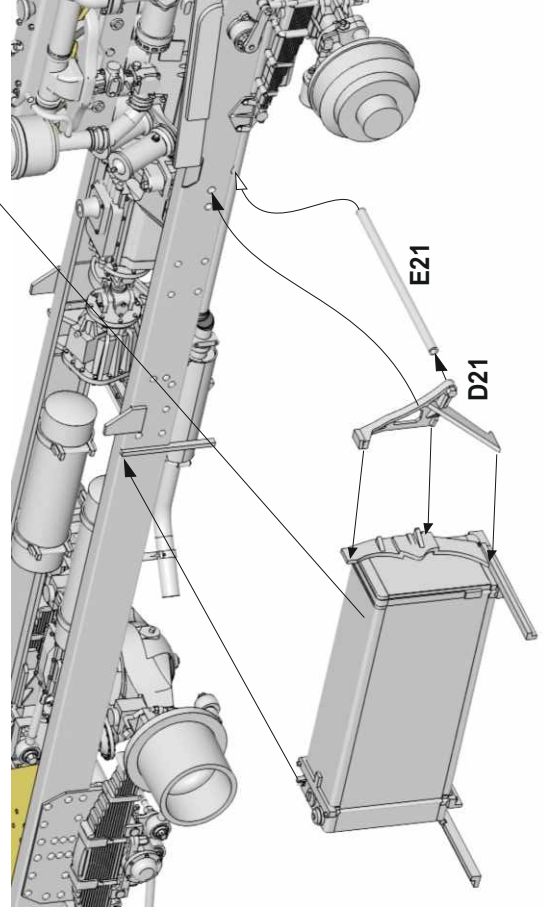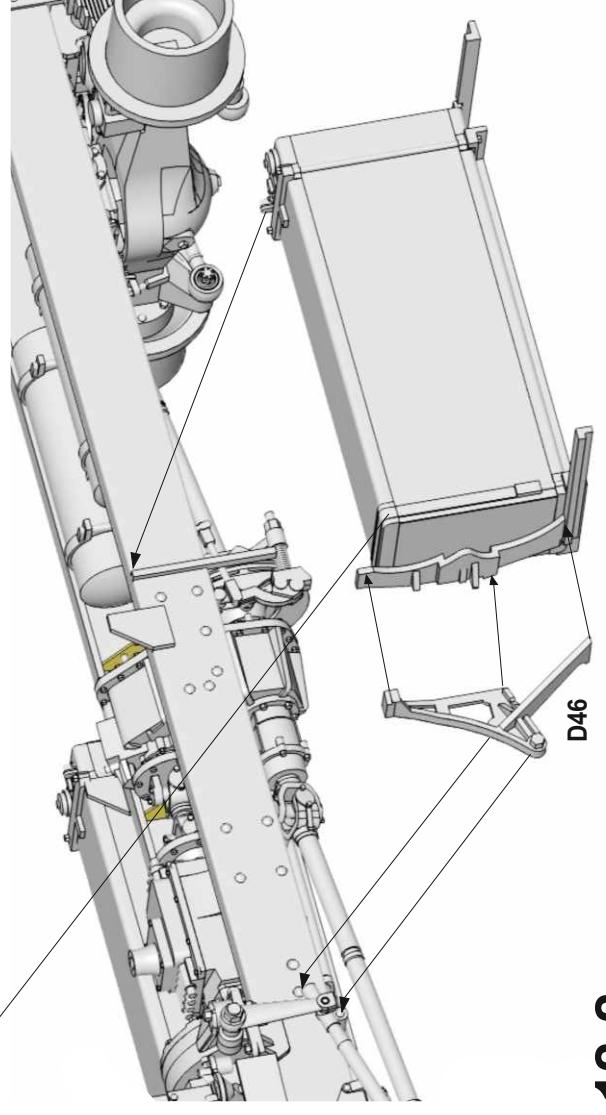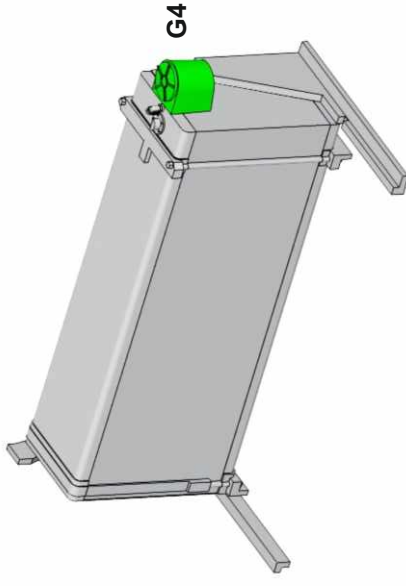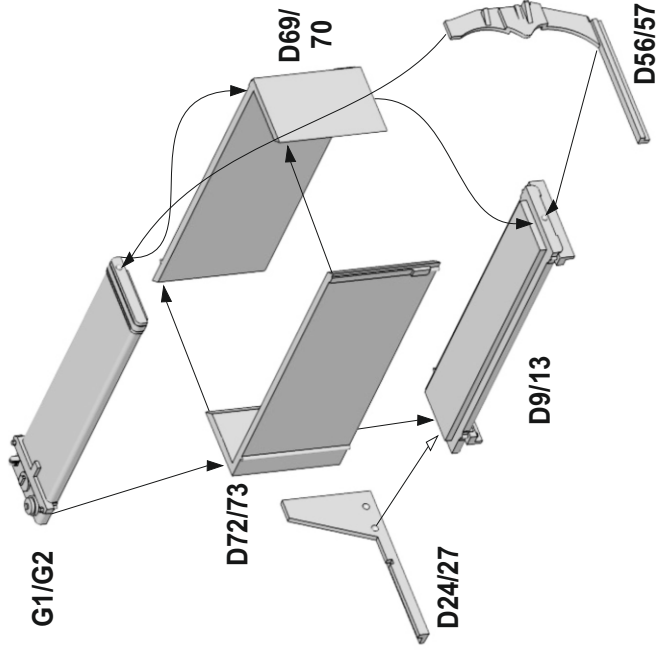


12-2



23

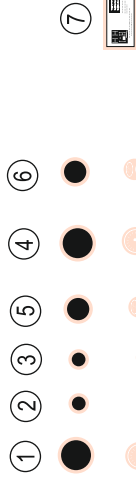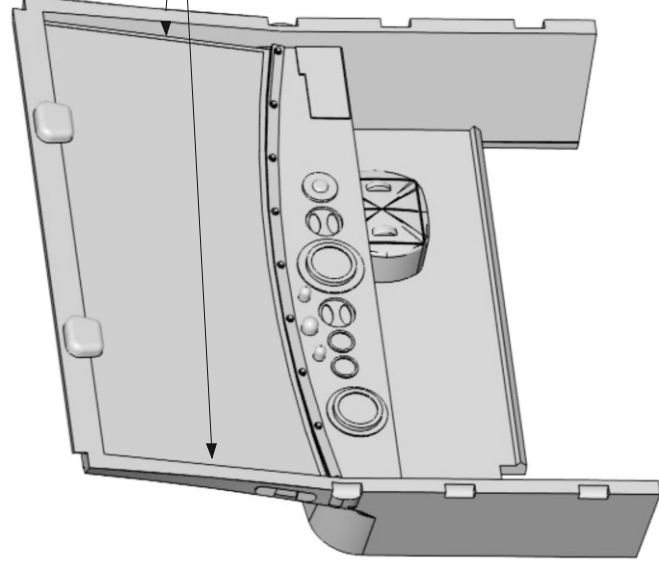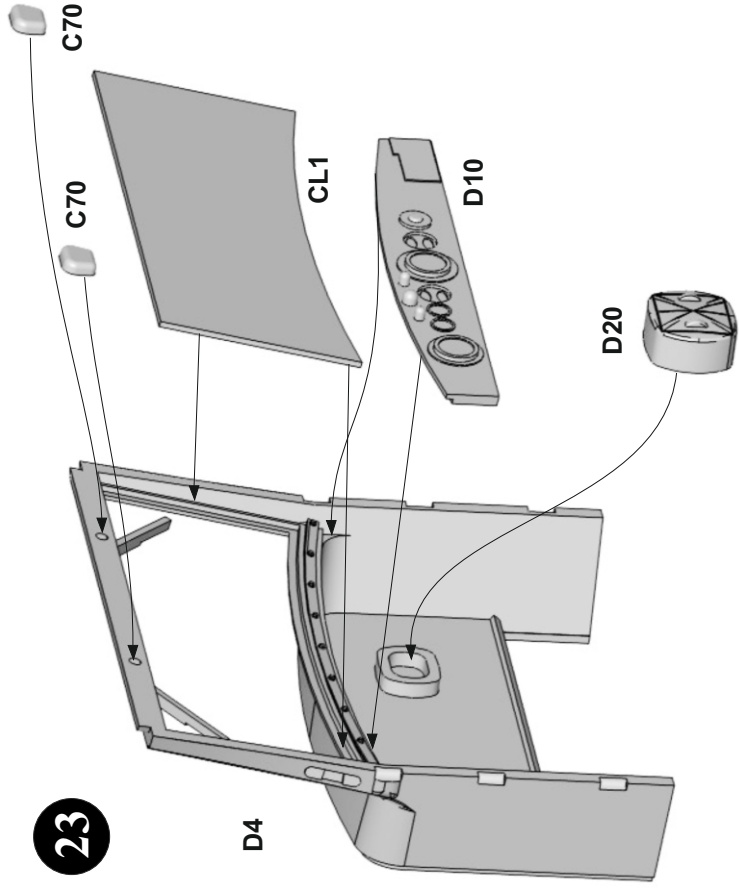





XX




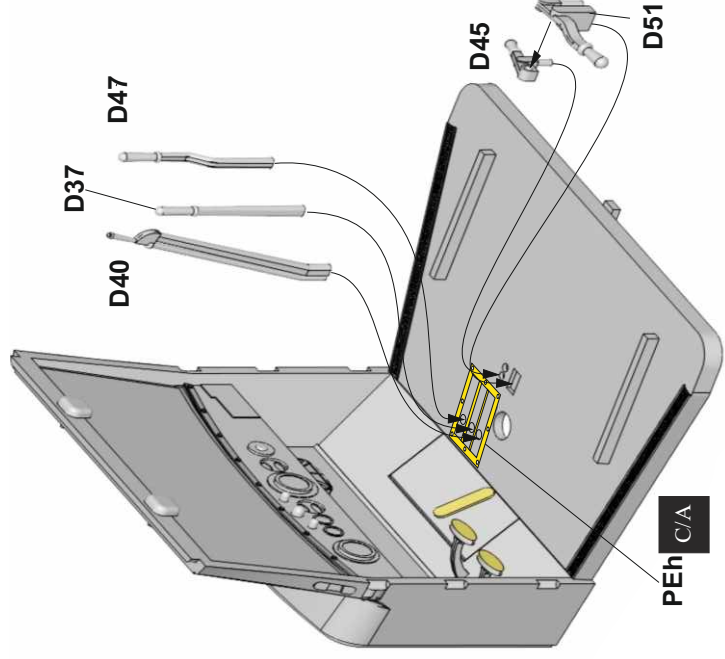







13



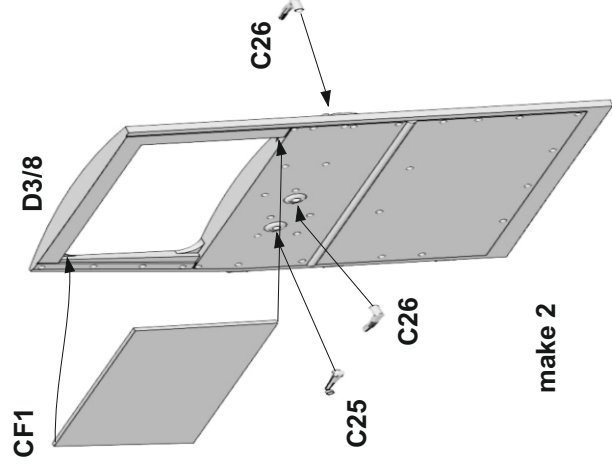
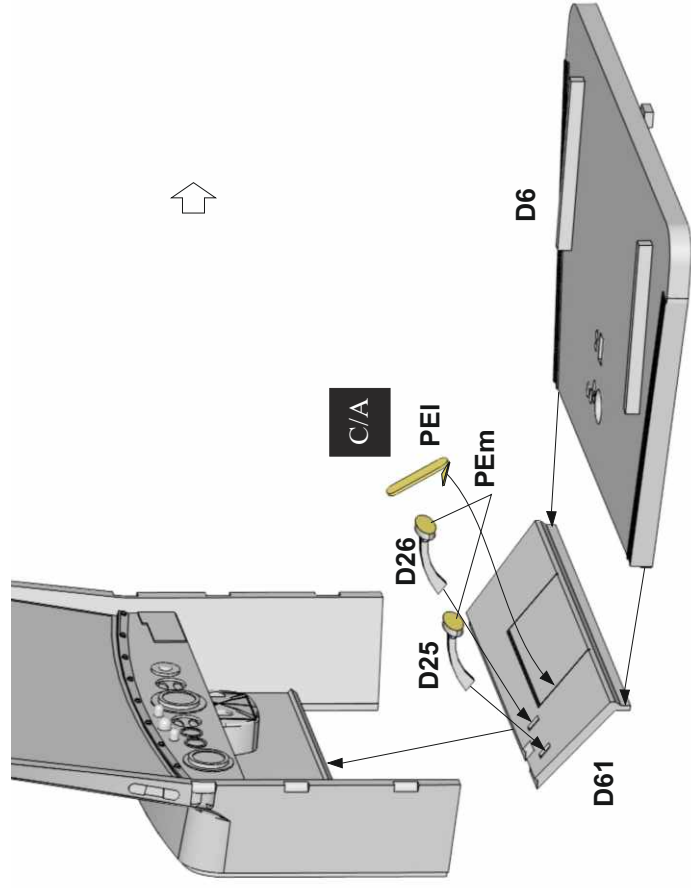


make 2

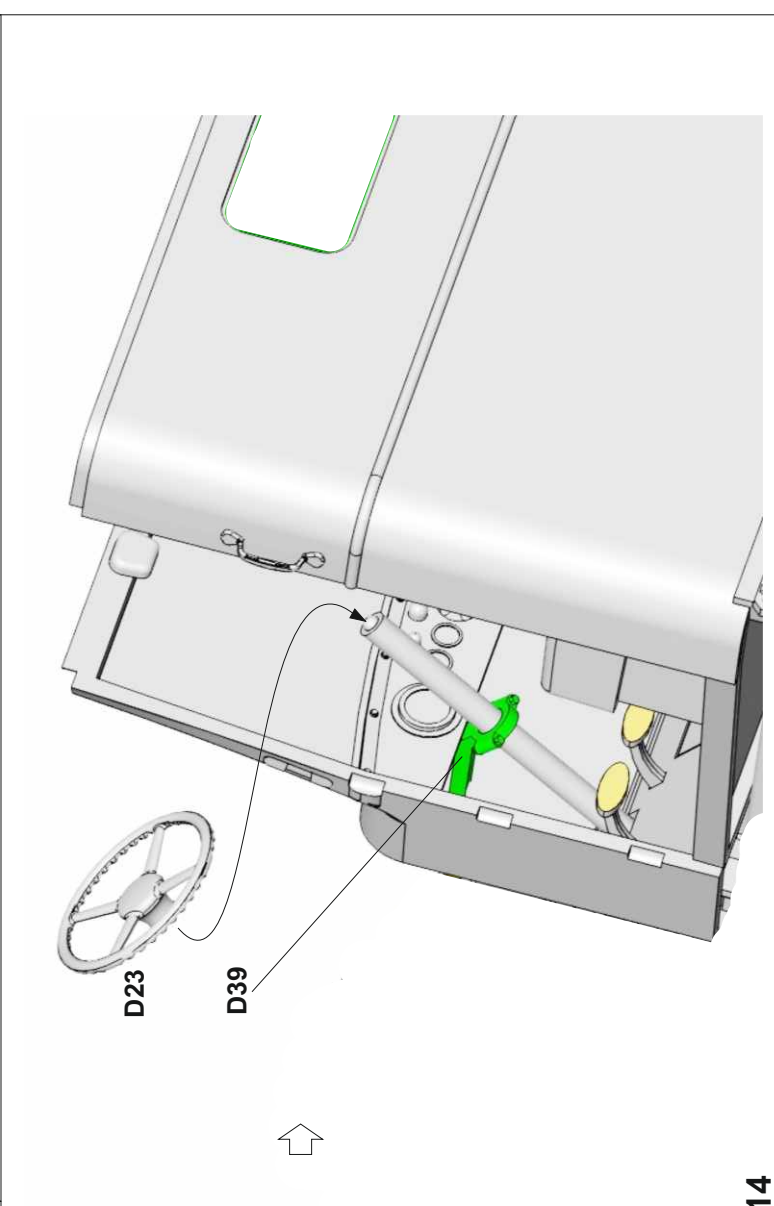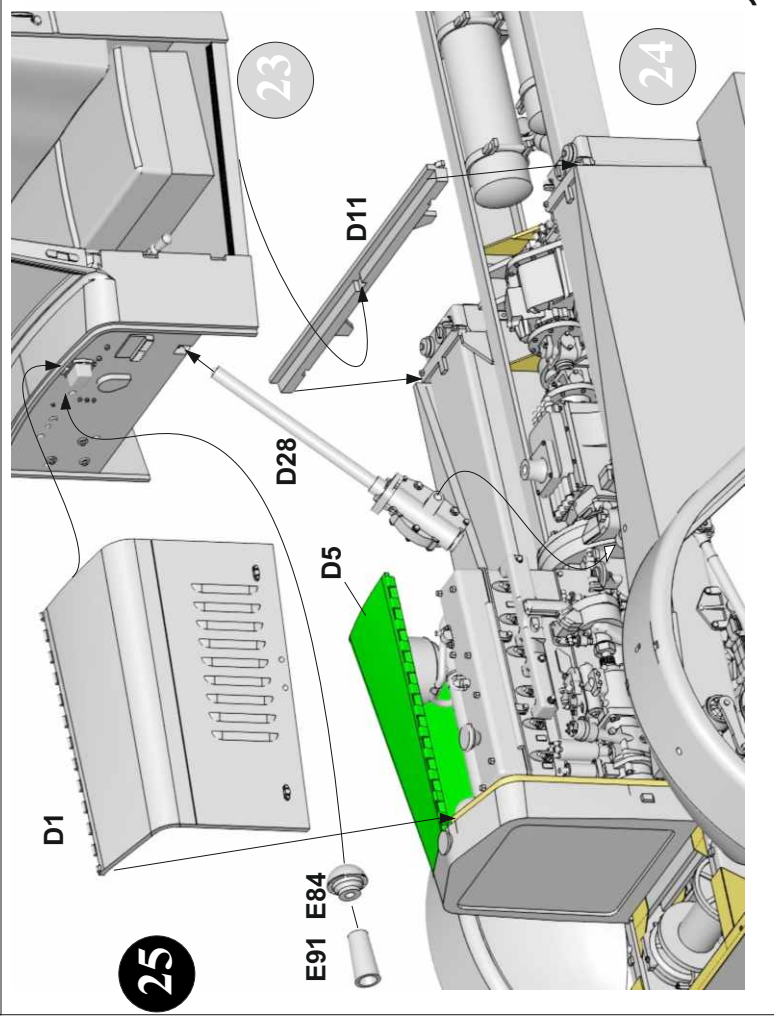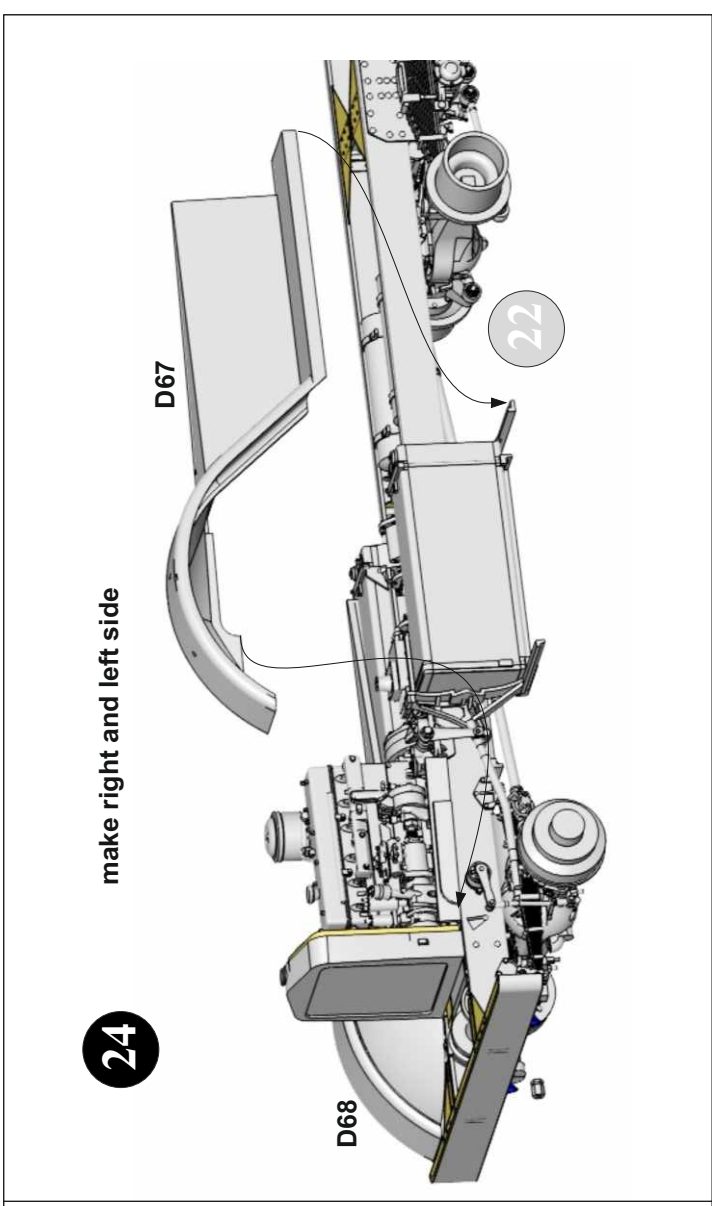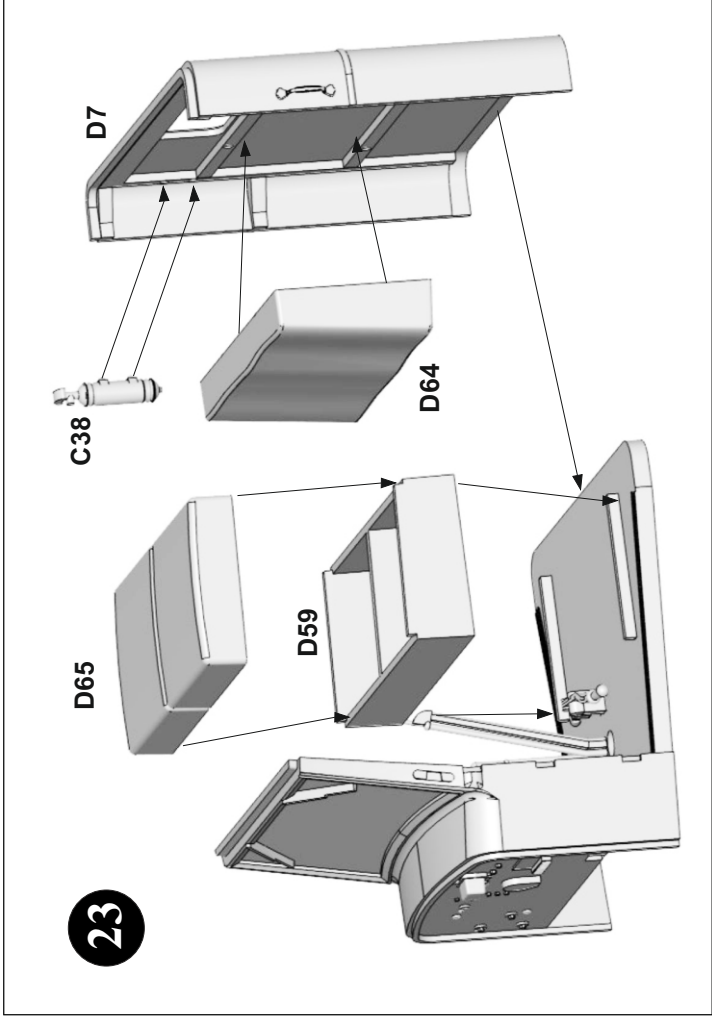

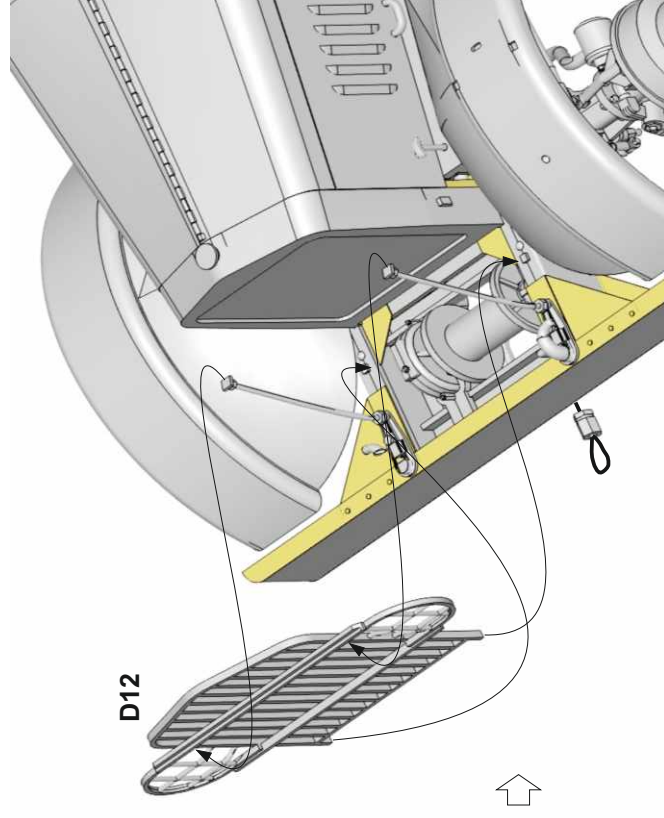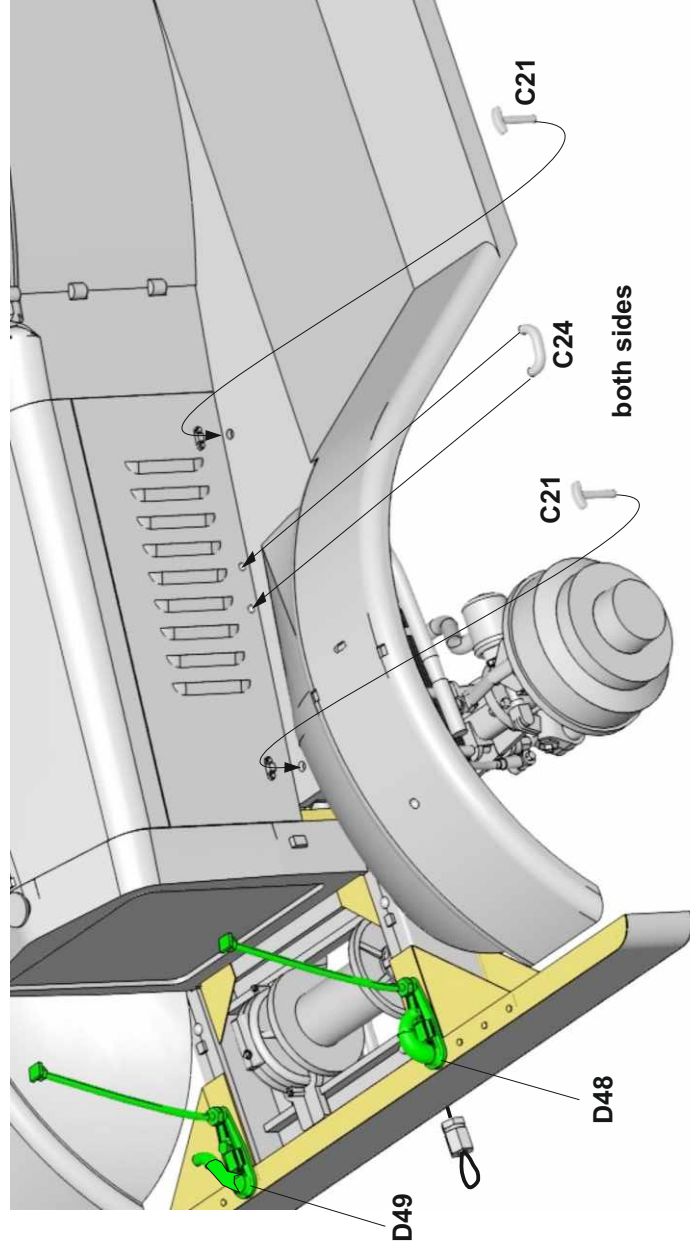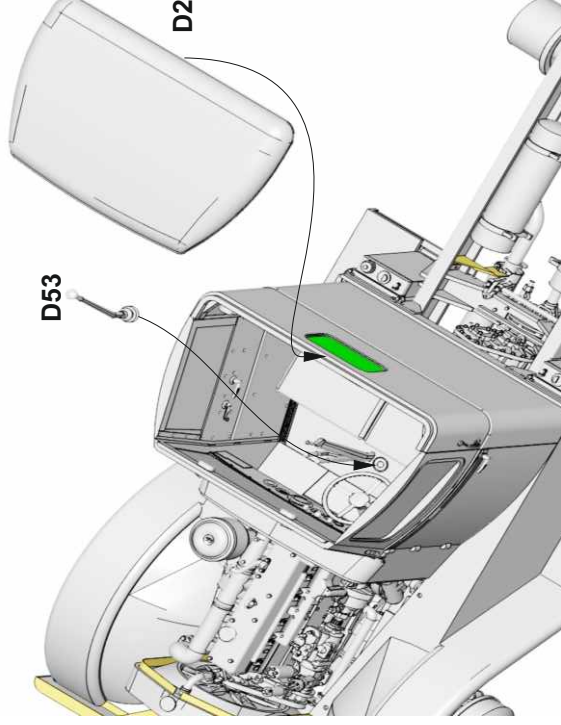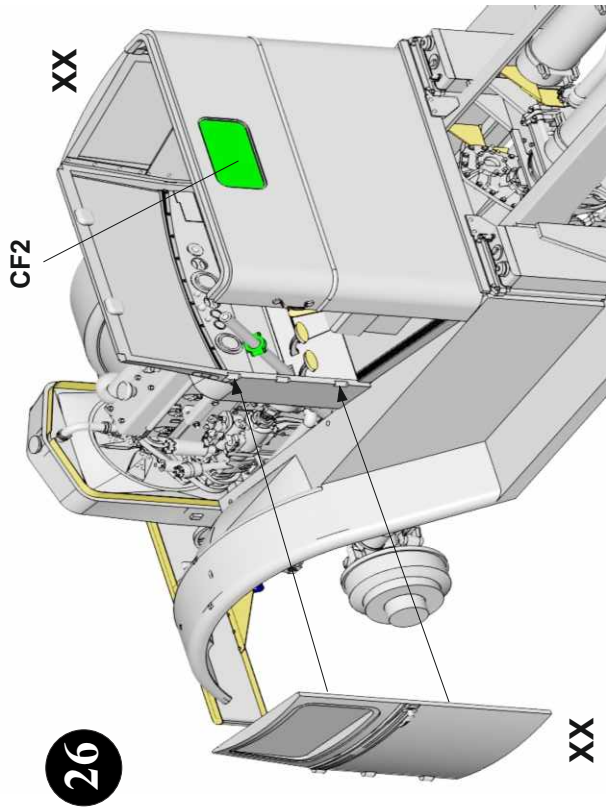

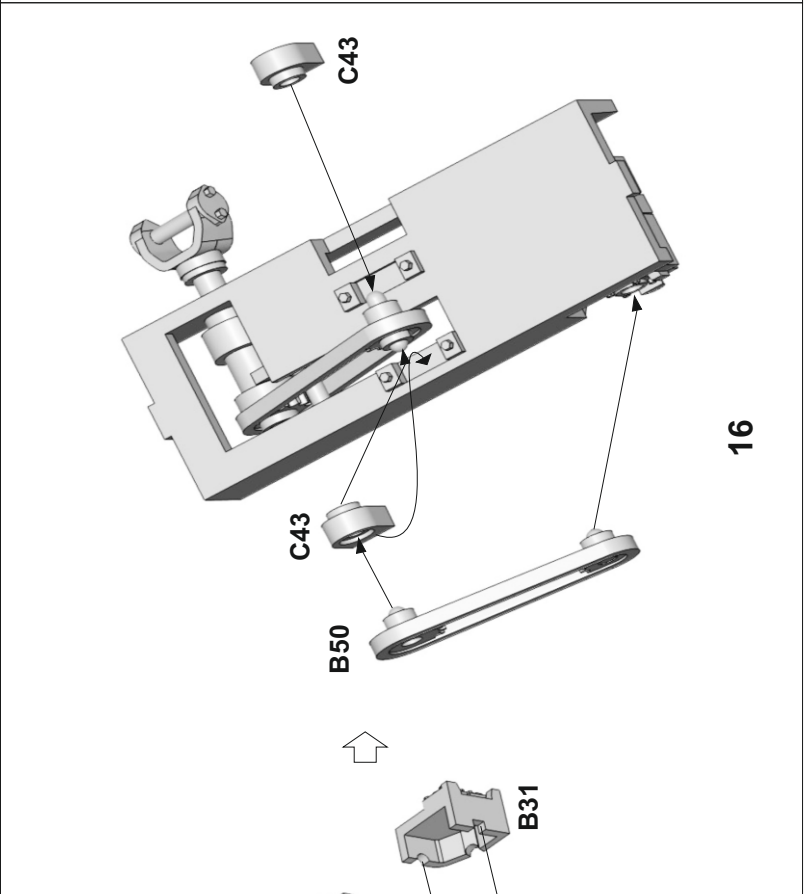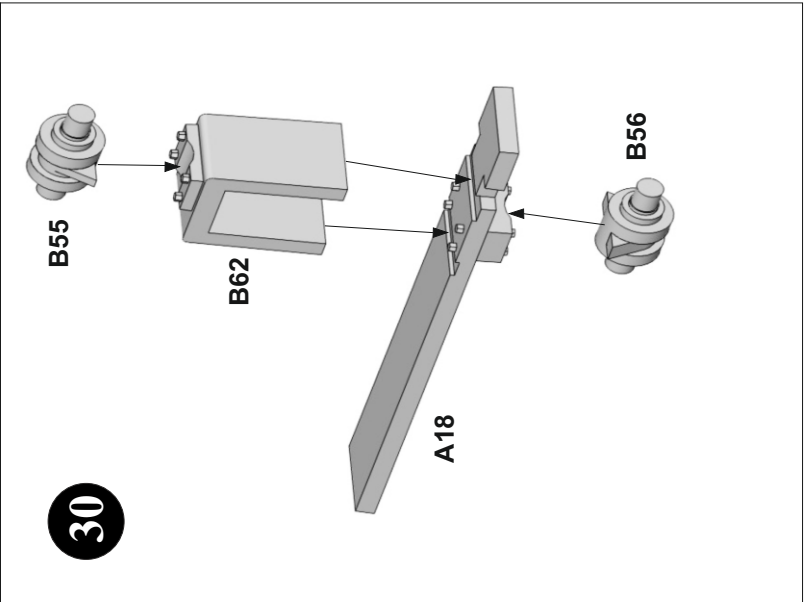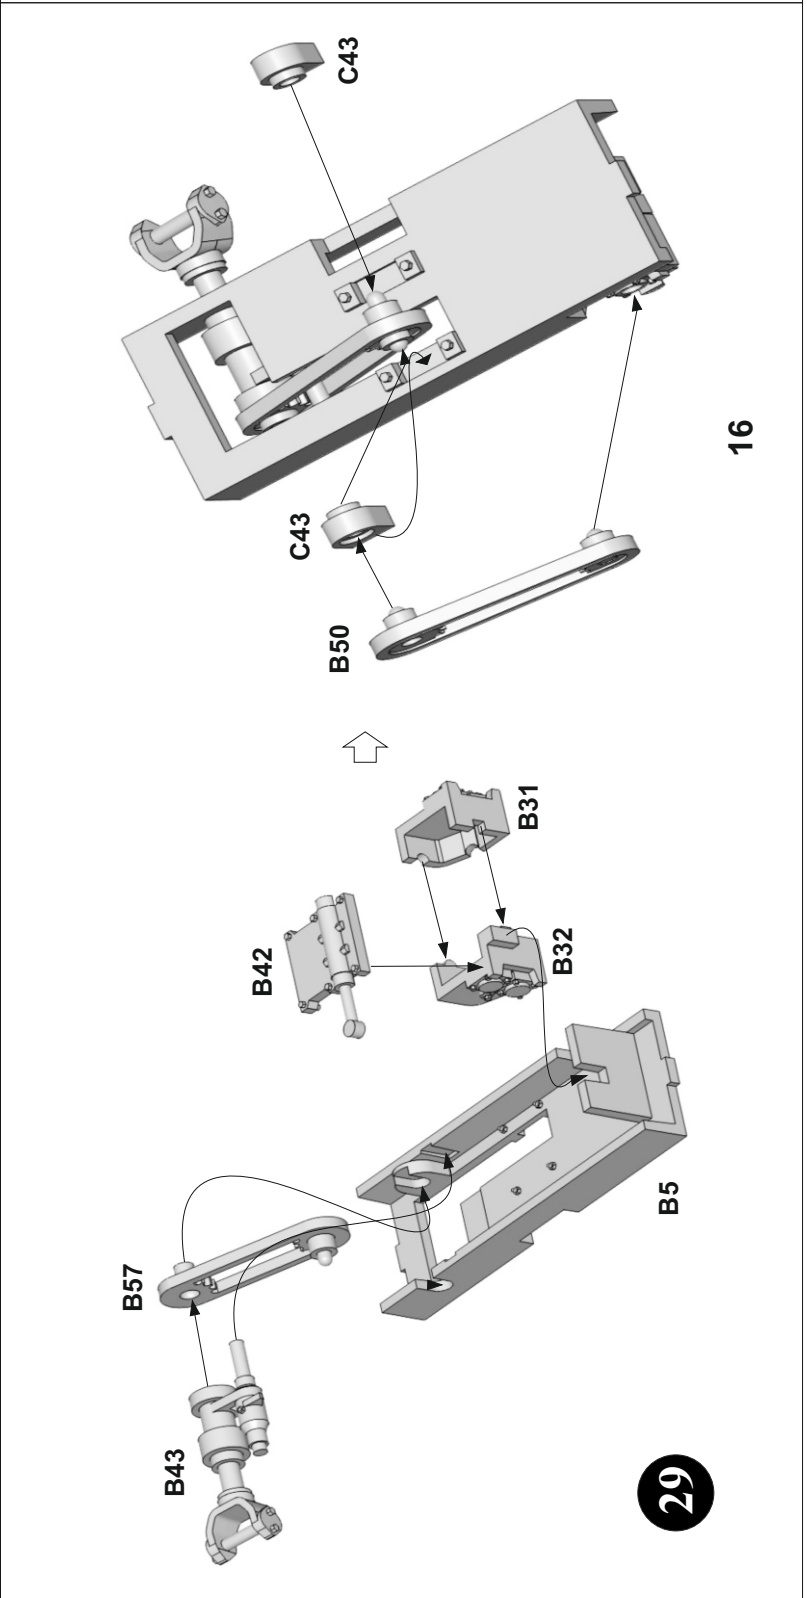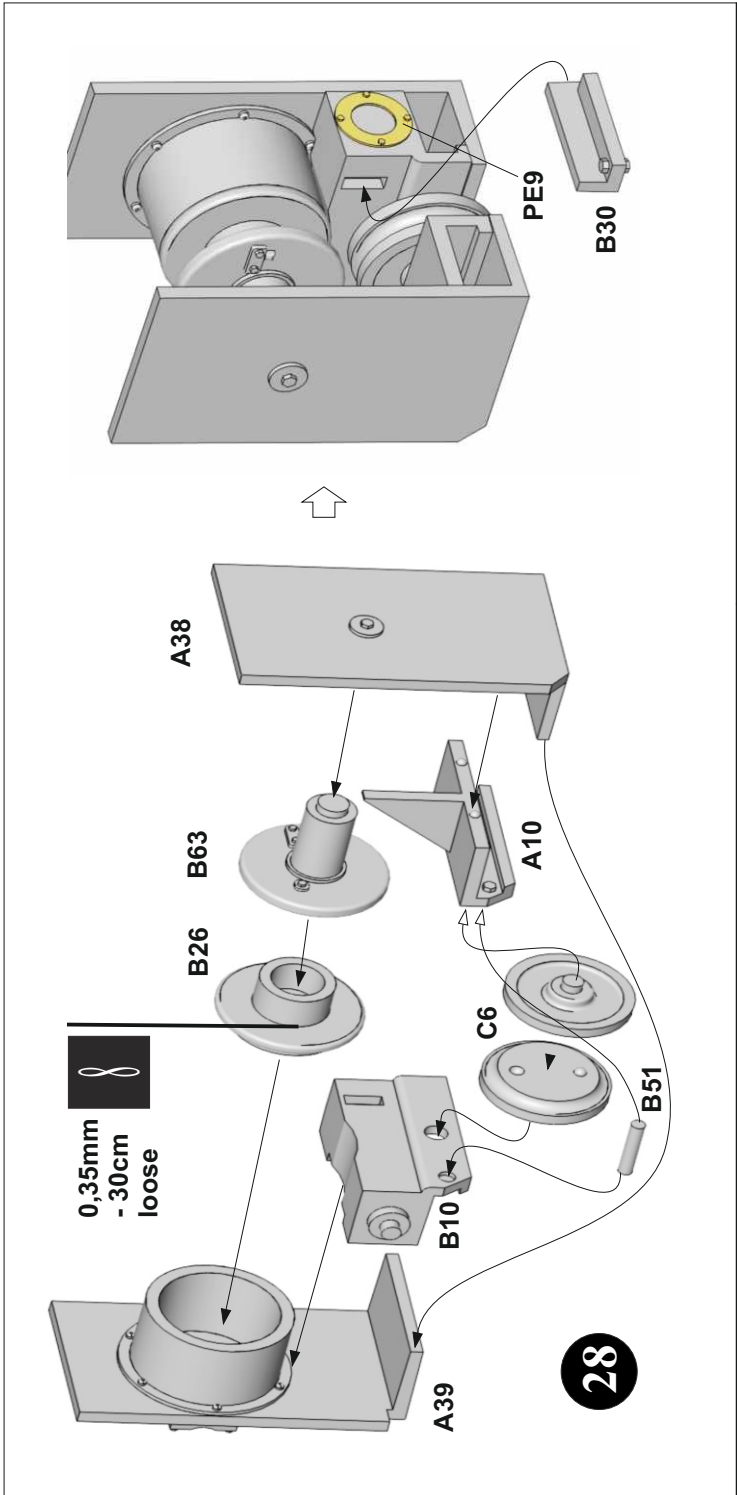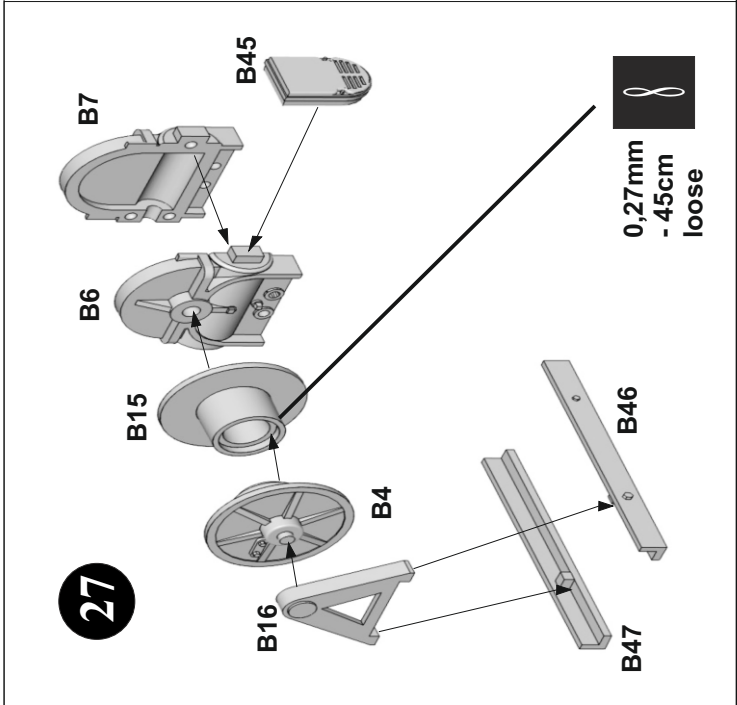

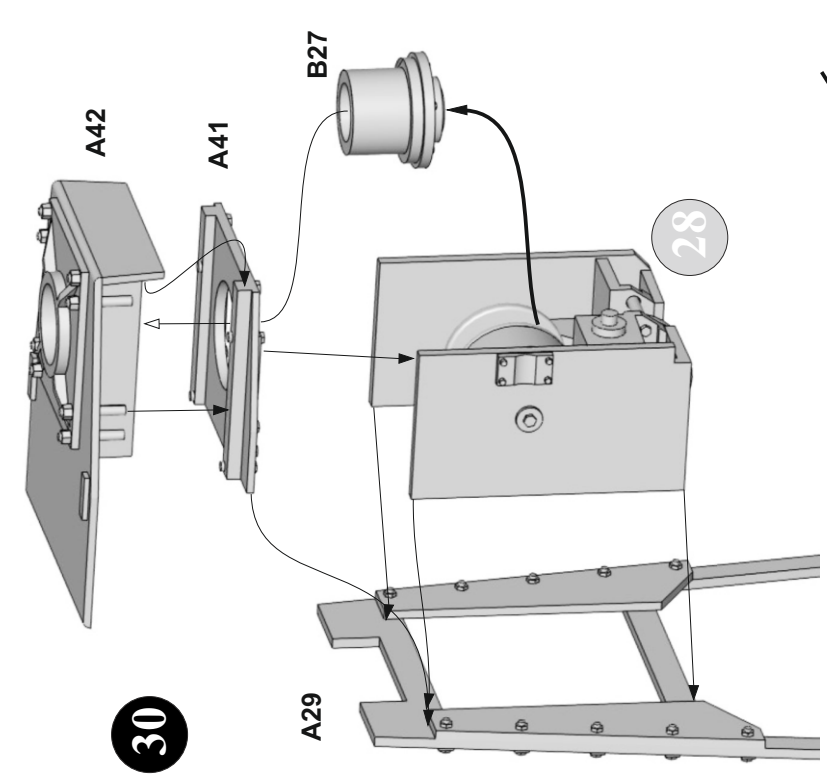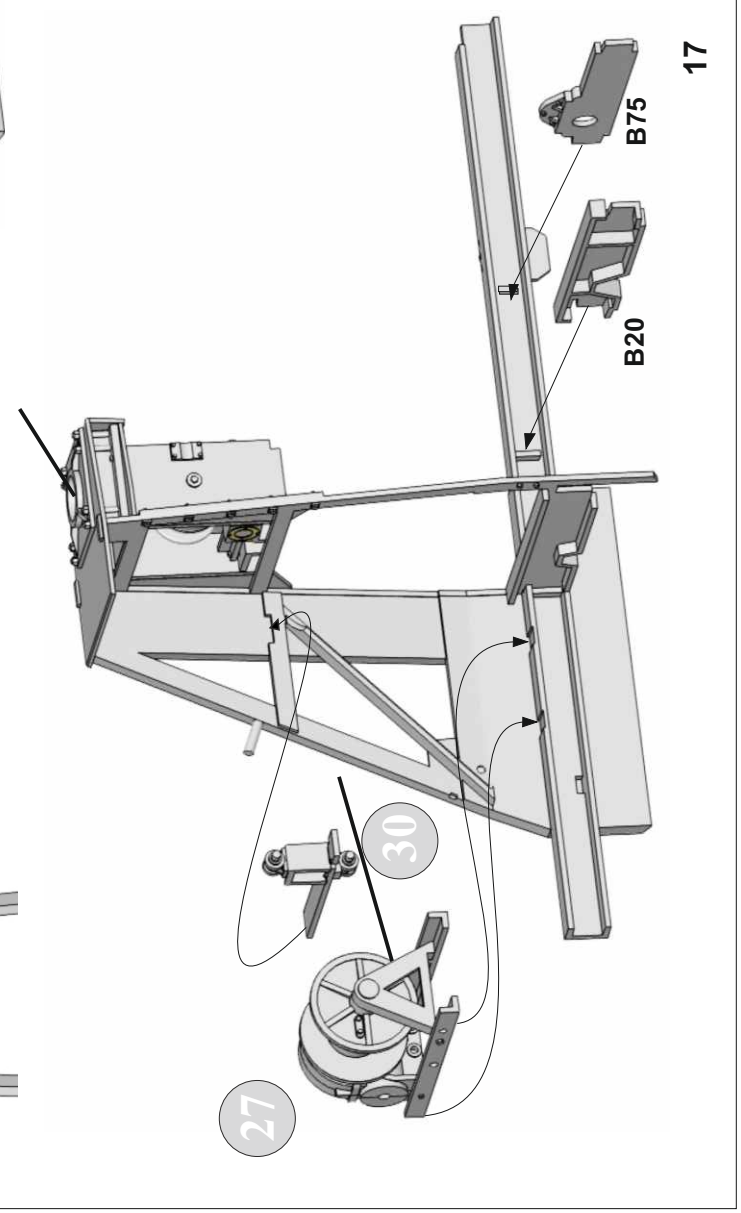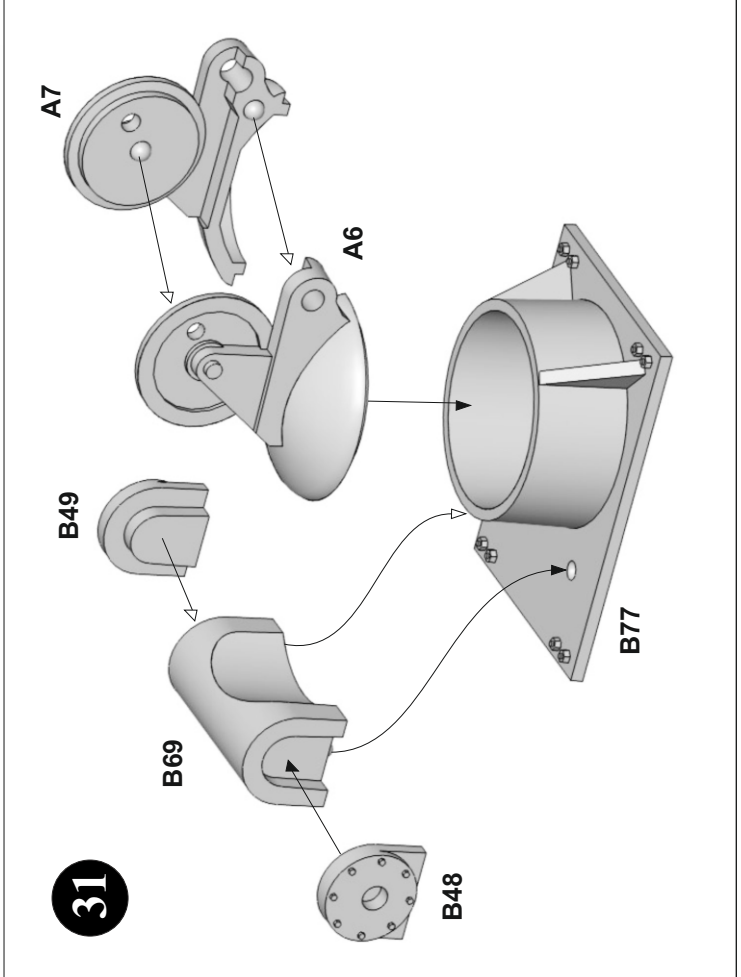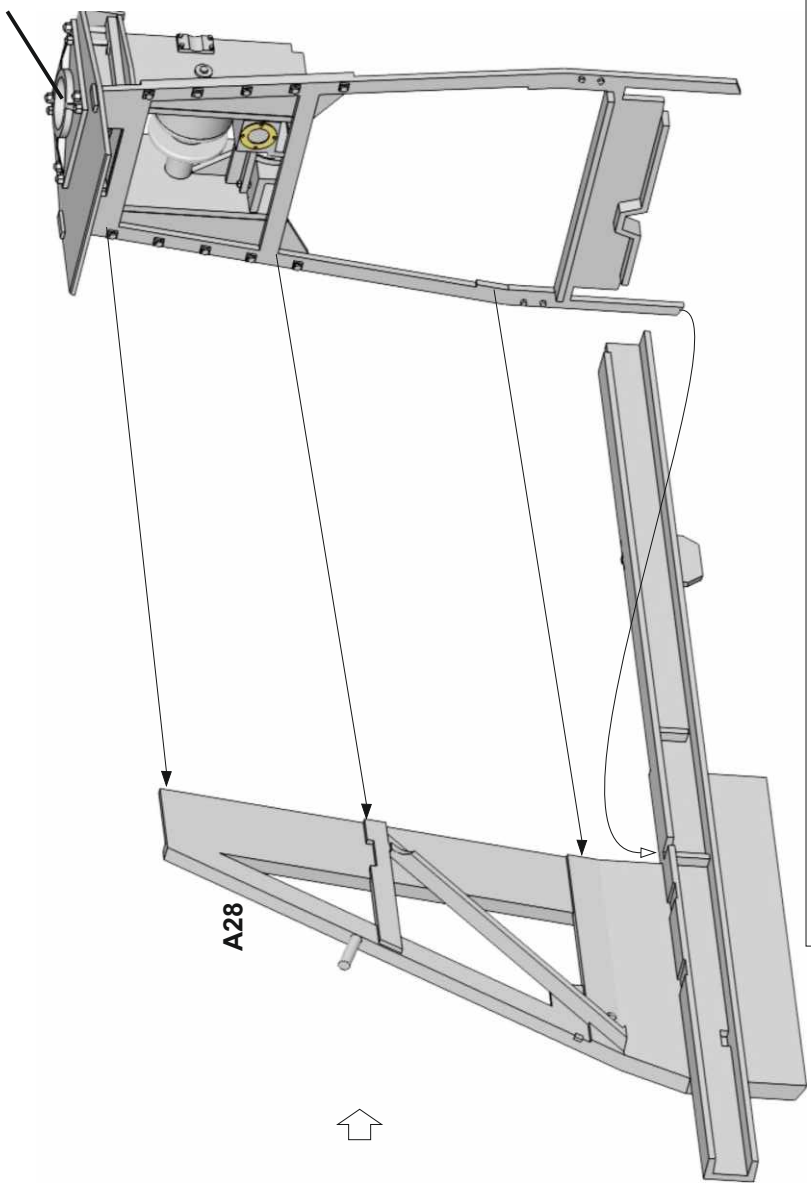


31

30





28

27

17




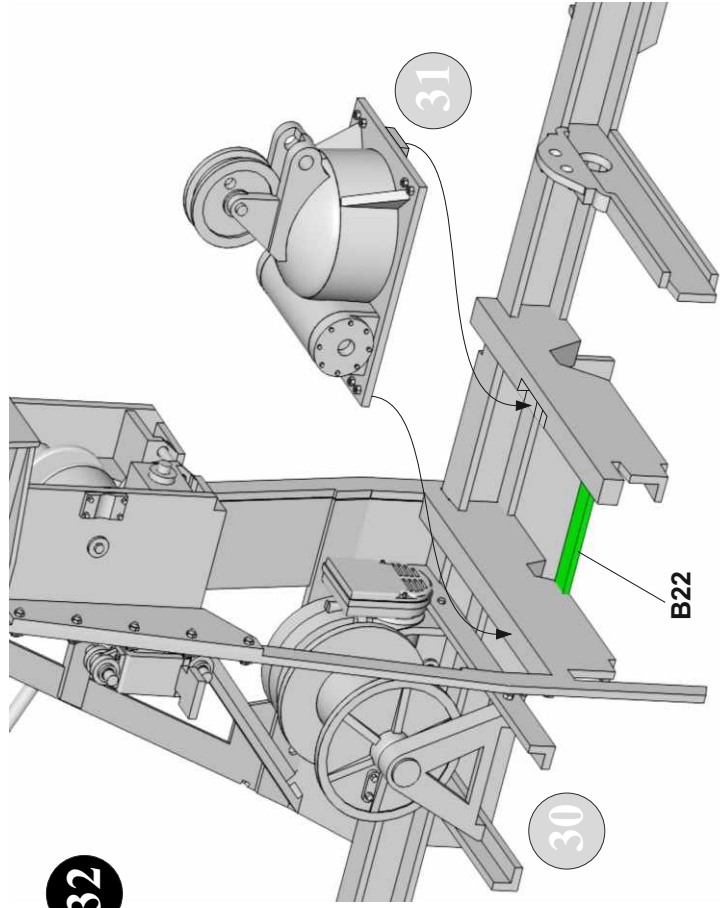


32

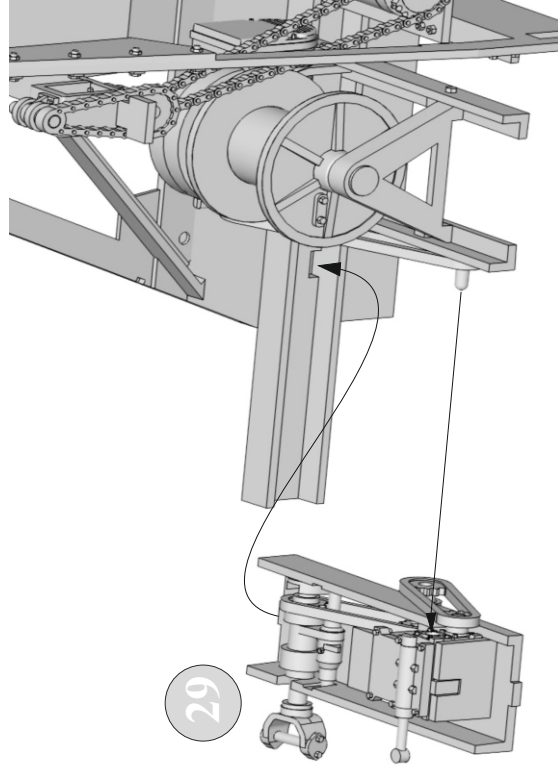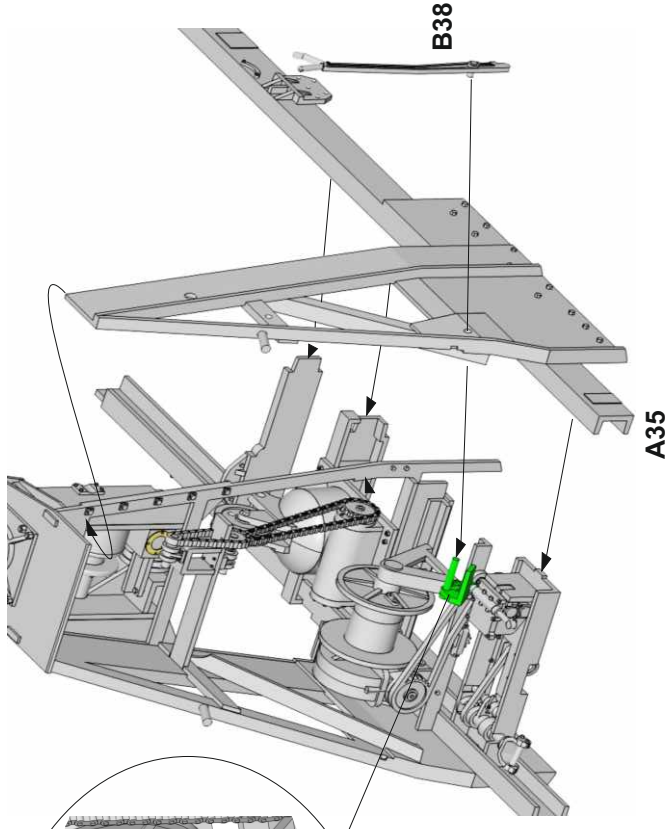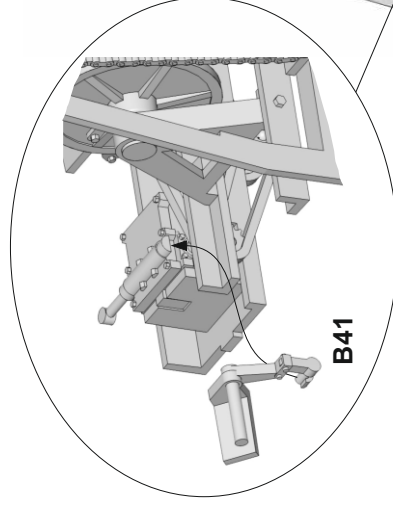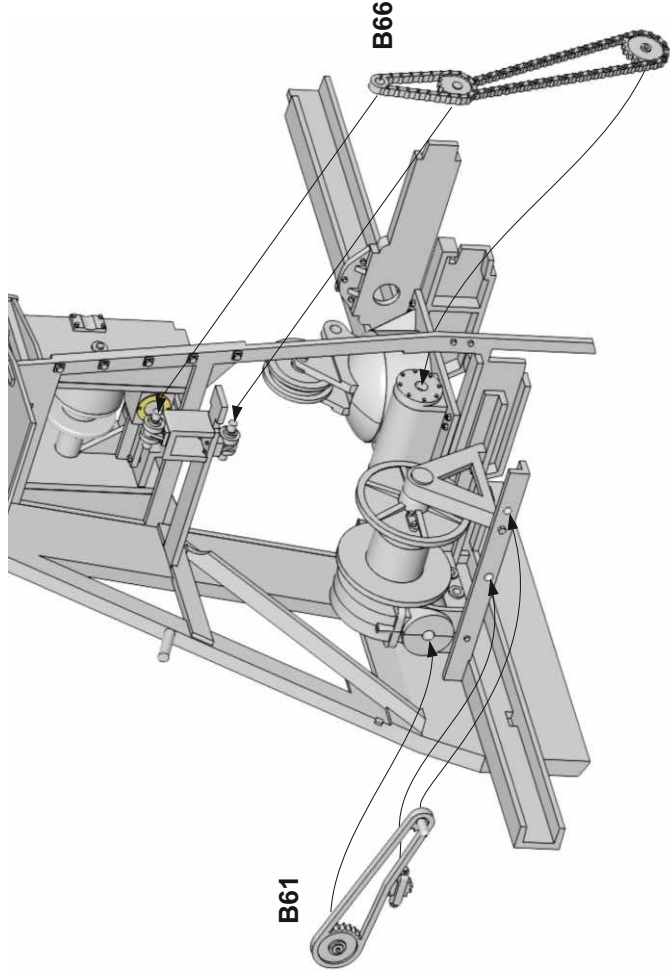






29





33

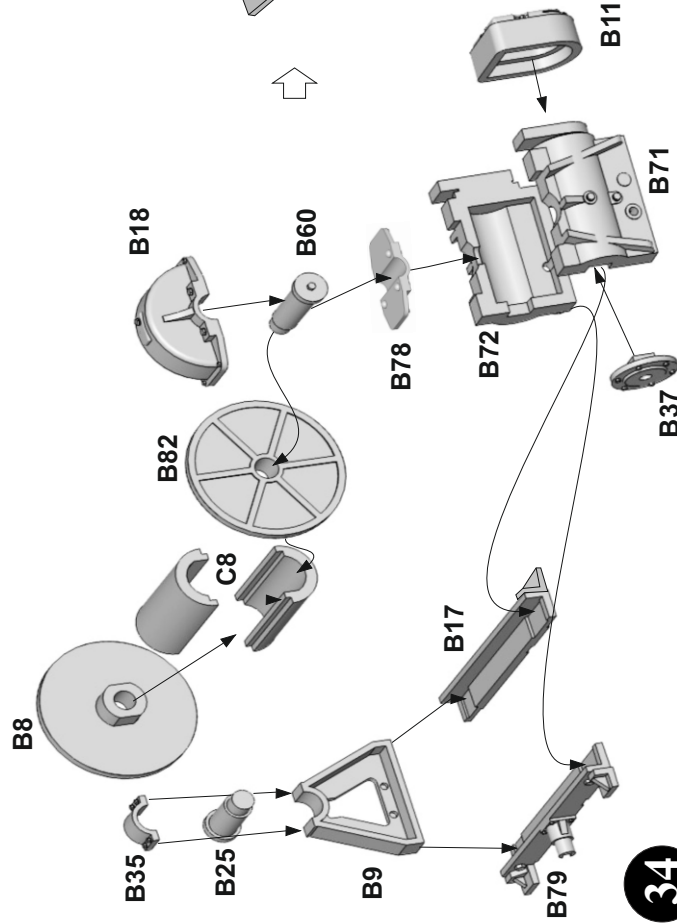
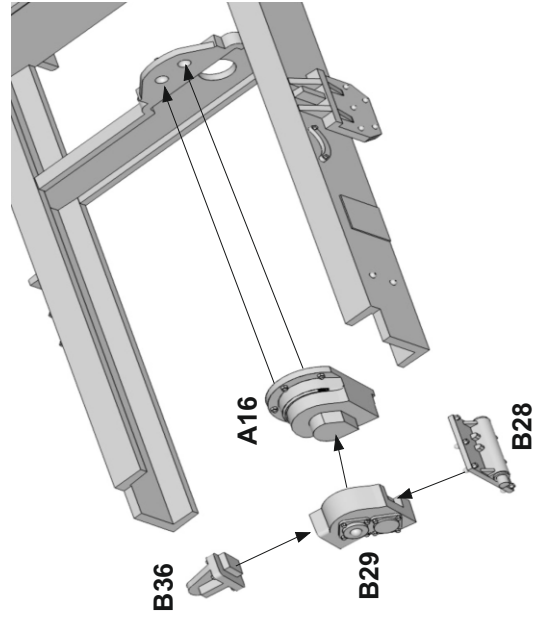
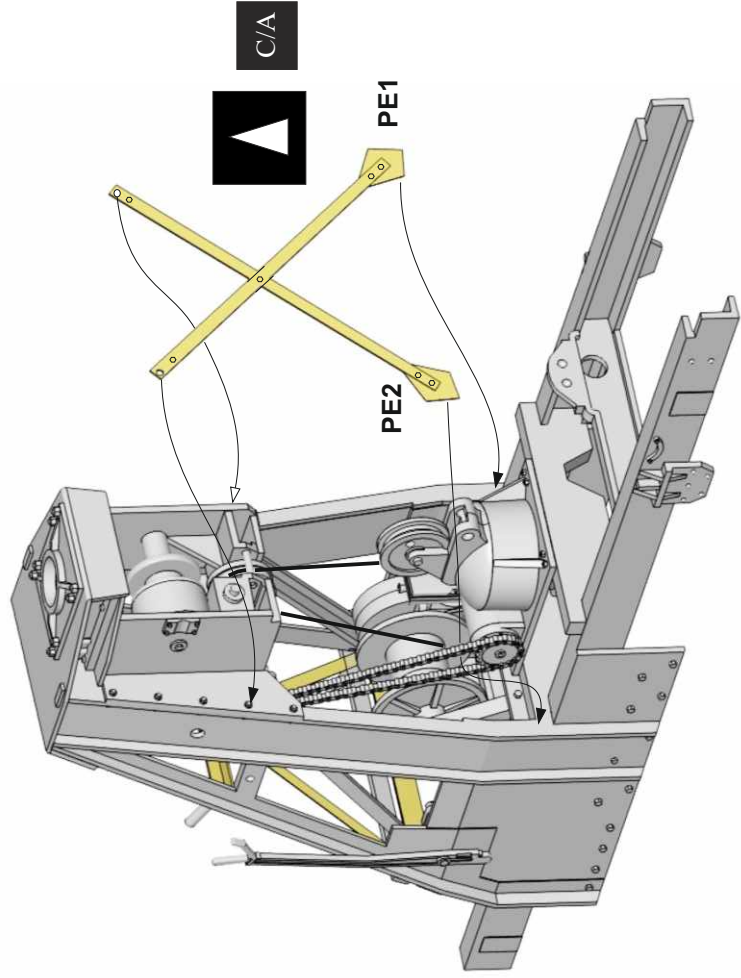
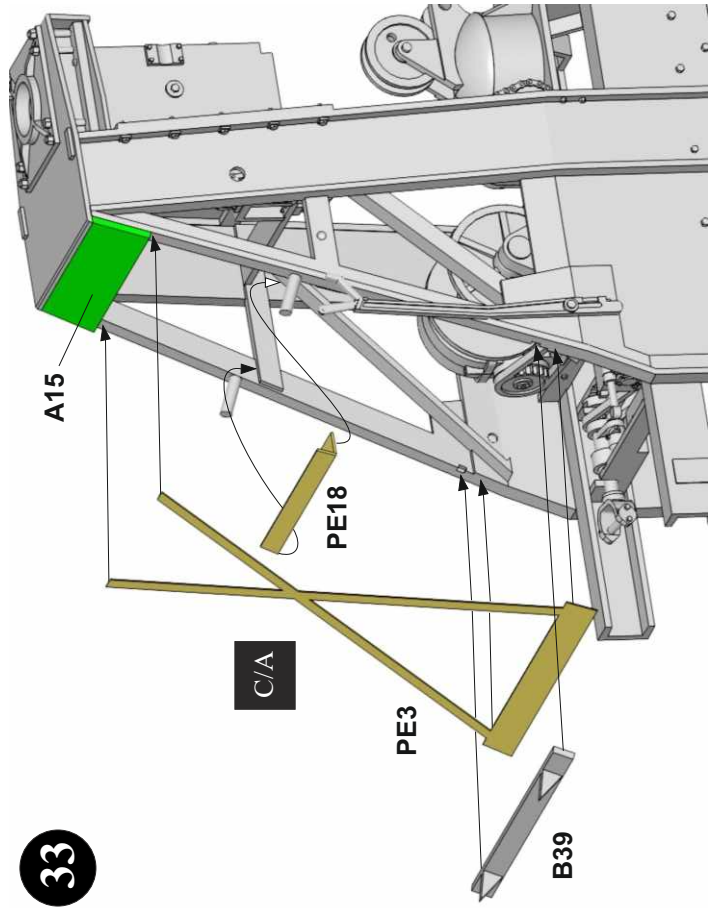






34





19

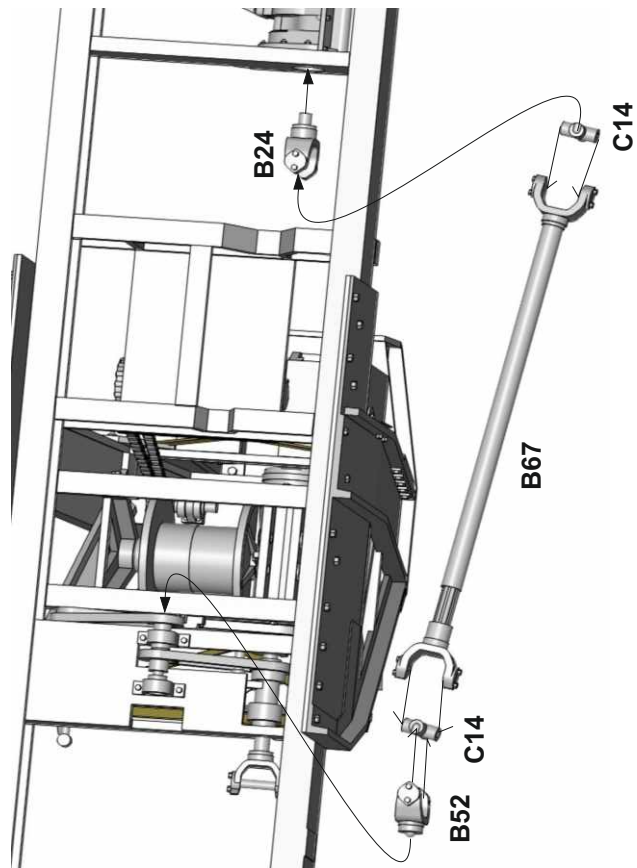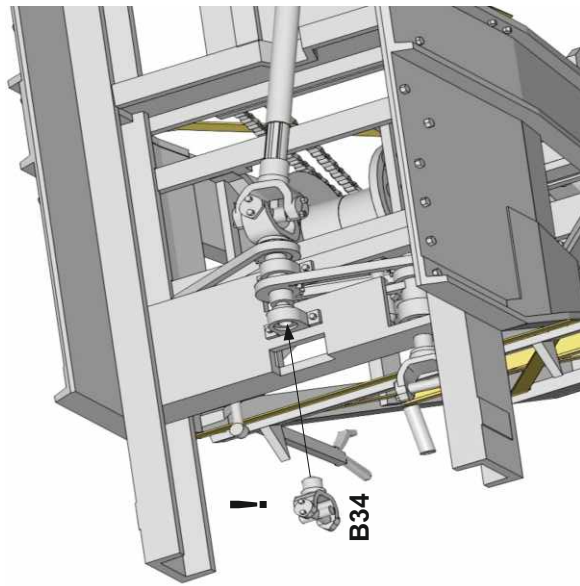
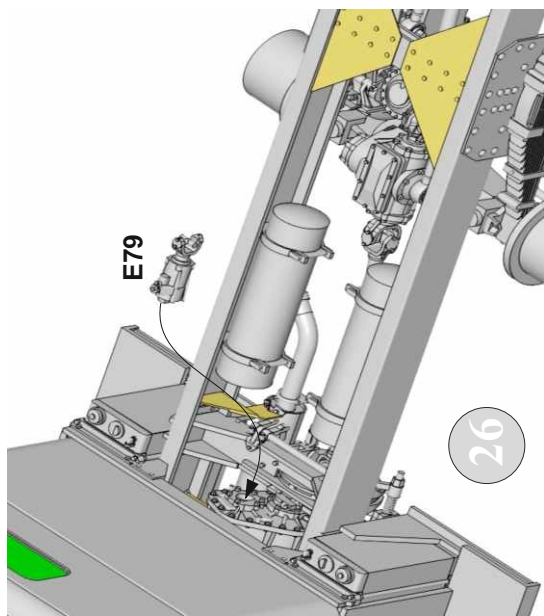
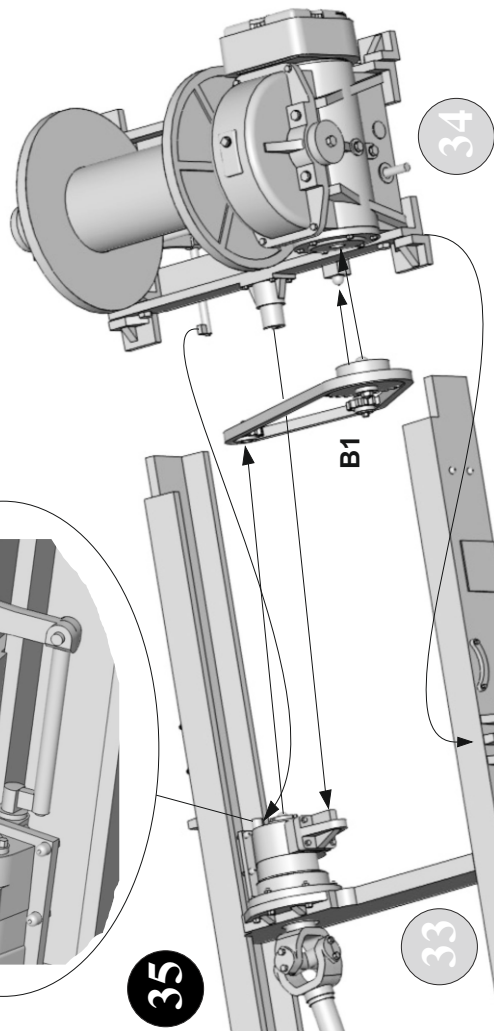
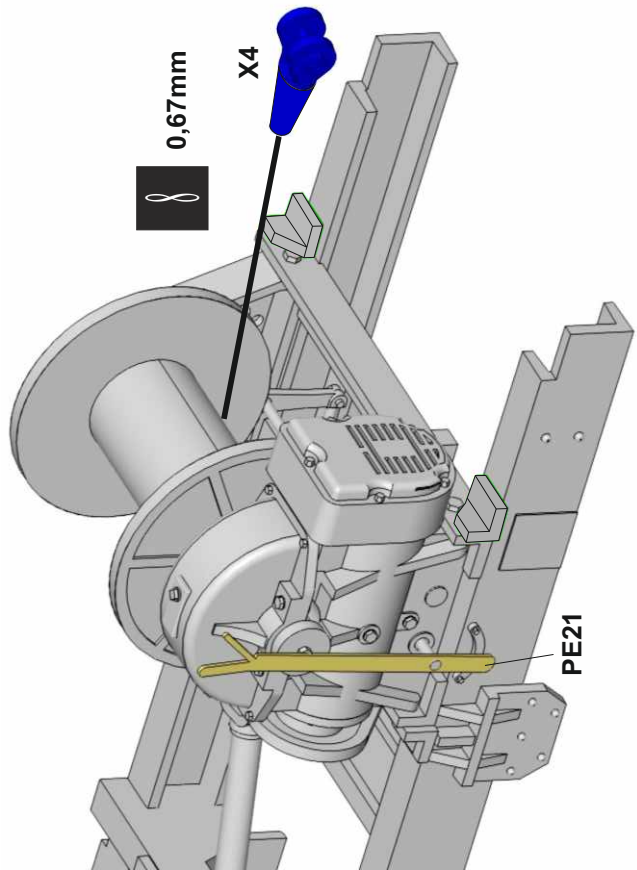


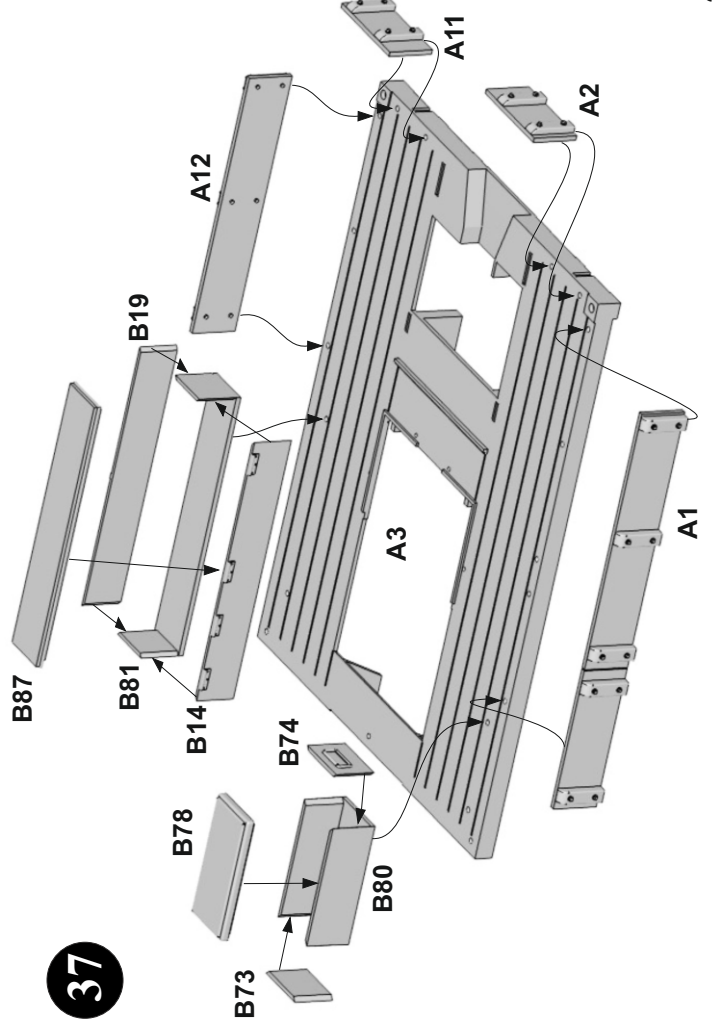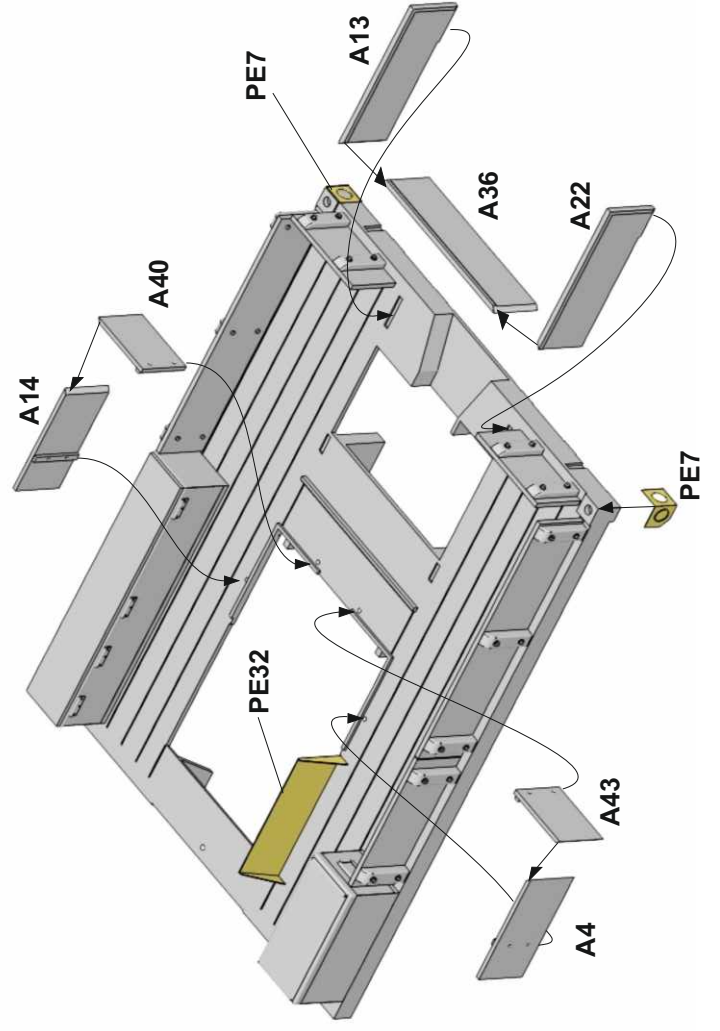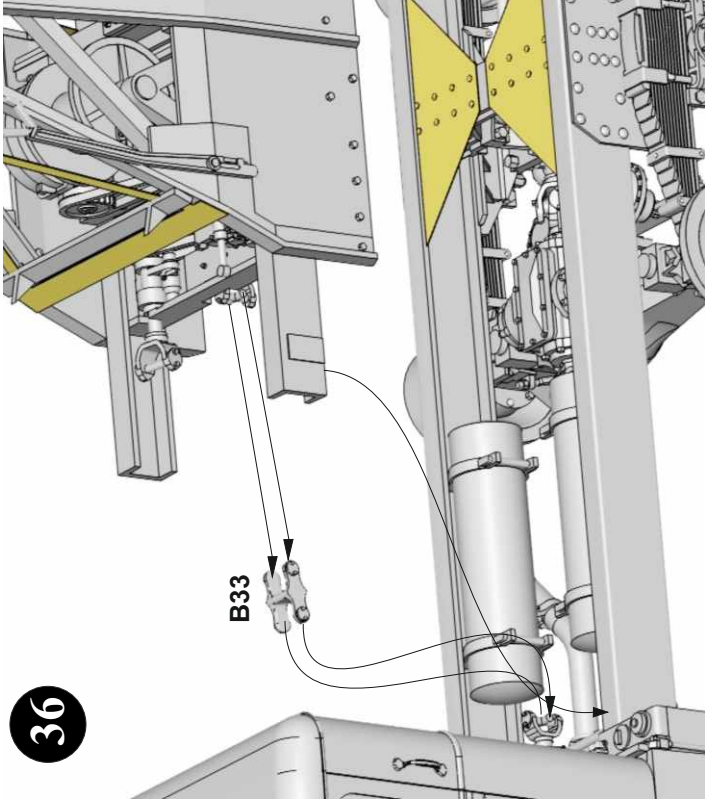
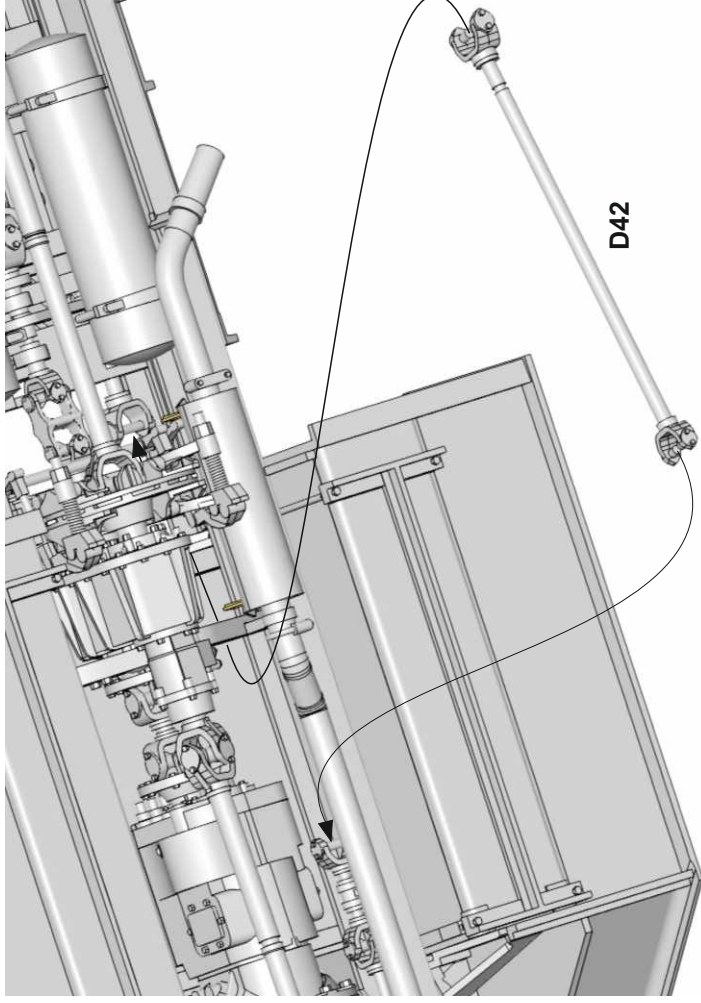


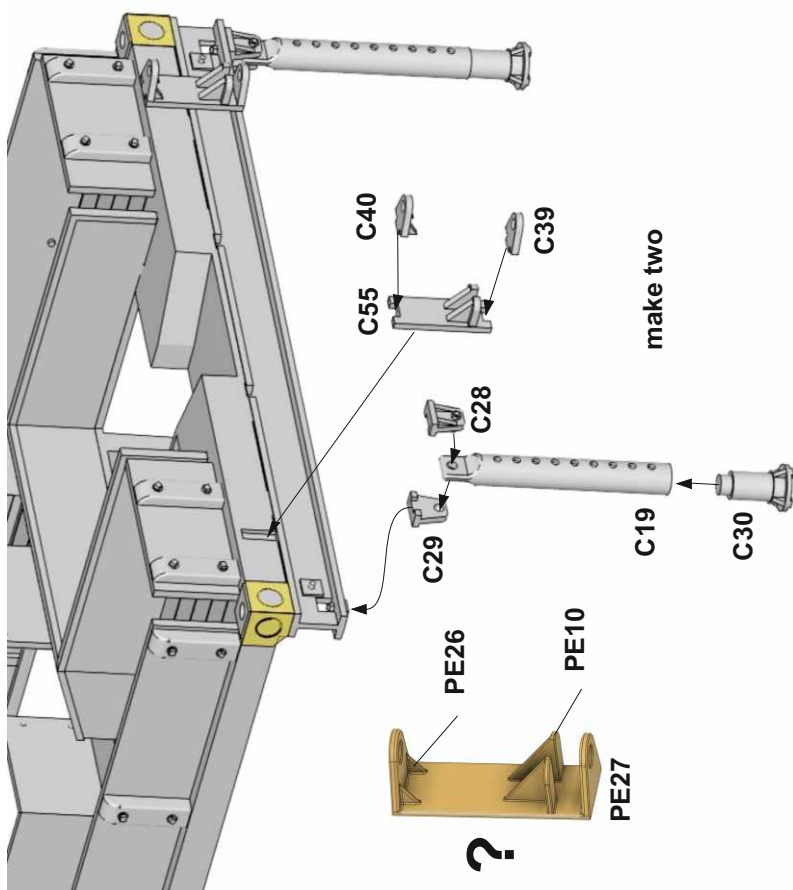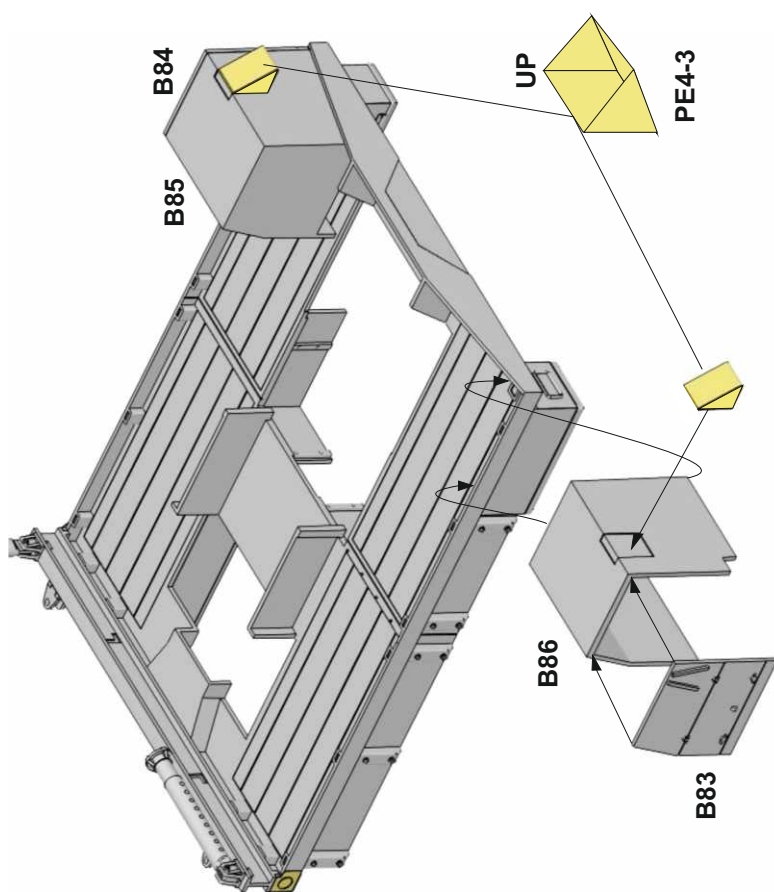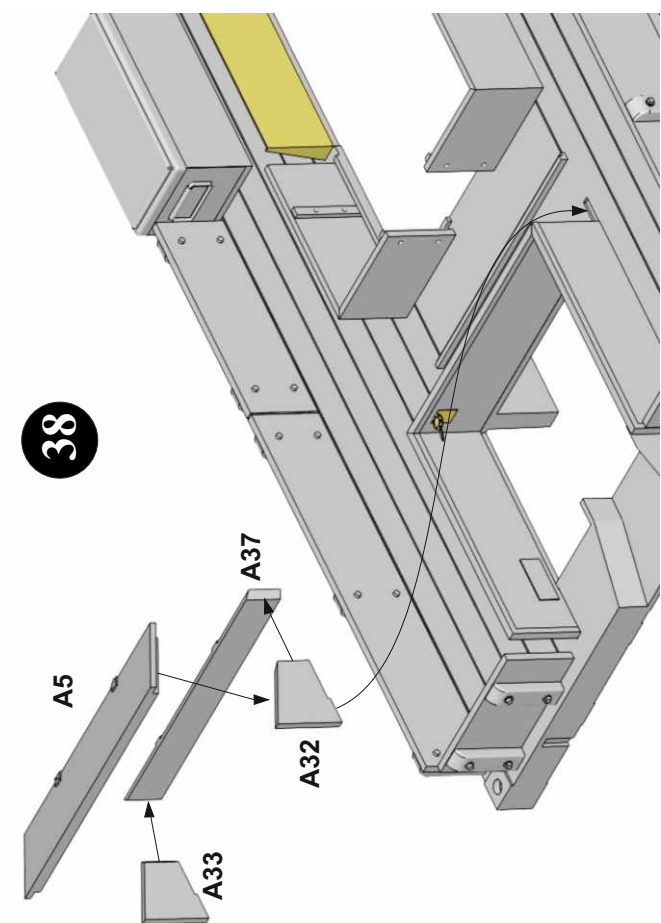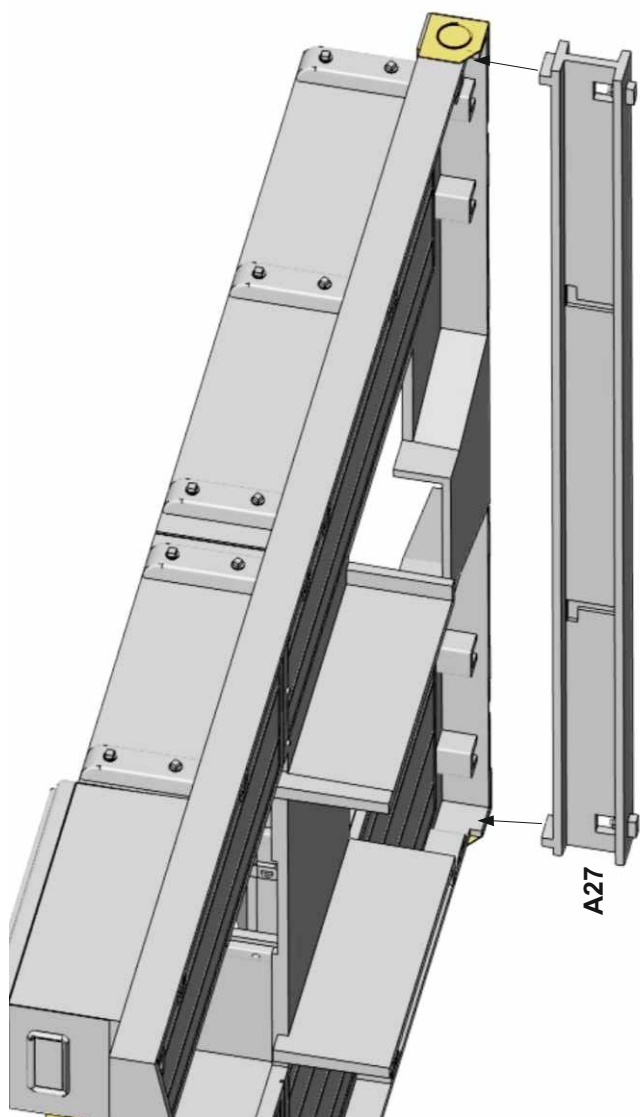

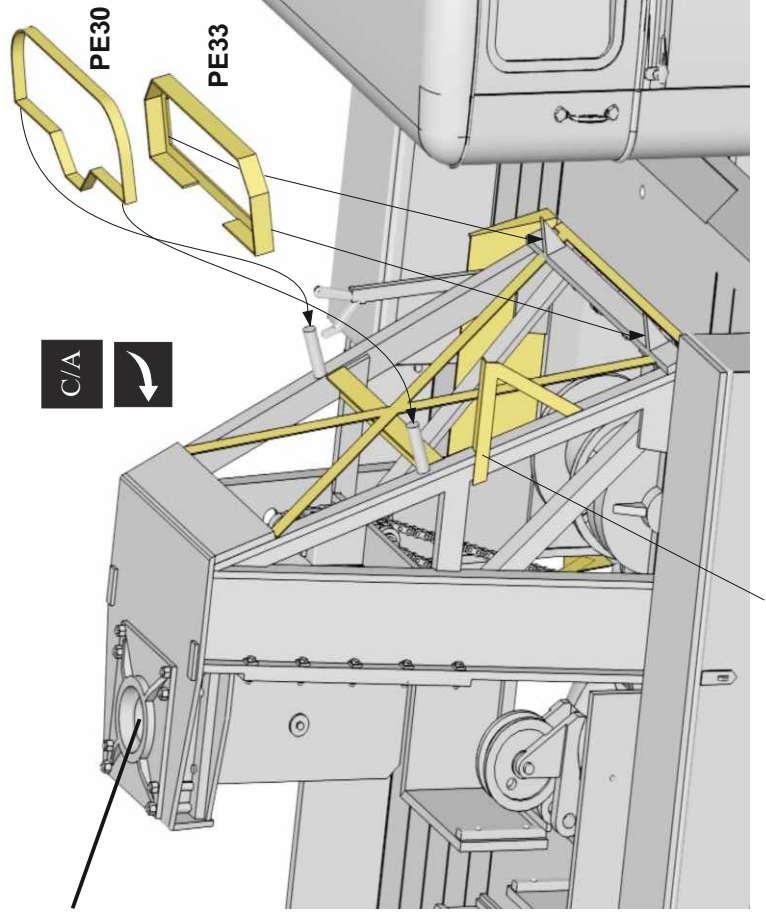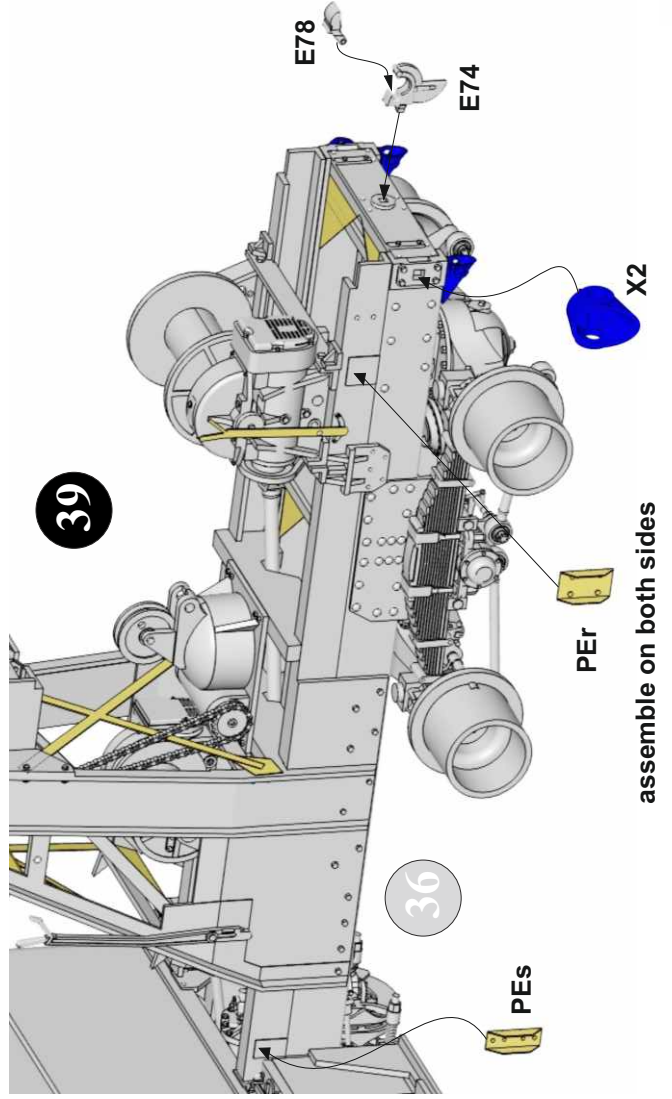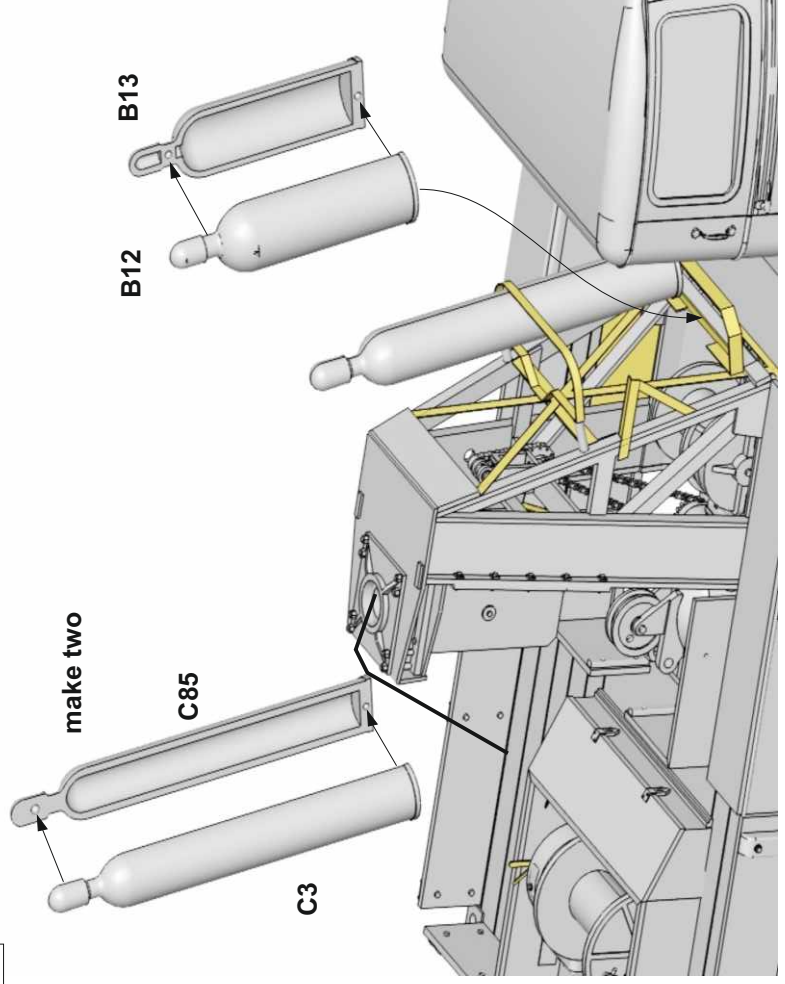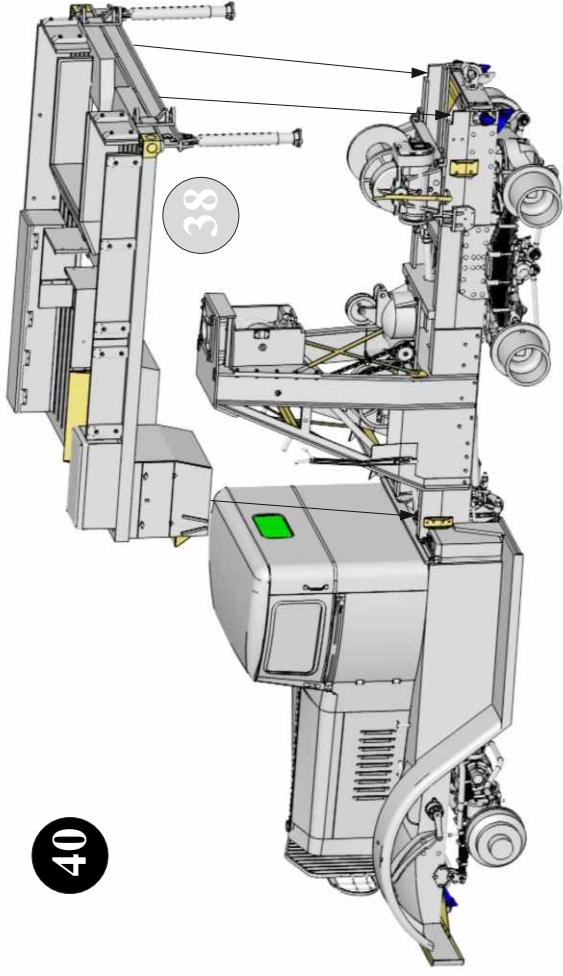


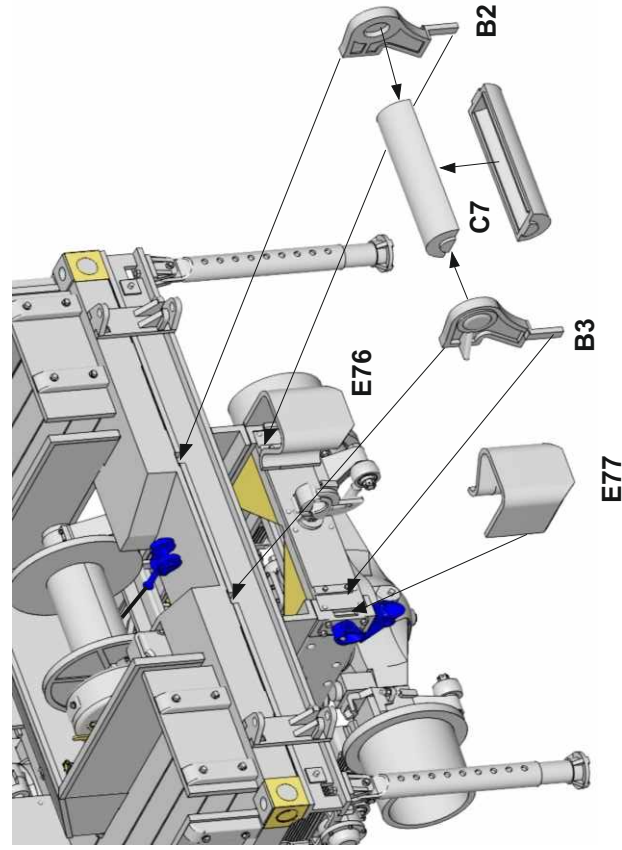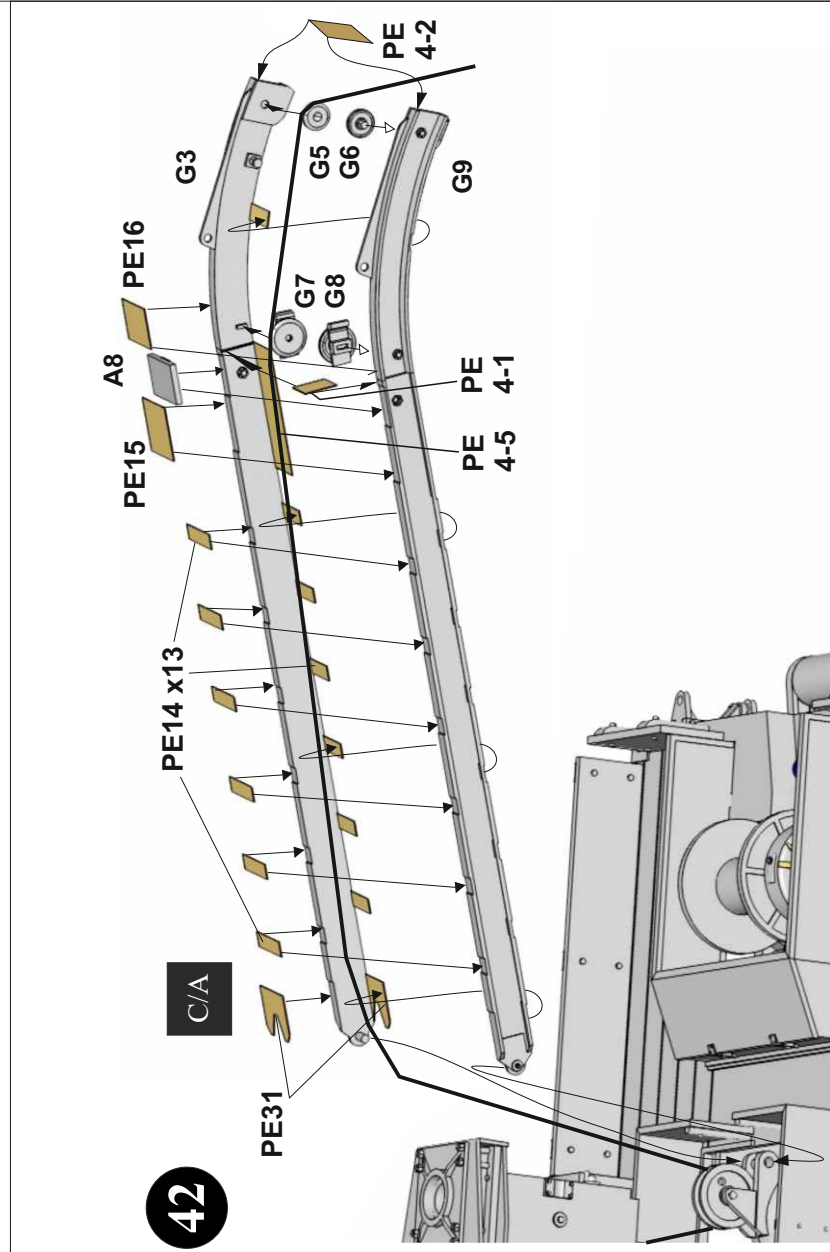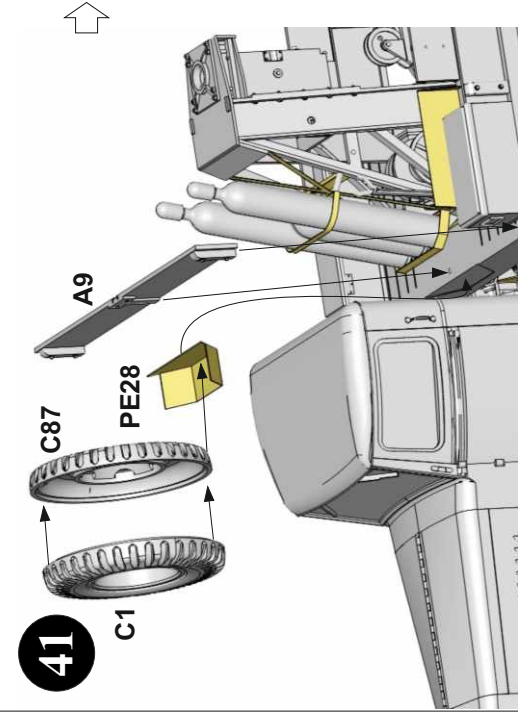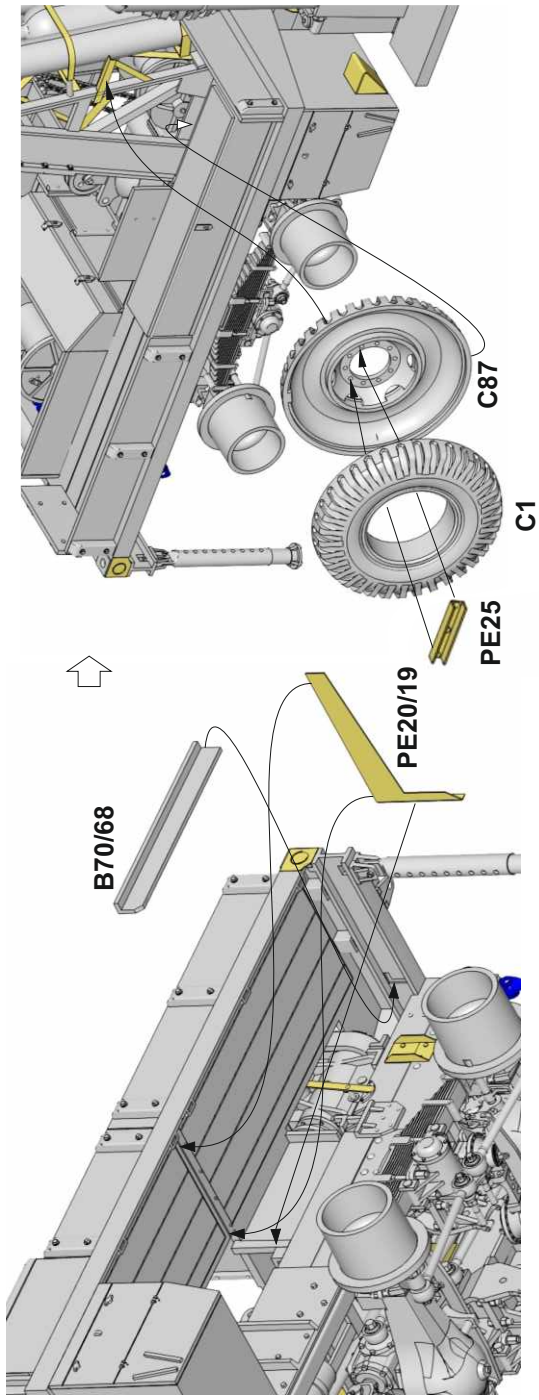

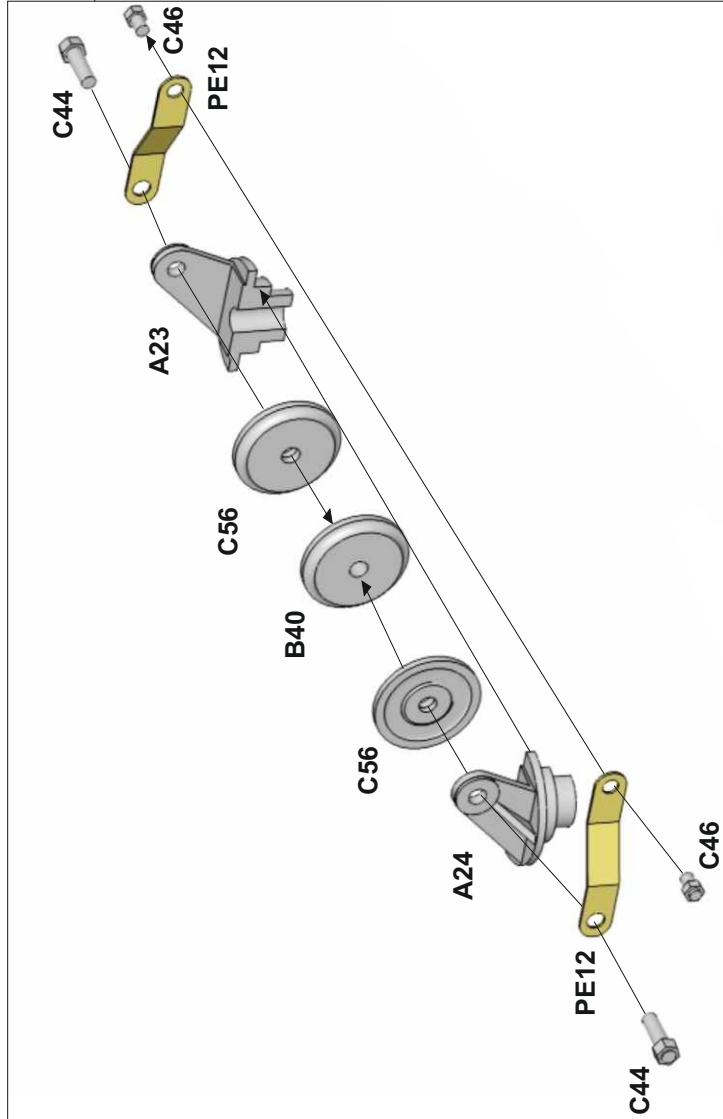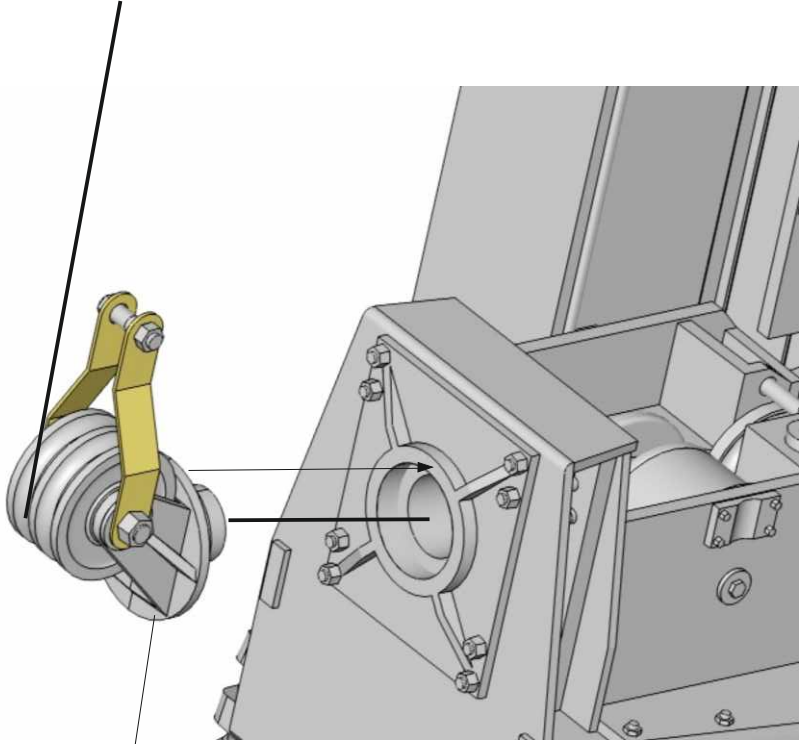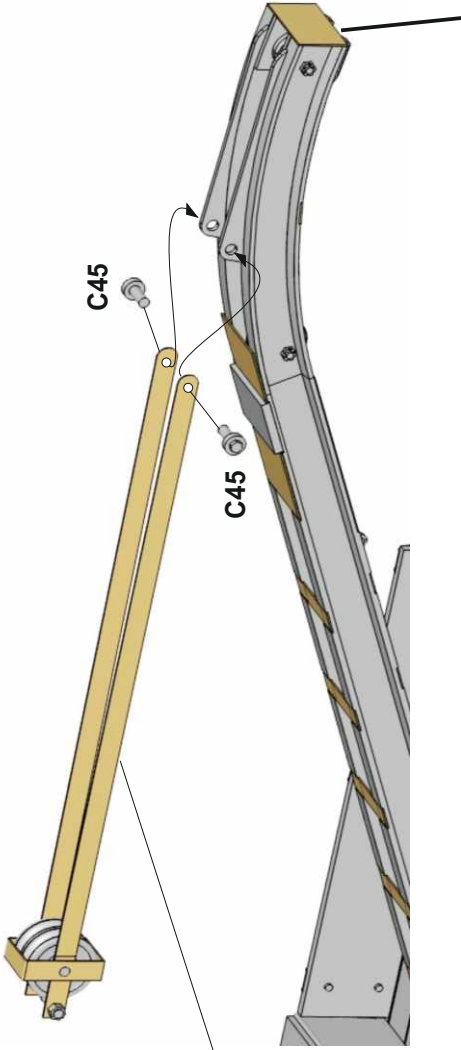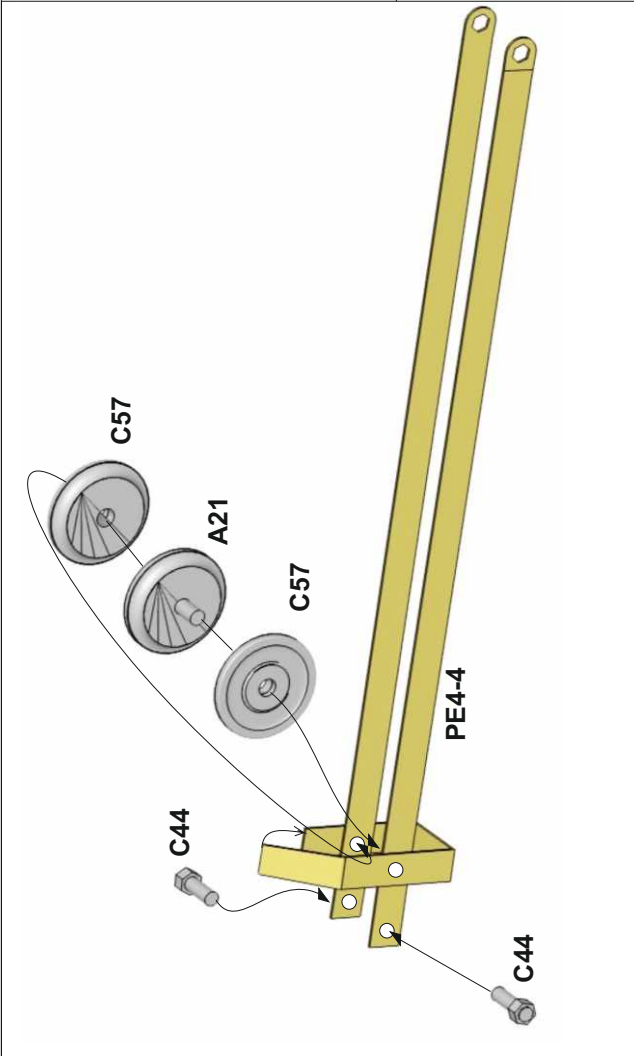




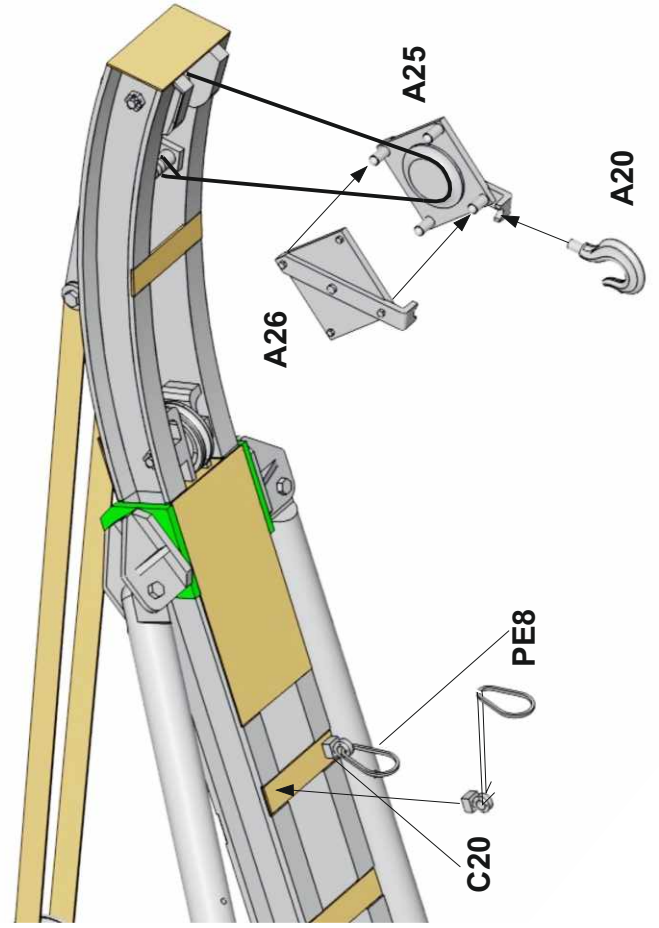
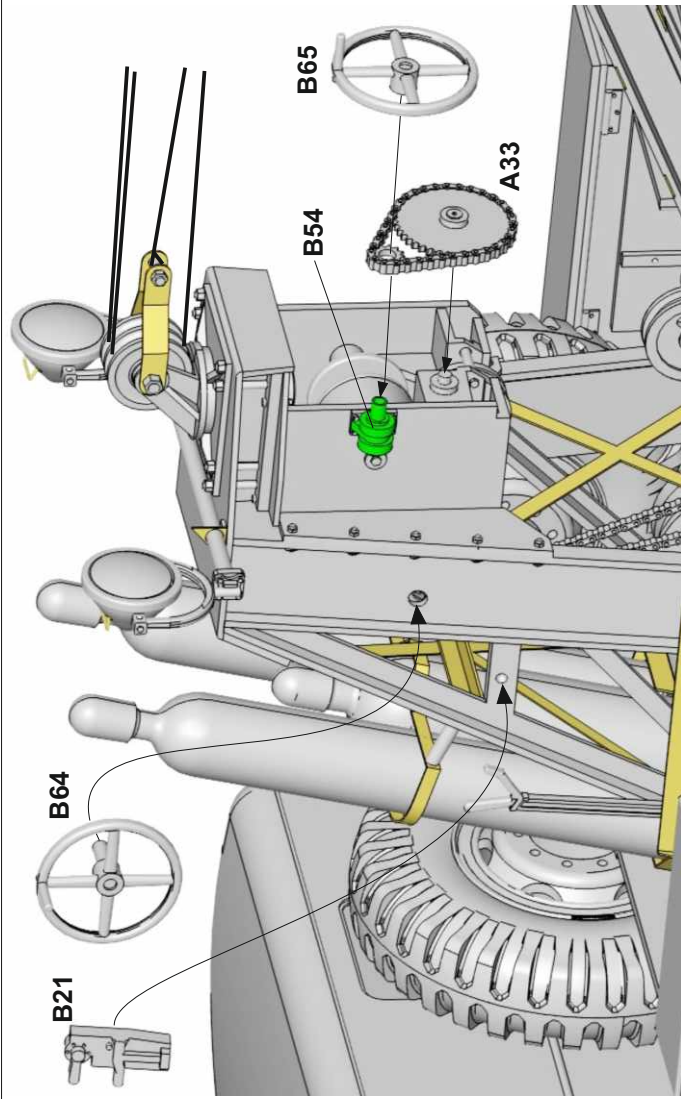


26



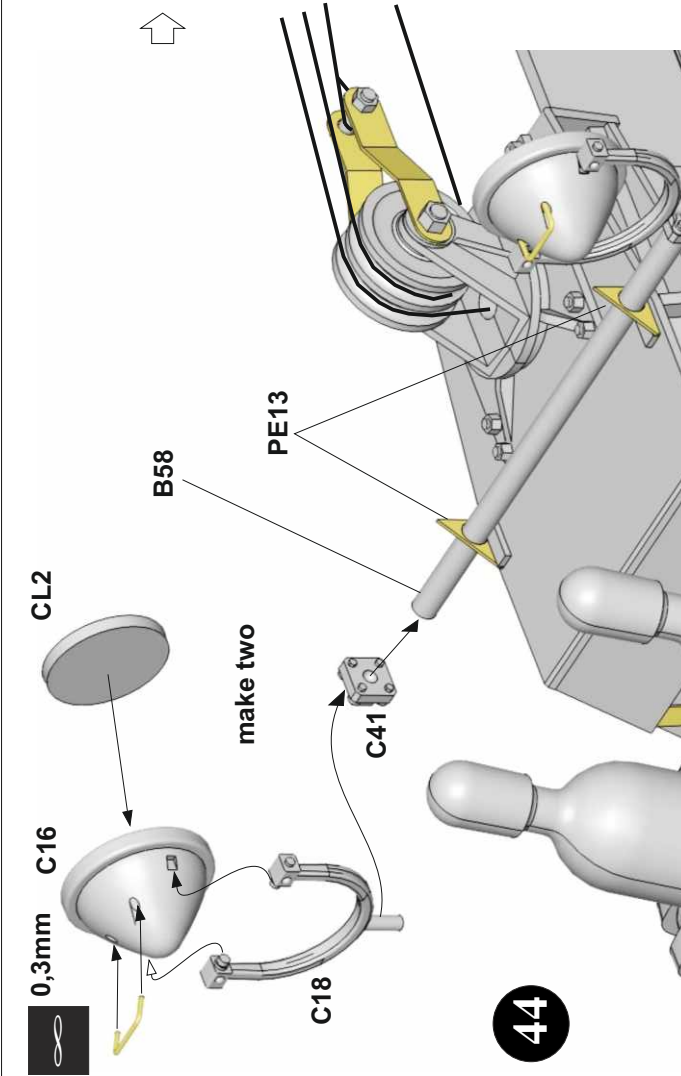



44

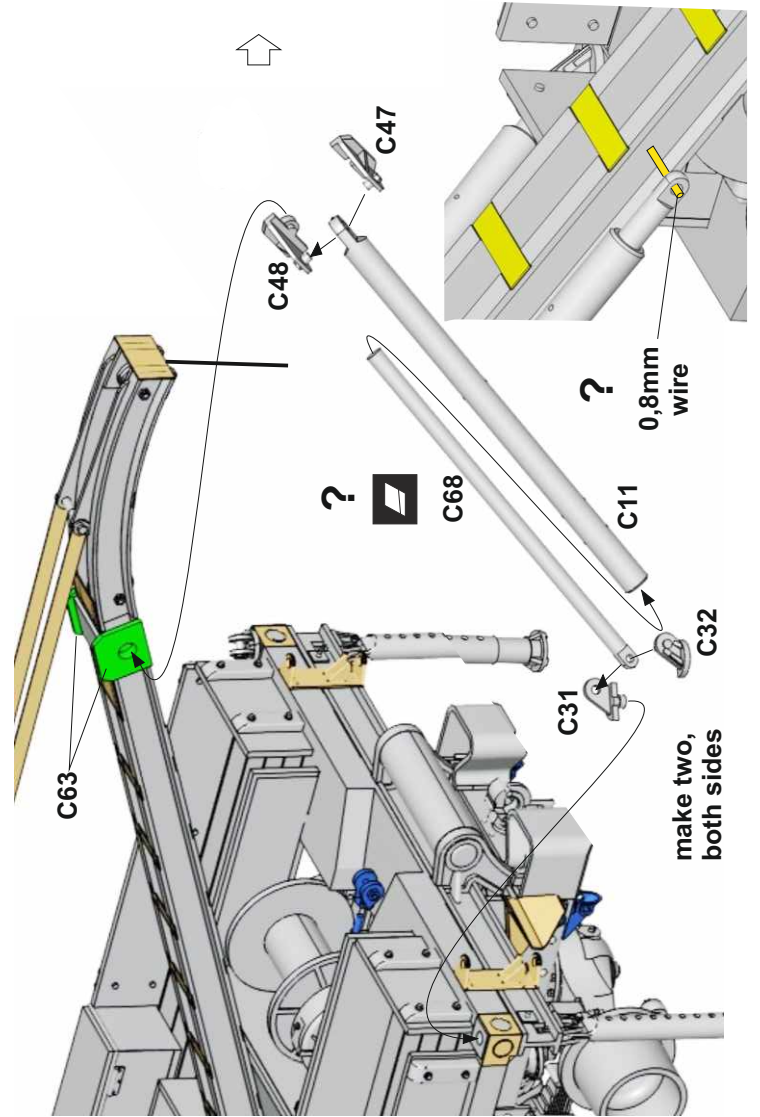

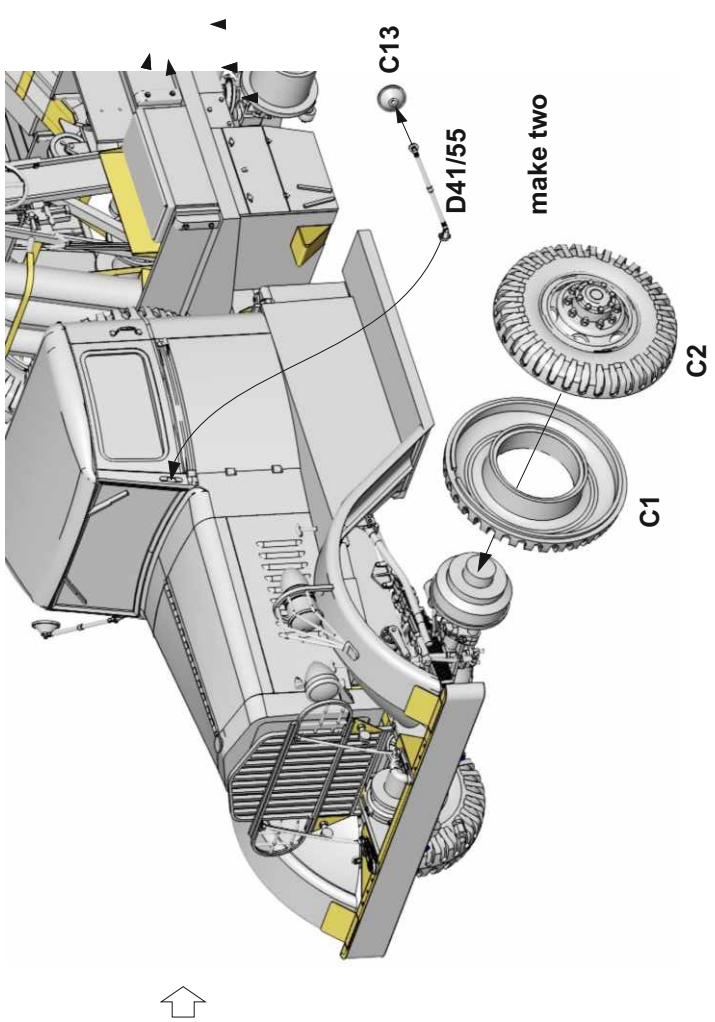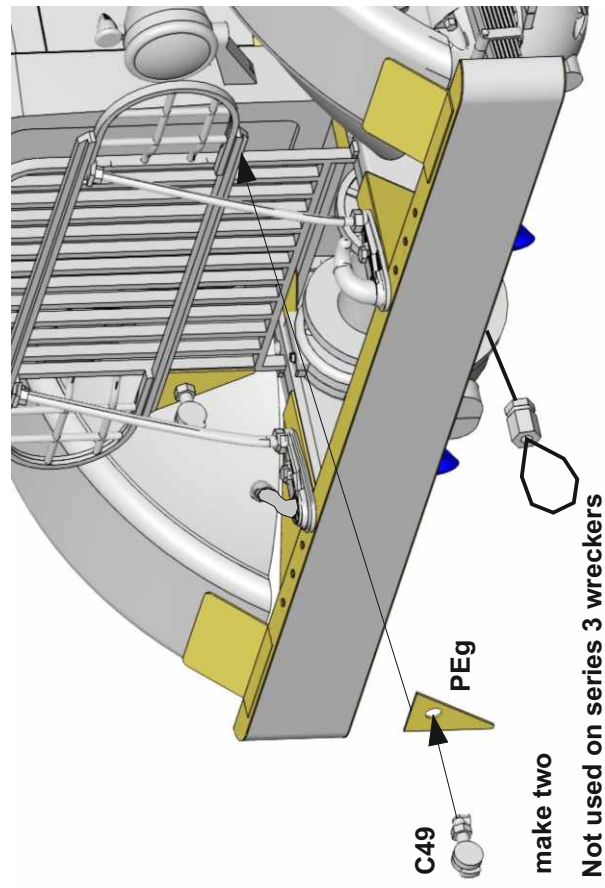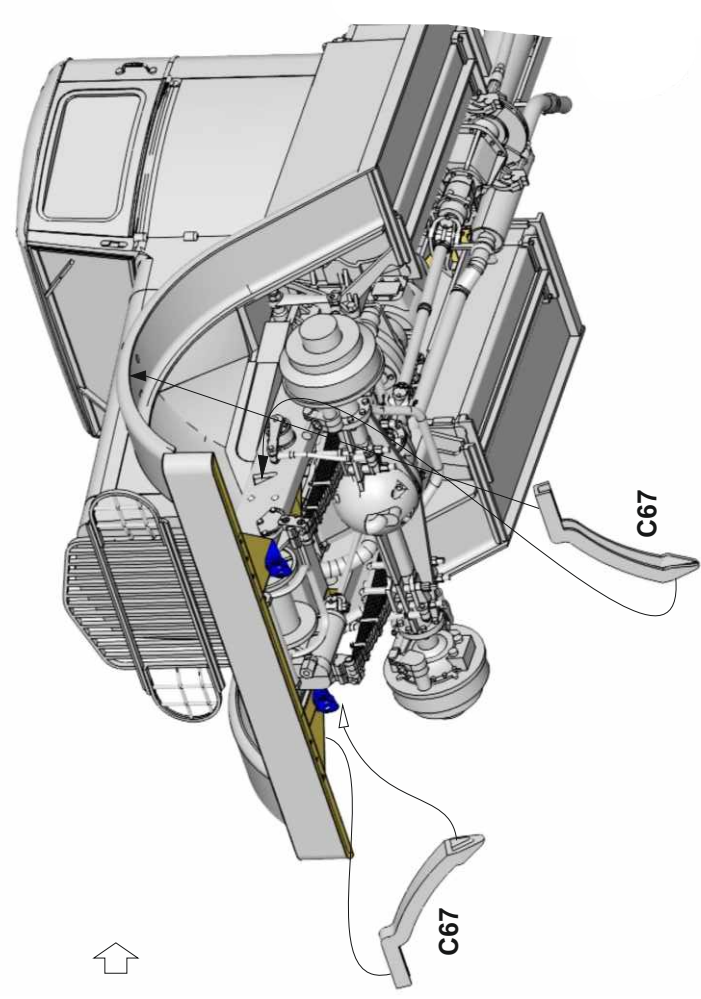
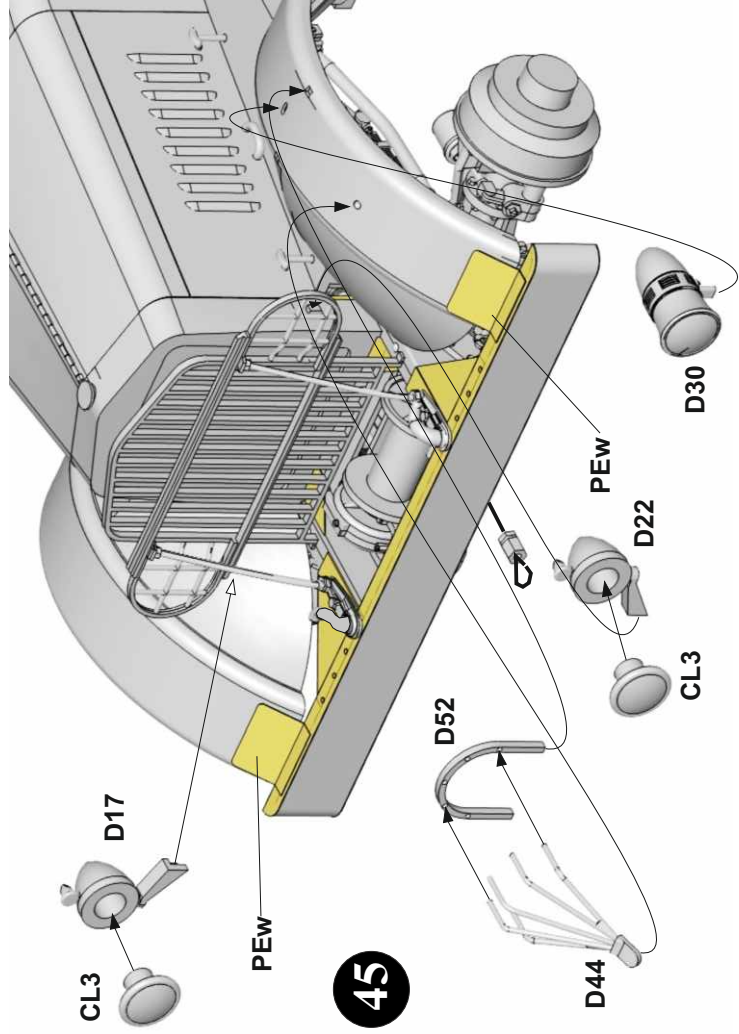





CRANE ASSEMBLY
Illustration 18-1

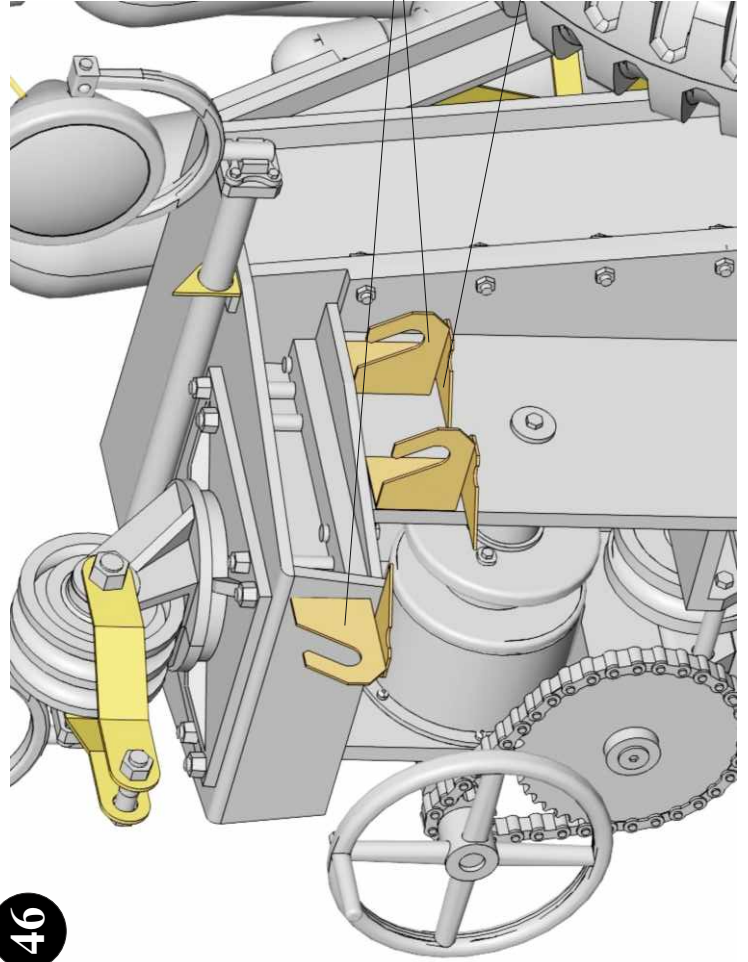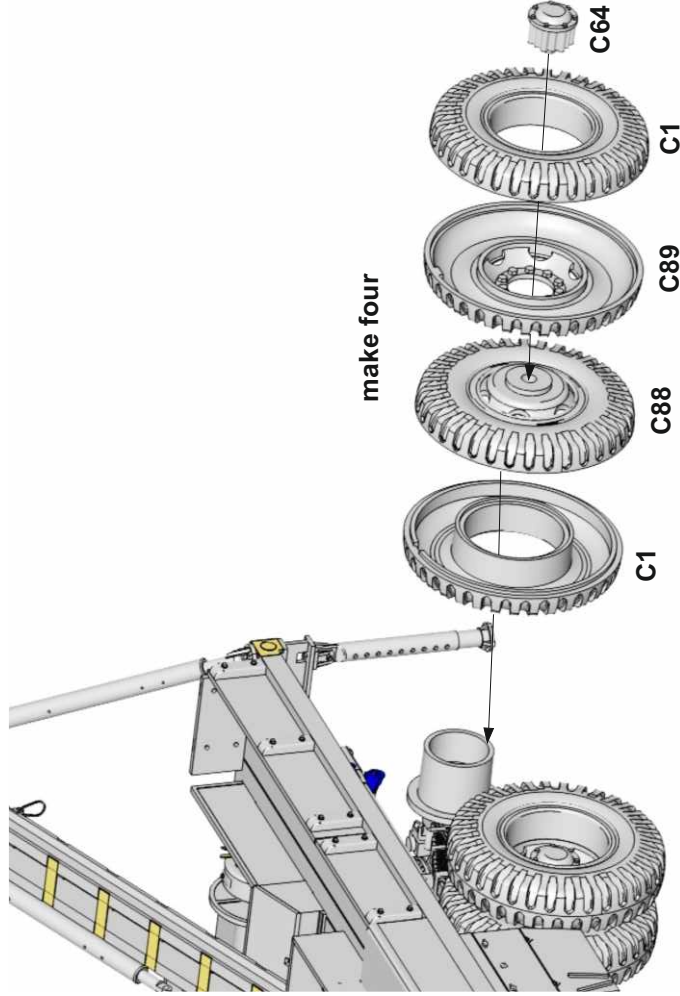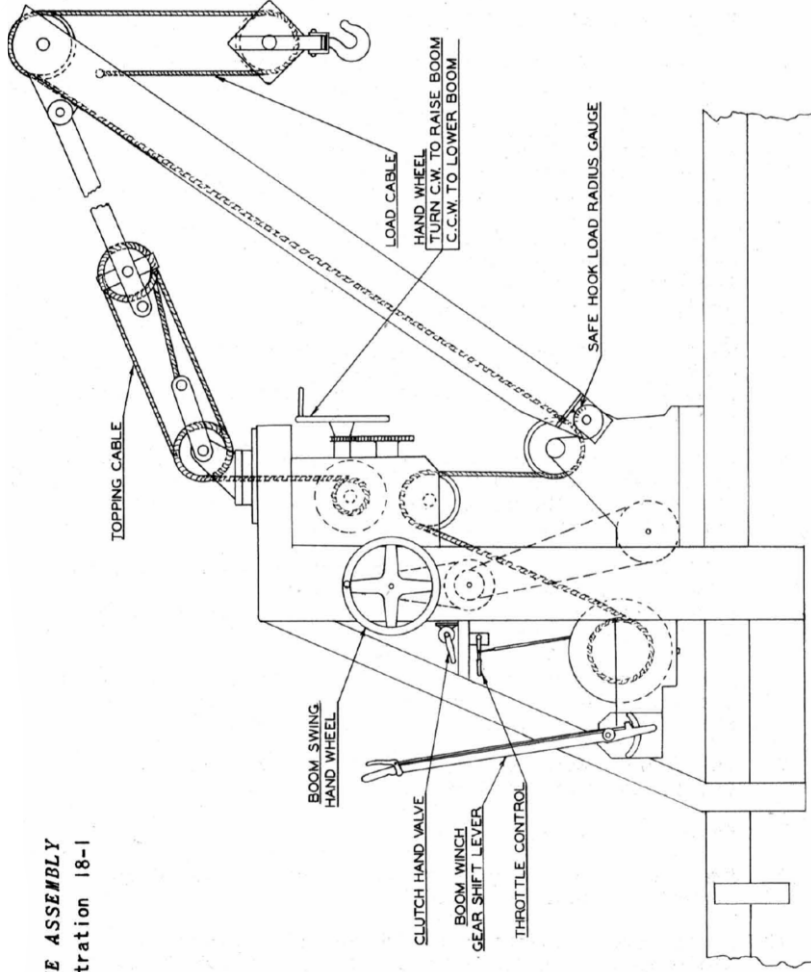

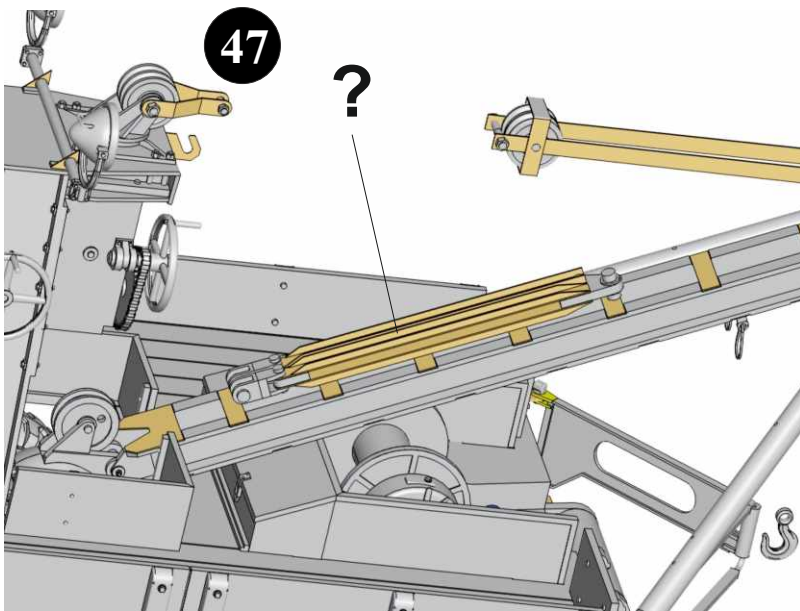

Make two

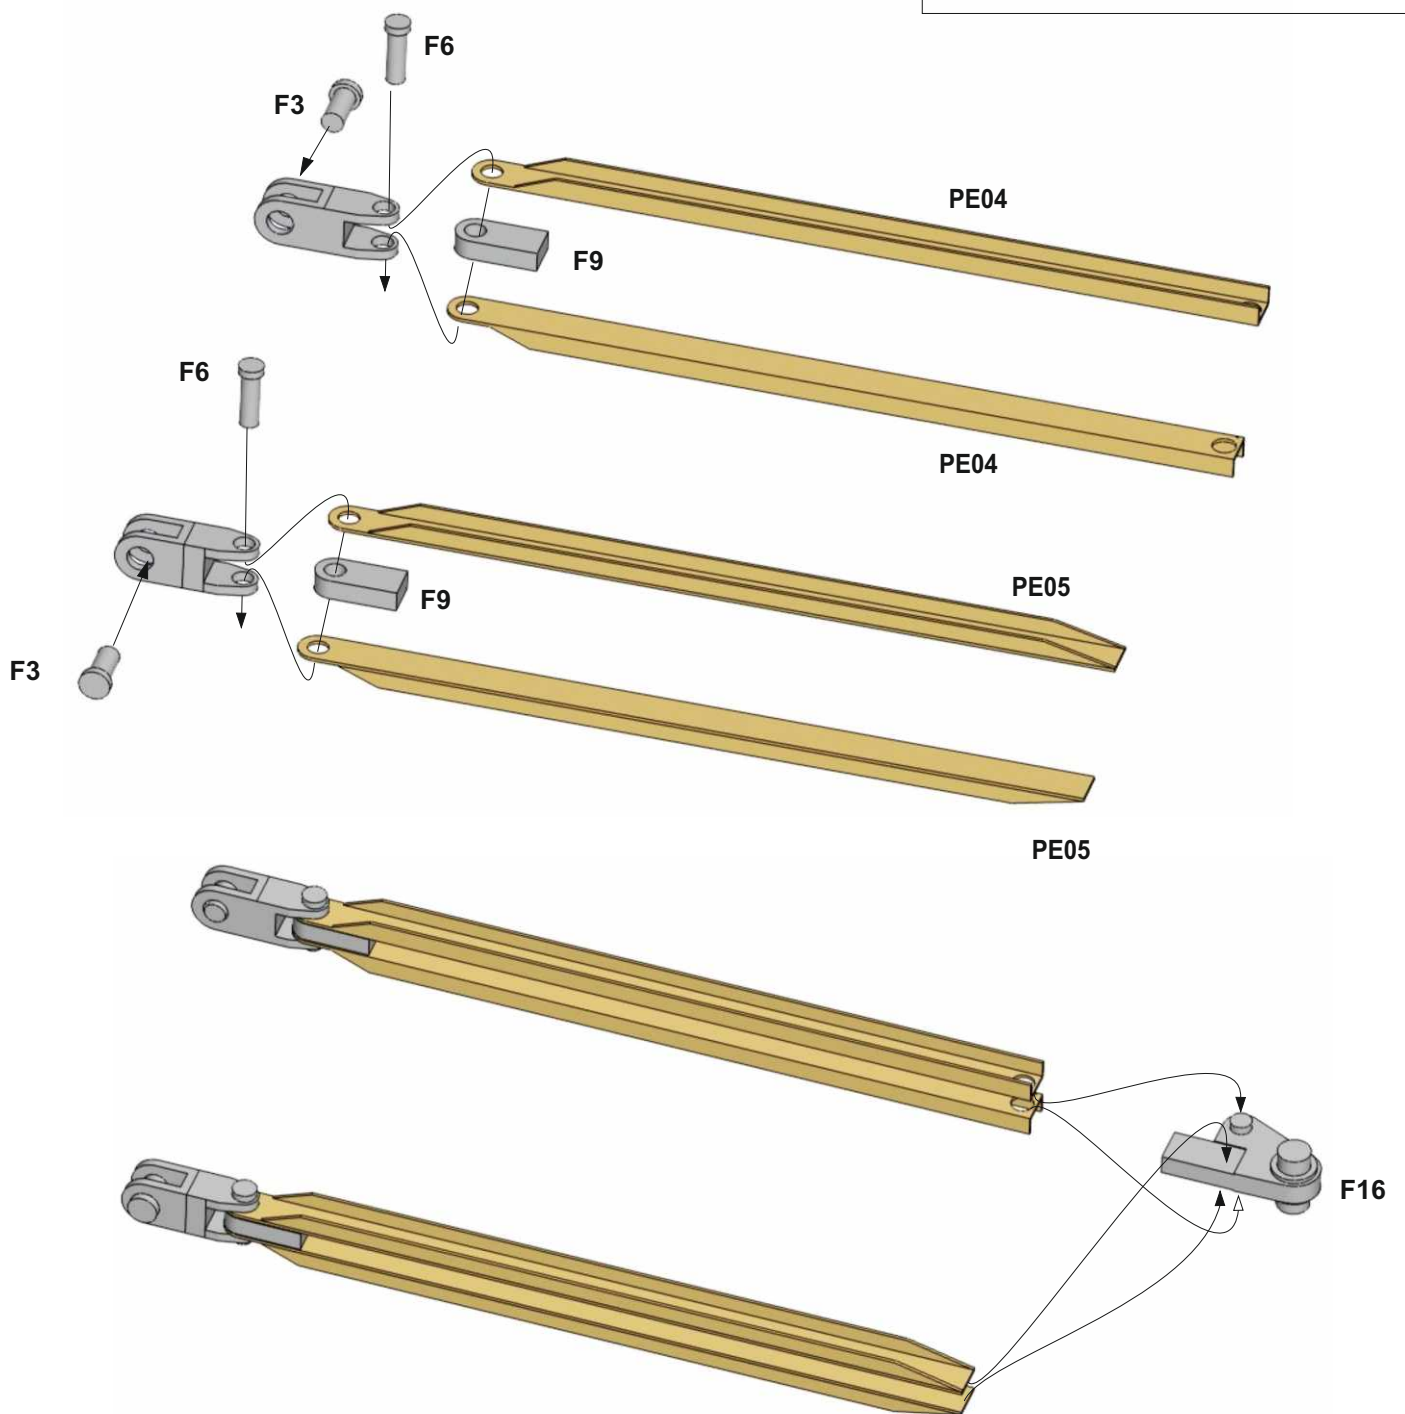
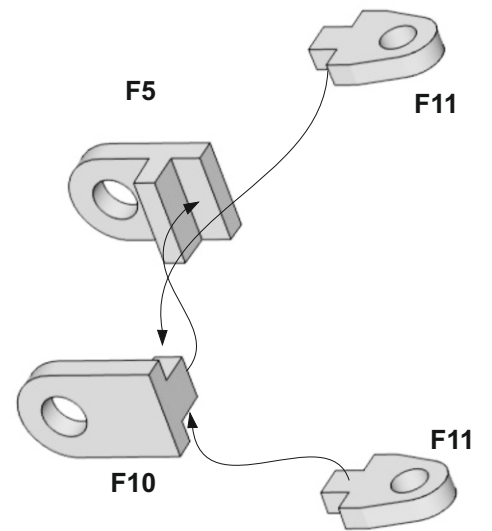


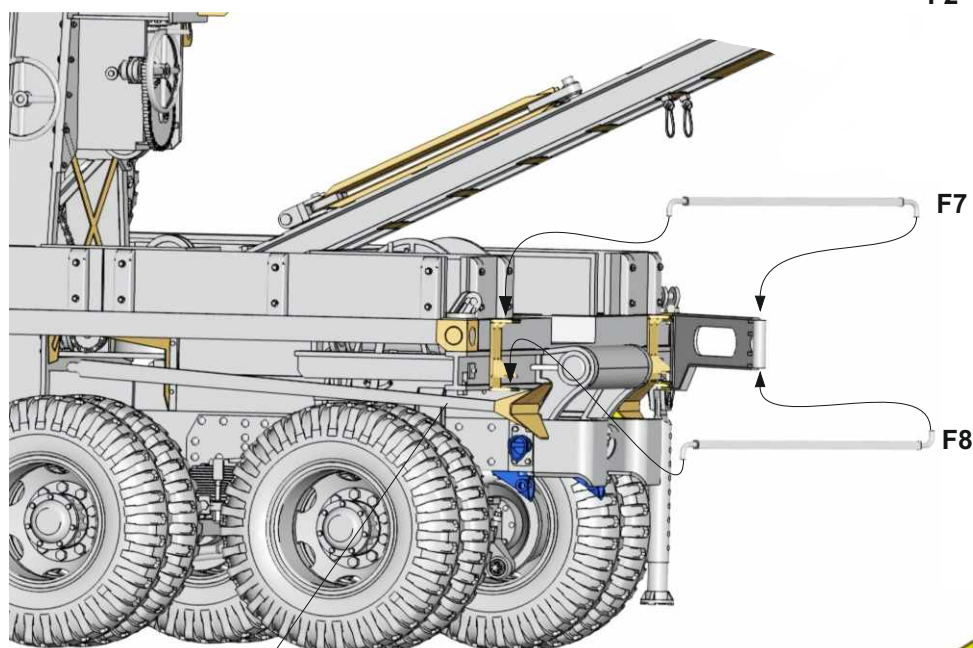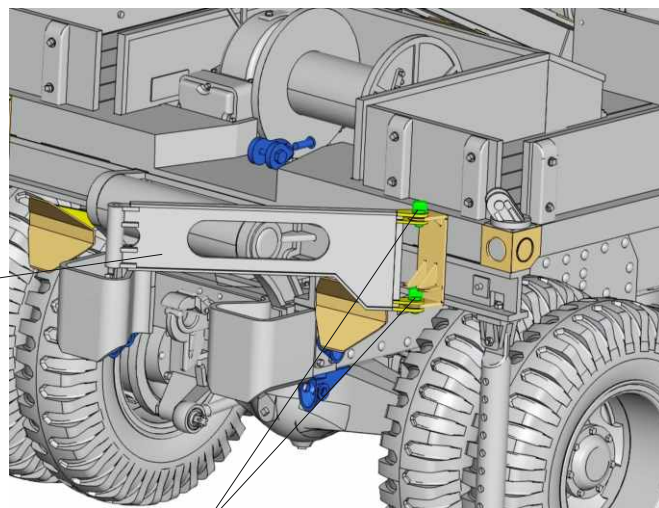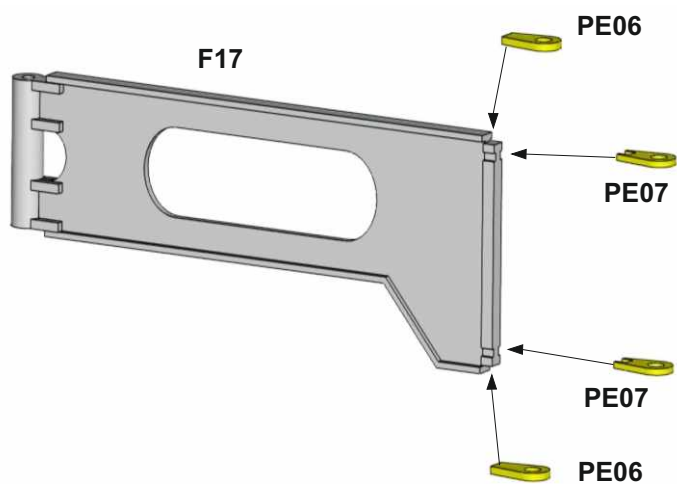


48







?

Make two

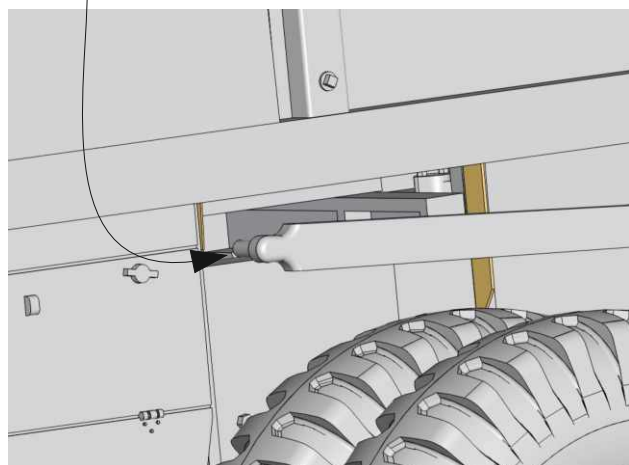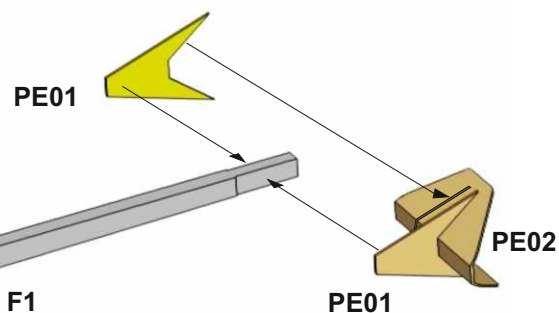

30

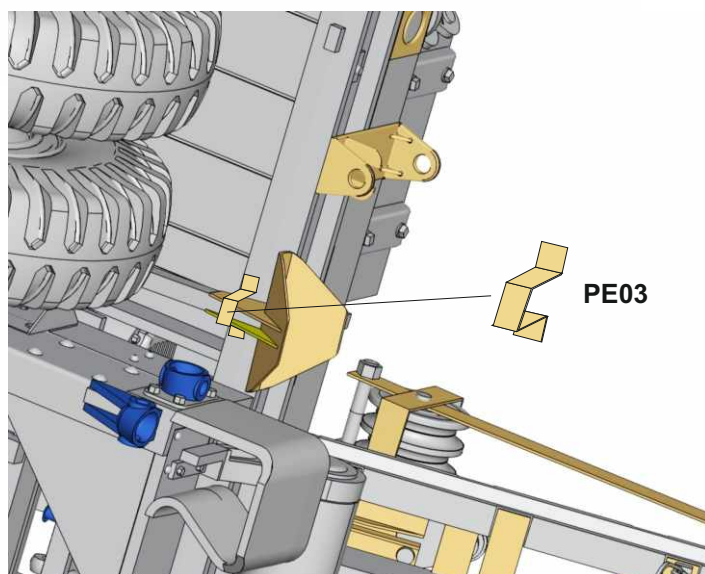

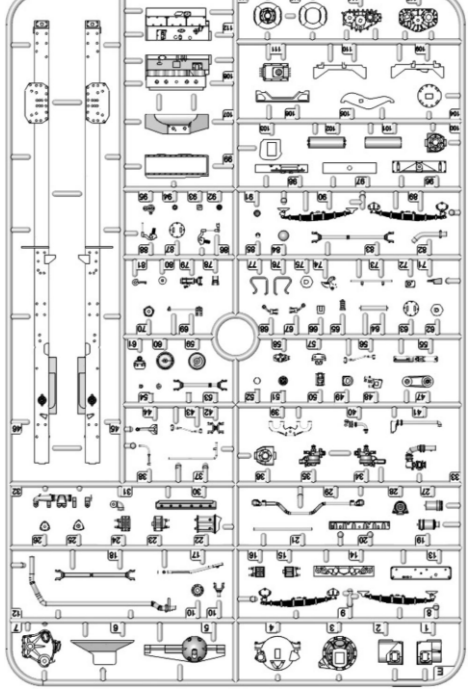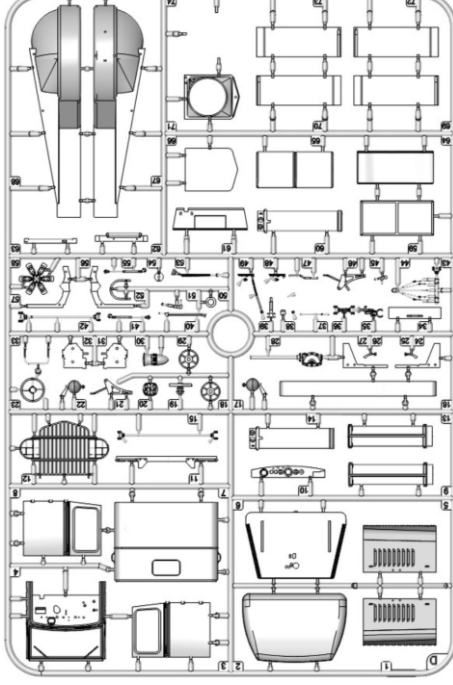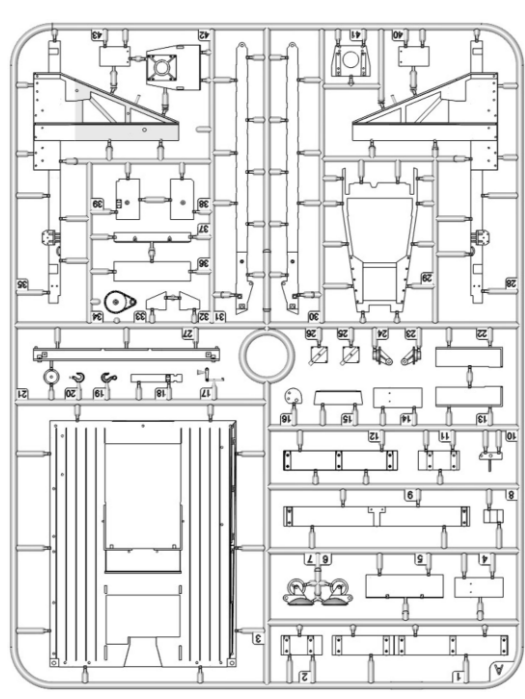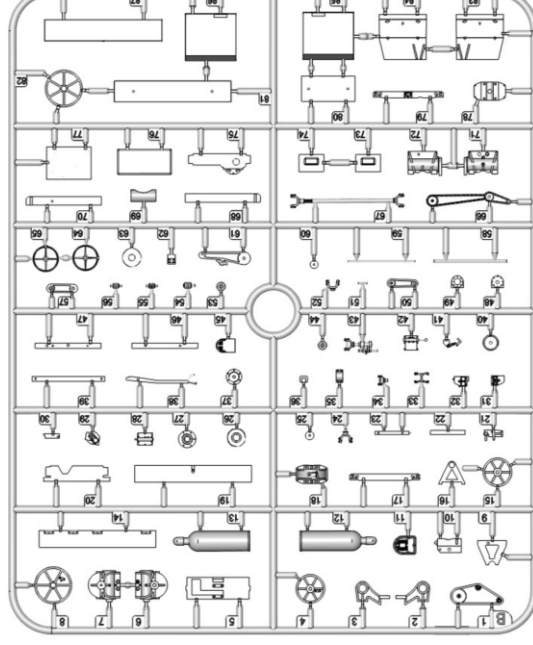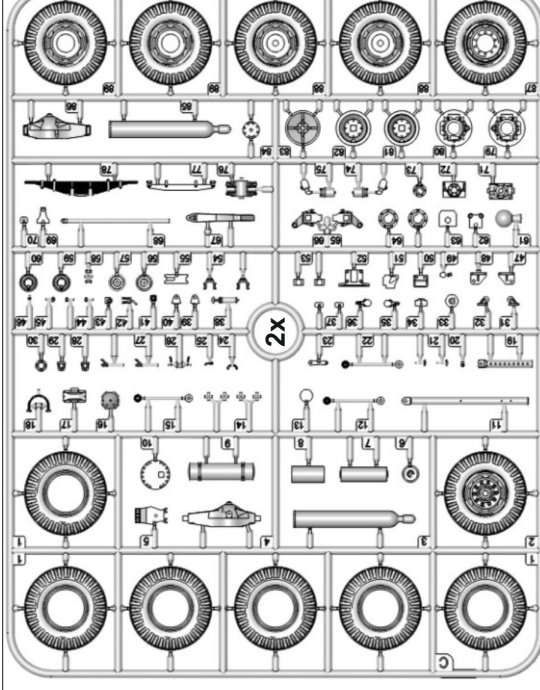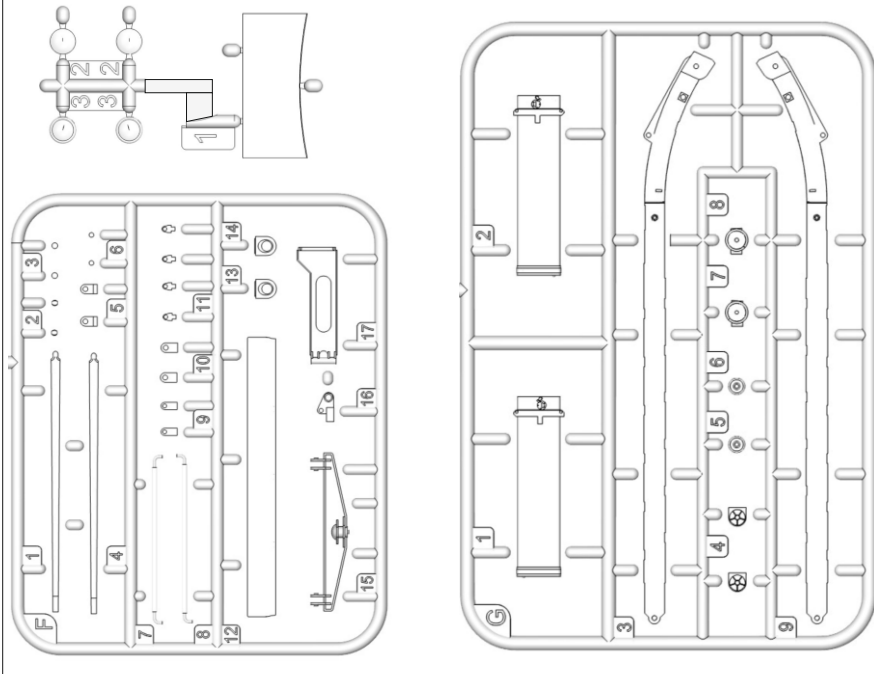

5x PE sheet
8x 3D printed parts
3x clear foil parts
decal sheet
scale ropes
scale chain





Instructions PDF /possible update/ download:
<https://www.thundermodel.com/Instructions--building-tips.html>
 Thunder Model Ward LaFrance Facebook group:
<https://www.facebook.com/groups/thundermodelwardlafrance>

Ward LaFrance M1000 series 4



COLOR INFO AND PROFILES BY

AK

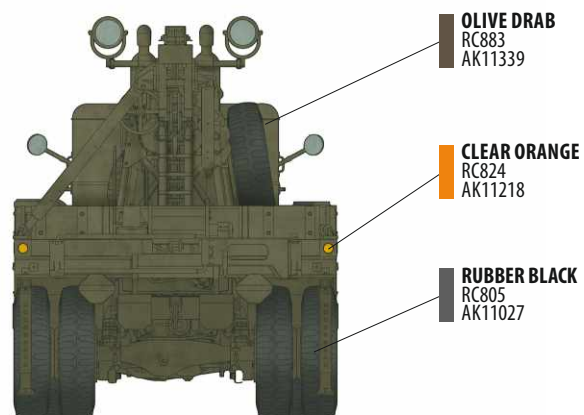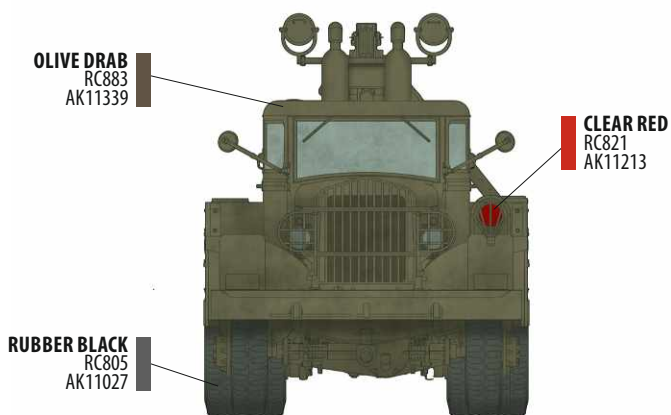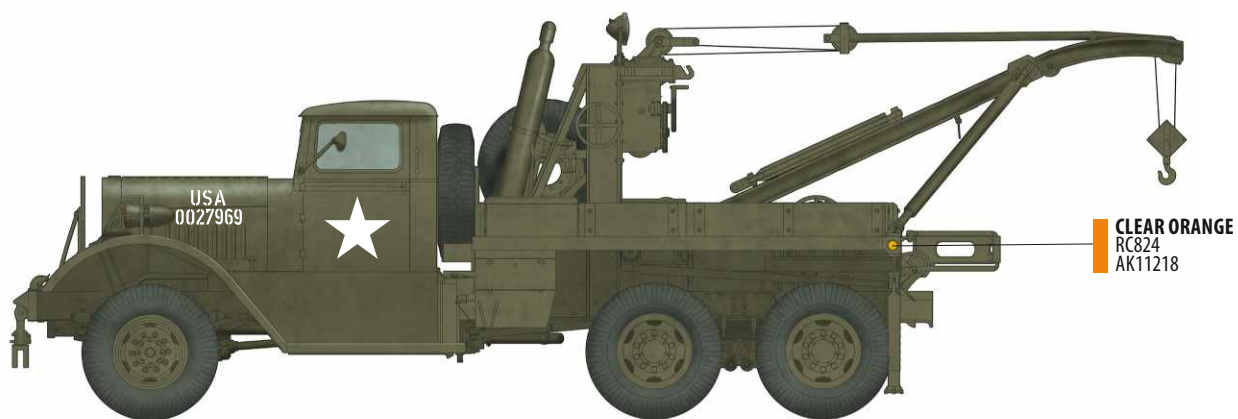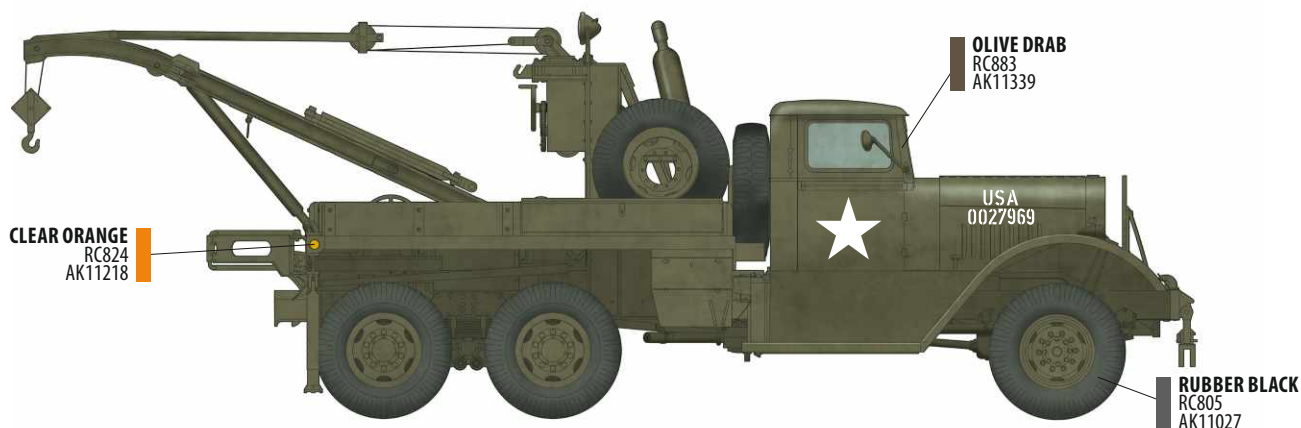

OLIVE DRAB
RC883
AK11339

RUBBER BLACK
RC805
AK11027

CLEAR ORANGE
RC824
AK11218

CLEAR RED
RC821
AK11213

AK

Recommended
finishing products





Overall wash AK045 Dark Brown Wash
Dust AK4062 Light Dust Deposit
Mud AK016 Fresh Mud
Streaking effects AK012 Streaking Grime
Oil AK084 Engine Oil
Fuel AK025 Fuel Stains
Rust AK046 Light Rust Wash

Ward LaFrance M1000 series 4



COLOR INFO AND PROFILES BY

AK

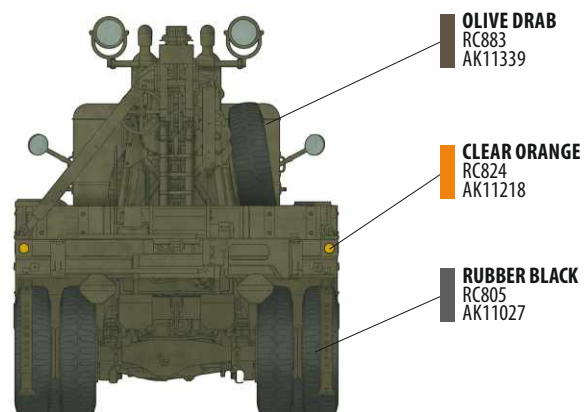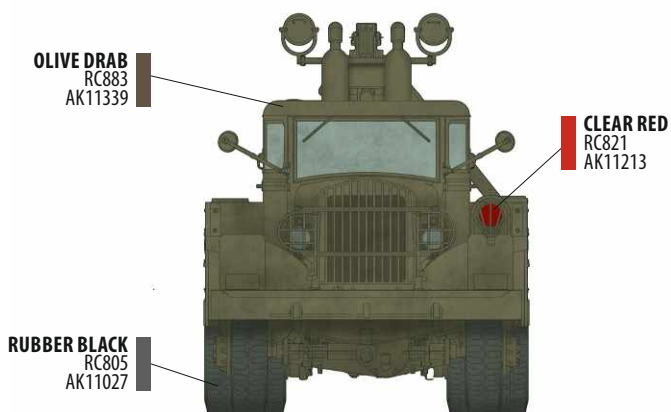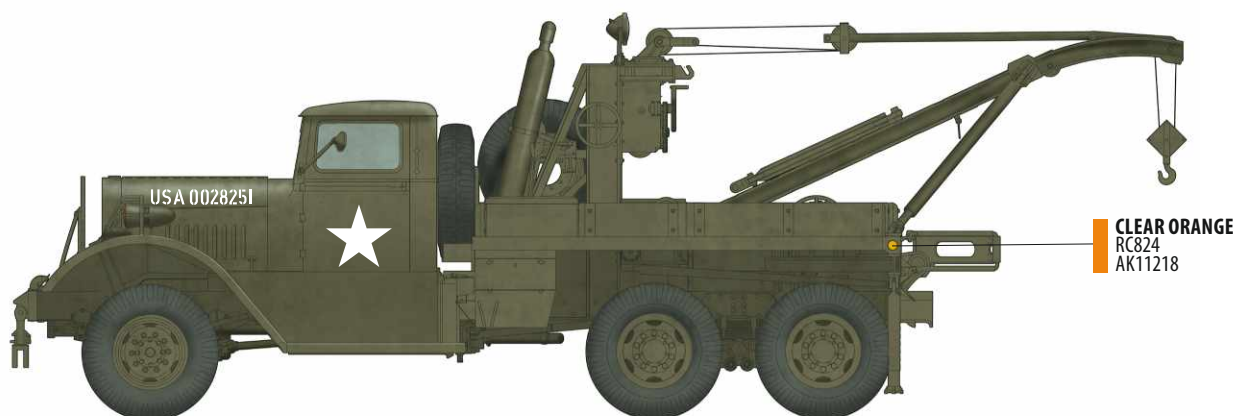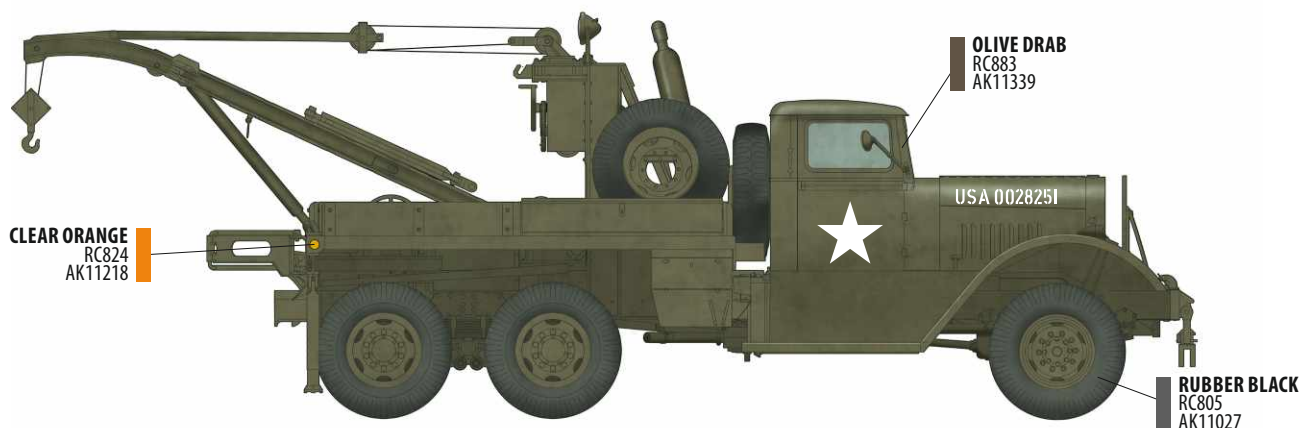

OLIVE DRAB
RC883
AK11339

RUBBER BLACK
RC805
AK11027

CLEAR ORANGE
RC824
AK11218

CLEAR RED
RC821
AK11213

AK

Recommended
finishing products





Overall wash AK045 Dark Brown Wash
Dust AK4062 Light Dust Deposit
Mud AK016 Fresh Mud
Streaking effects AK012 Streaking Grime
Oil AK084 Engine Oil
Fuel AK025 Fuel Stains
Rust AK046 Light Rust Wash

Ward LaFrance M1000 series 4



COLOR INFO AND PROFILES BY

AK

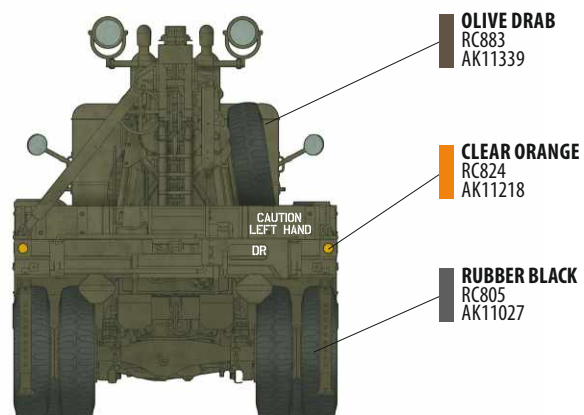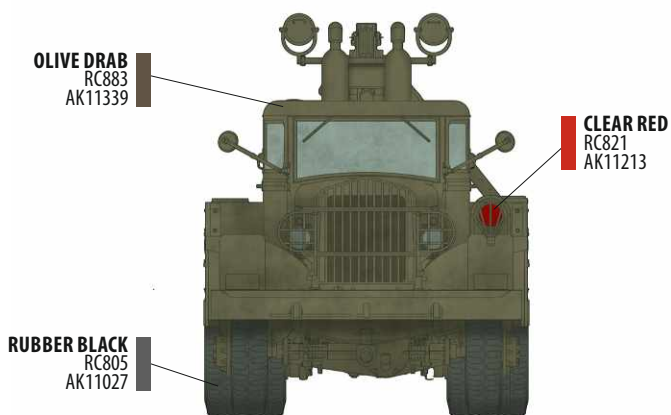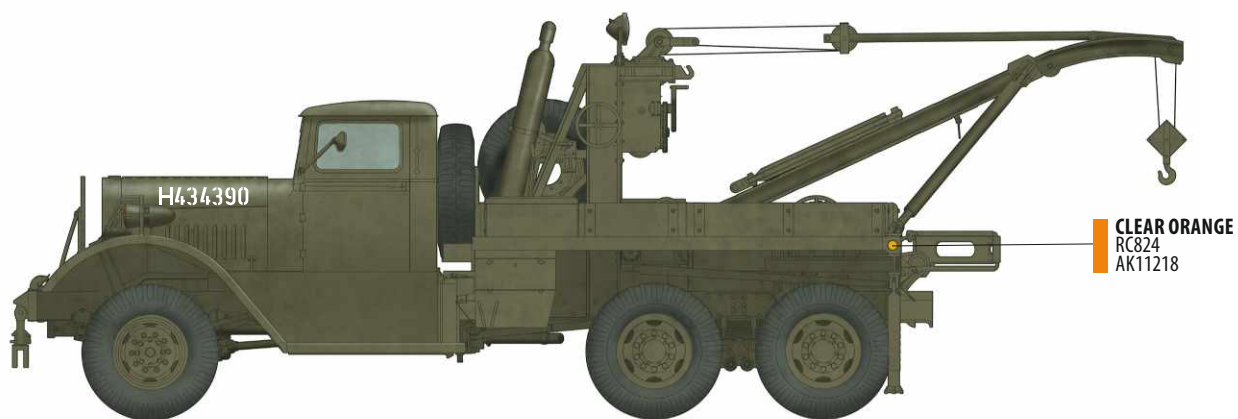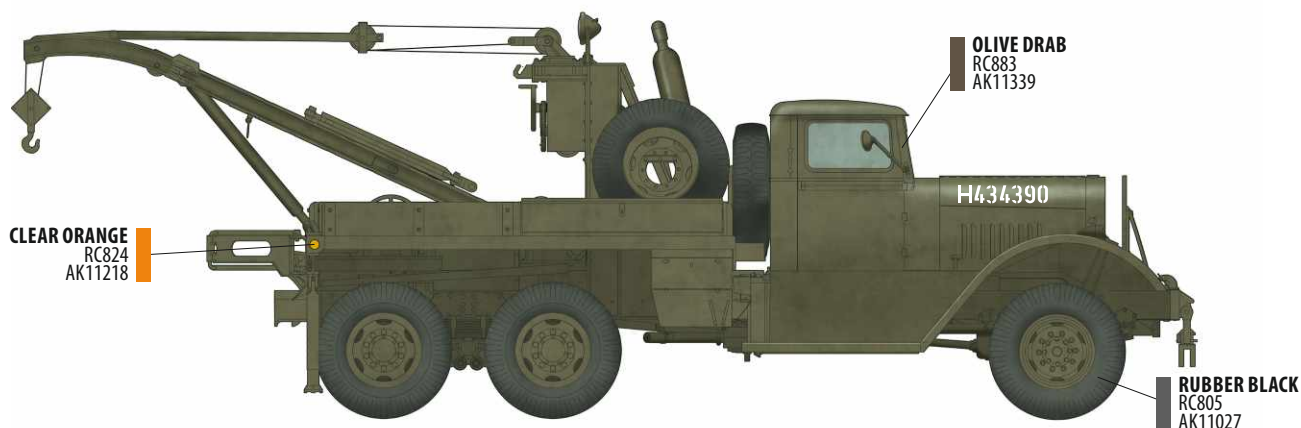

OLIVE DRAB
RC883
AK11339

RUBBER BLACK
RC805
AK11027

CLEAR ORANGE
RC824
AK11218

CLEAR RED
RC821
AK11213

AK

Recommended
finishing products

Overall wash AK045 Dark Brown Wash
Dust AK4062 Light Dust Deposit
Mud AK016 Fresh Mud
Streaking effects AK012 Streaking Grime
Oil AK084 Engine Oil
Fuel AK025 Fuel Stains
Rust AK046 Light Rust Wash