


35901

產品編號: 35901

scale 1/35

1:35 比例

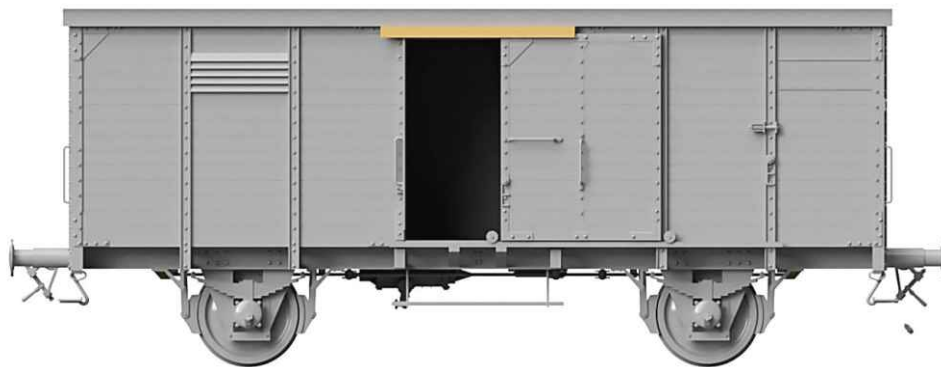

1/35 German Gedeckter Guterwagen

Go through this assembly guide and understand it before you start kit assembly

You can download PDF assembly instruction file from our website to see closely zoomed assembly details

Use usual plastic kit's cements and tools (not included in the kit)

Follow painting guide supplied, use only hobby paints

Work carefully with photo etched parts if included, use C/A glues to assemble them

請您在組裝此產品前仔細閱讀組裝指南;

請使用通用塑膠模型黏合劑和工具(本產品不附帶);

本產品所以提供的噴塗指南只適用本於模型;

如果本產品含有蝕刻套件,請小心仔細處理, 請使用C/A膠水組裝;

組み立て前にこの組み立てガイドをご覧ください。

プラスチックキット専用接着剤と専用工具をご使用ください。(ともにキットには含まれていません)

塗装ガイドに従ってください。専用塗料をご使用ください。

エッチングパーツの組み立ては細かいパーツのため注意が必要です。また接着には瞬間接着剤を使用ください。



cut/remove

切下 / 移除

切断/切り離し



drill hole

鑽孔

ドリル穴



no glue

不適用膠水

接着しない



bend

折彎

折り曲げ



cyanoacrylate glue

氰基丙烯酸酯膠水

瞬間接着剤



string or wire

細繩或者金屬絲線

糸または金属線



rope

繩

ひも



paint area during assembly
(ref. to AMMO colors)

裝配過程中的噴漆區域推薦
(請參考AMMO顏色)

組み立て時の塗装部分
(コード例: AMMOカラー)





PE - press rivets (lines)
from the etched off side

蝕刻片 -
請从蝕刻掉的一侧压铆钉 (线)


ラインやリベット部分を未エッチング面から圧を与える

The most known and infamous 15 t German wagon, produced in thousands of pieces since 19th century, with just very little changes in its original design. During the WWII they became an important part of any military train heading to the battlefield with supplies or soldiers.. The kit is based on accurate and detailed factory drawing.


The kit contains many optional PE details (?), they may or may not be used depending on personal taste. Their usage is shown in certain steps where they are to be assembled, but they are not shown in further steps to keep drawings clear as much as possible.

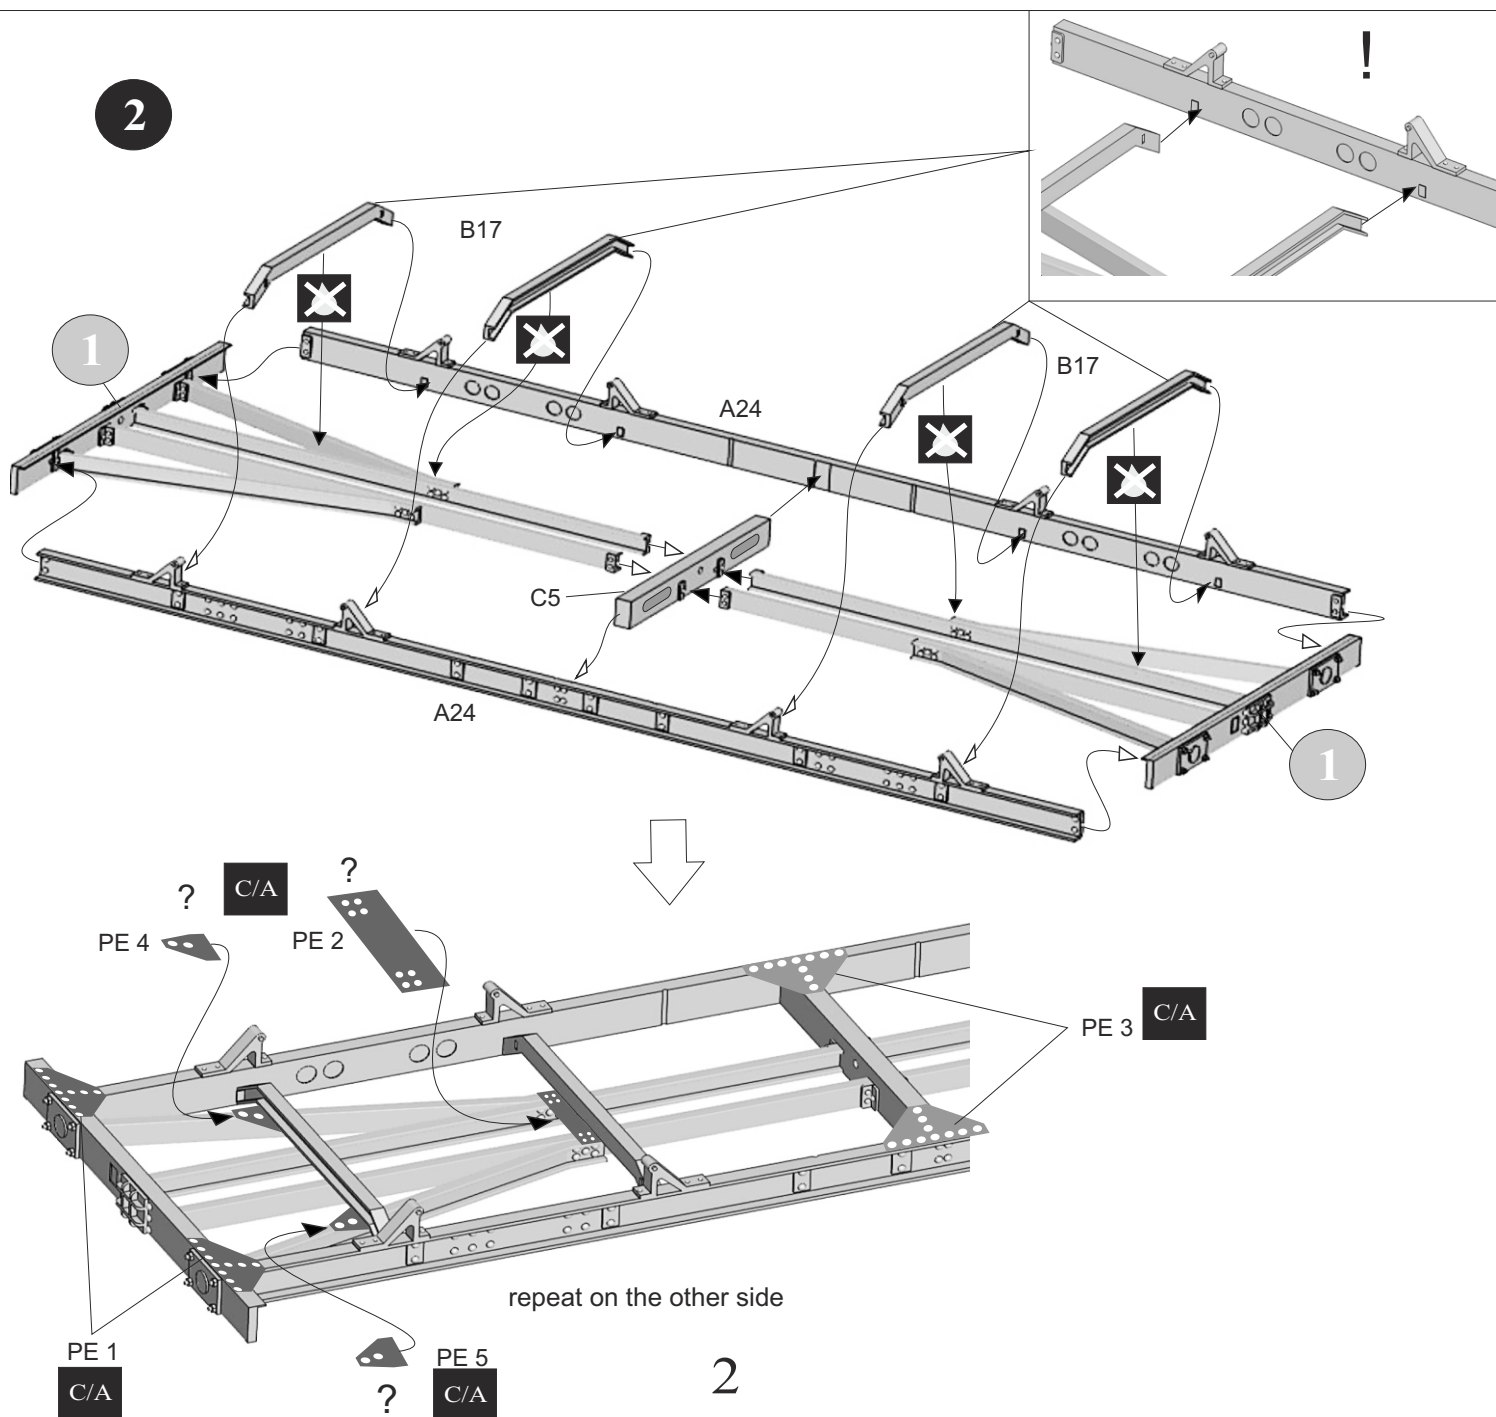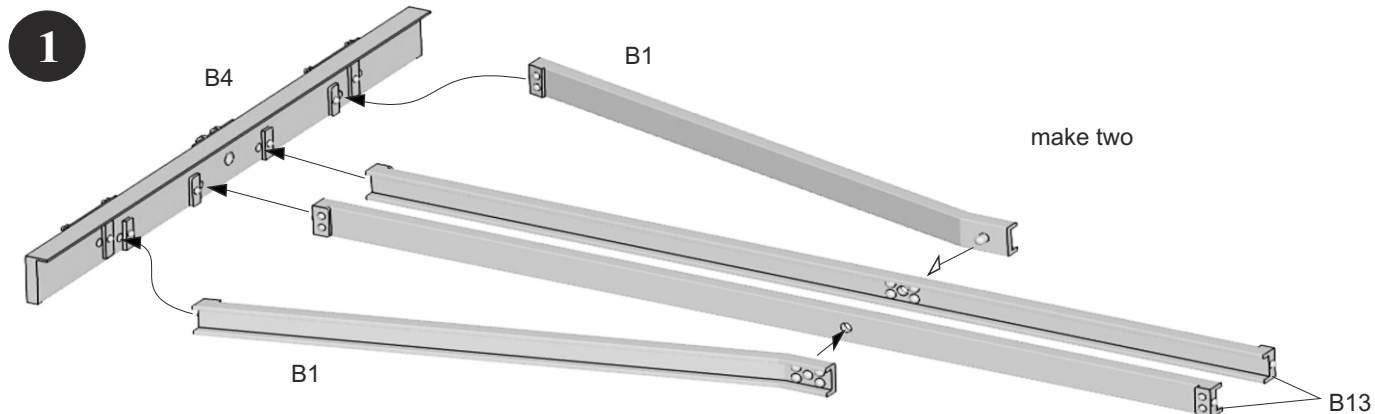



3

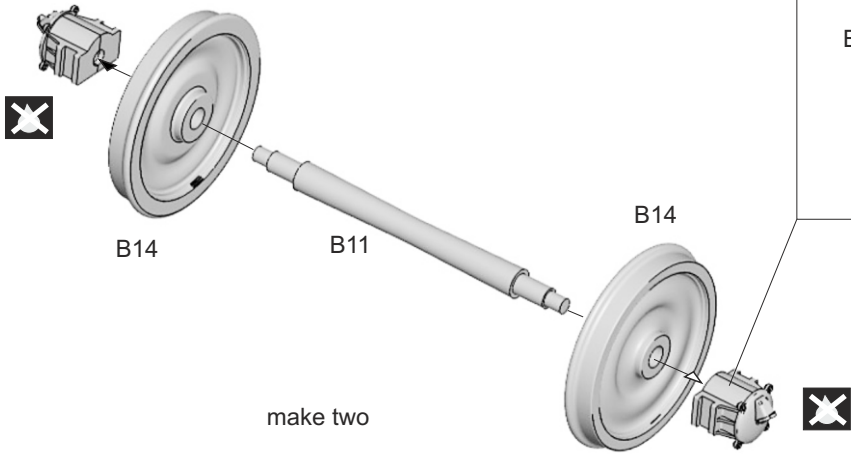


make four

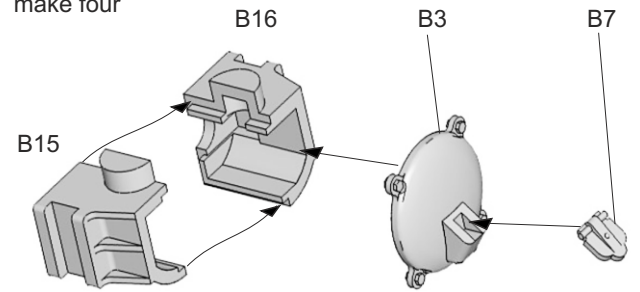


4

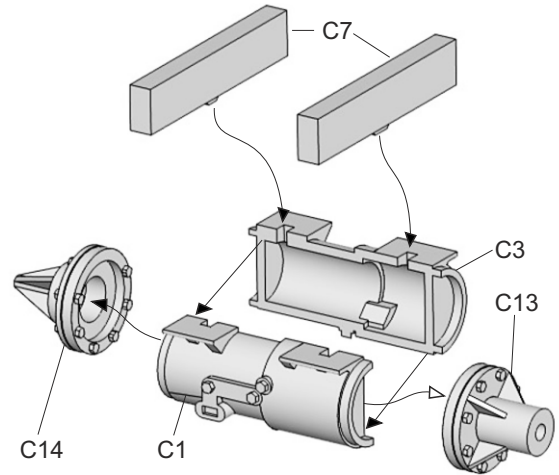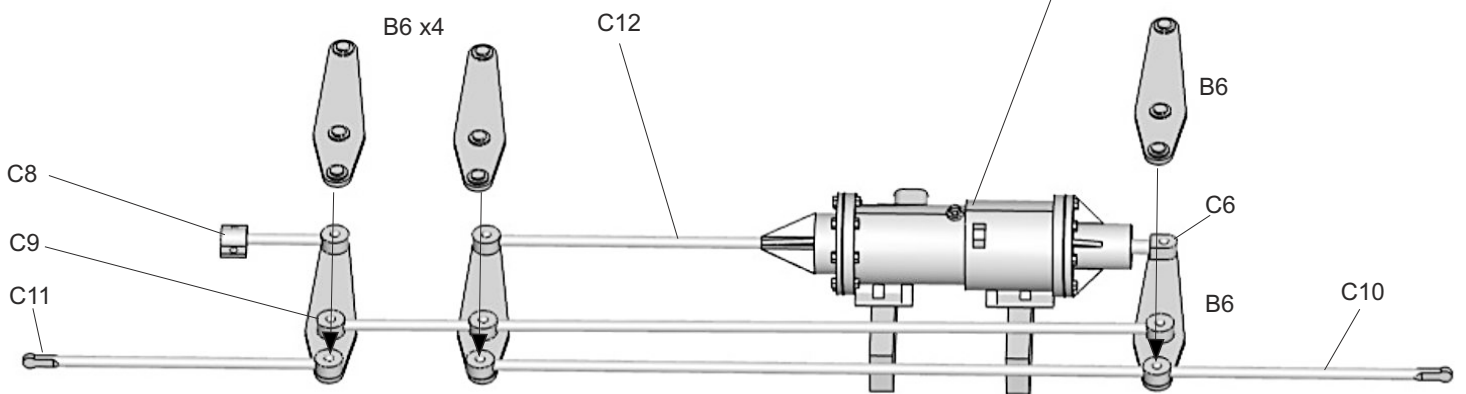



5

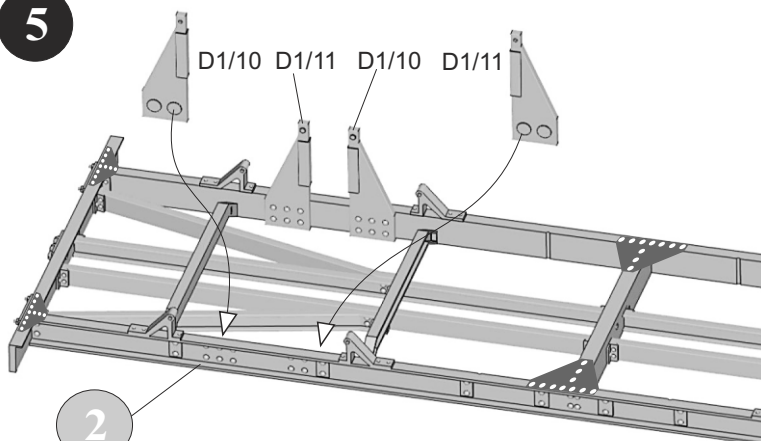

repeat step 5 on the other side

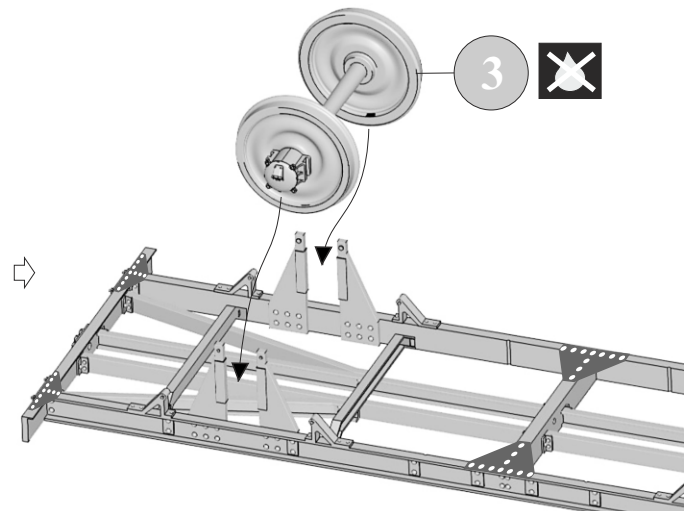

make four

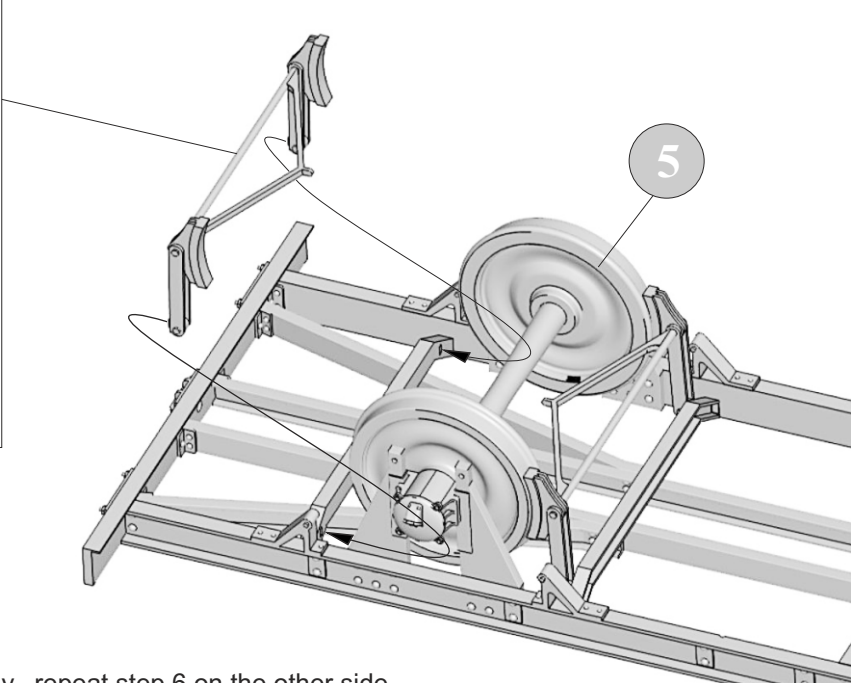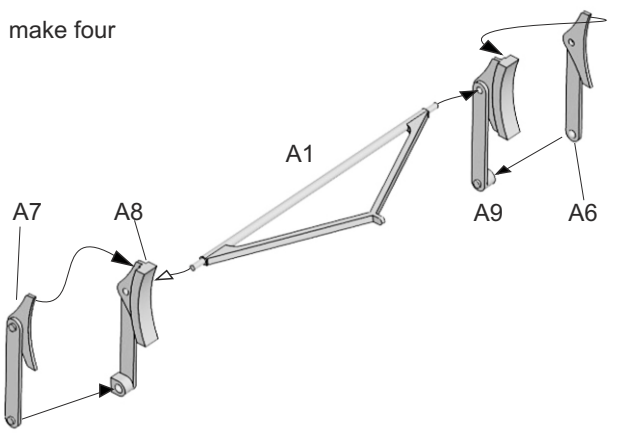


6


set brakes to touch wheels lightly, repeat step 6 on the other side

7


remove wheels for easy access


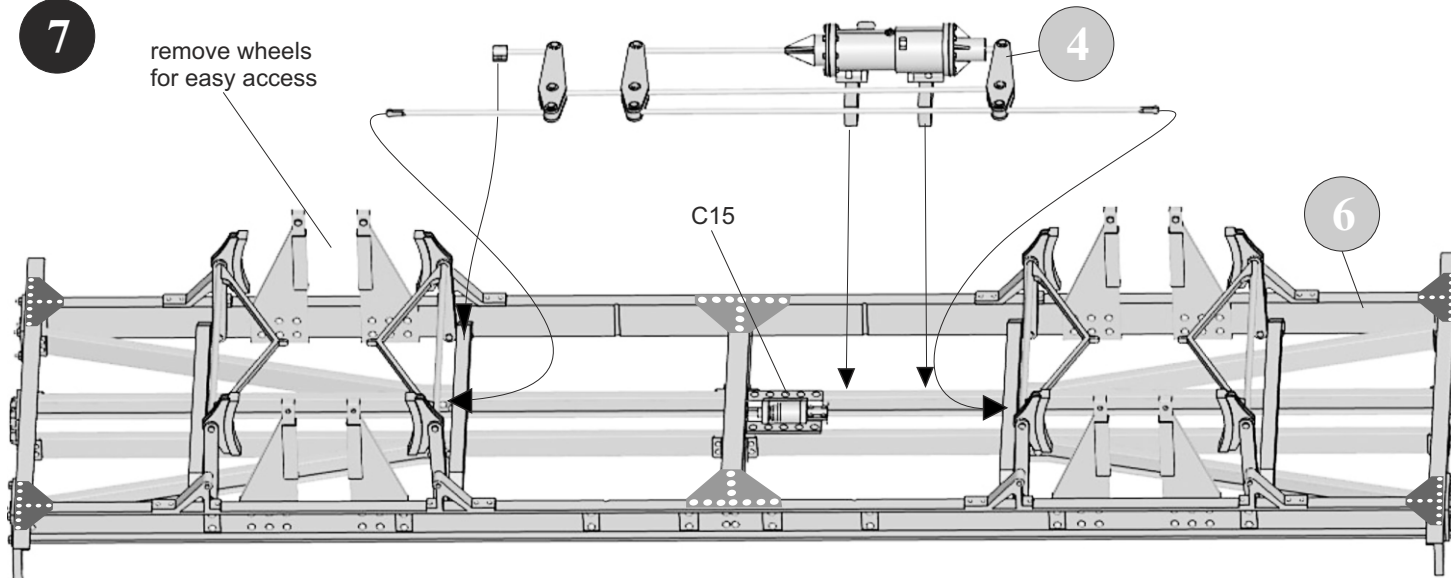


brake assembly overview, work carefully step 8

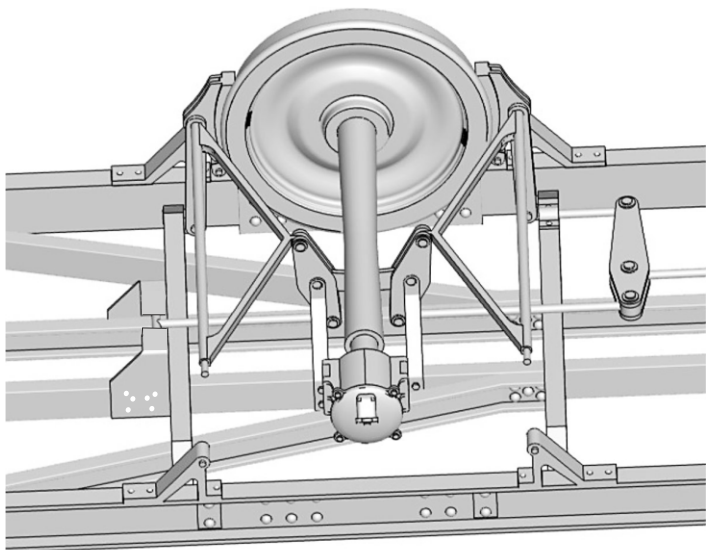


8

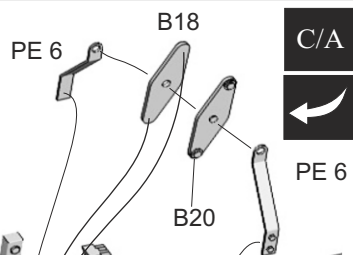

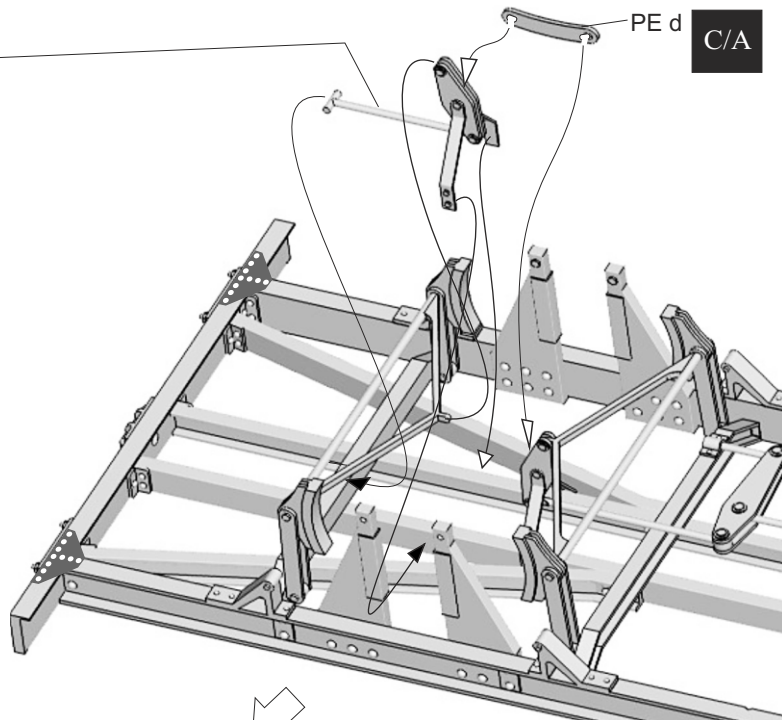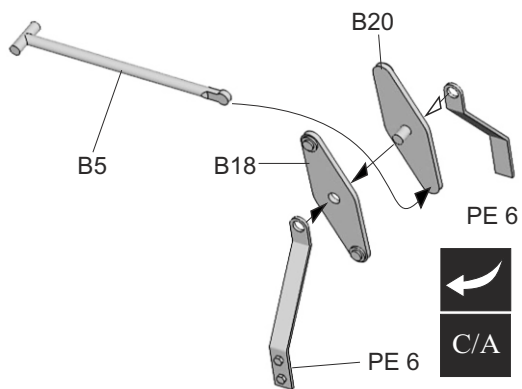


8


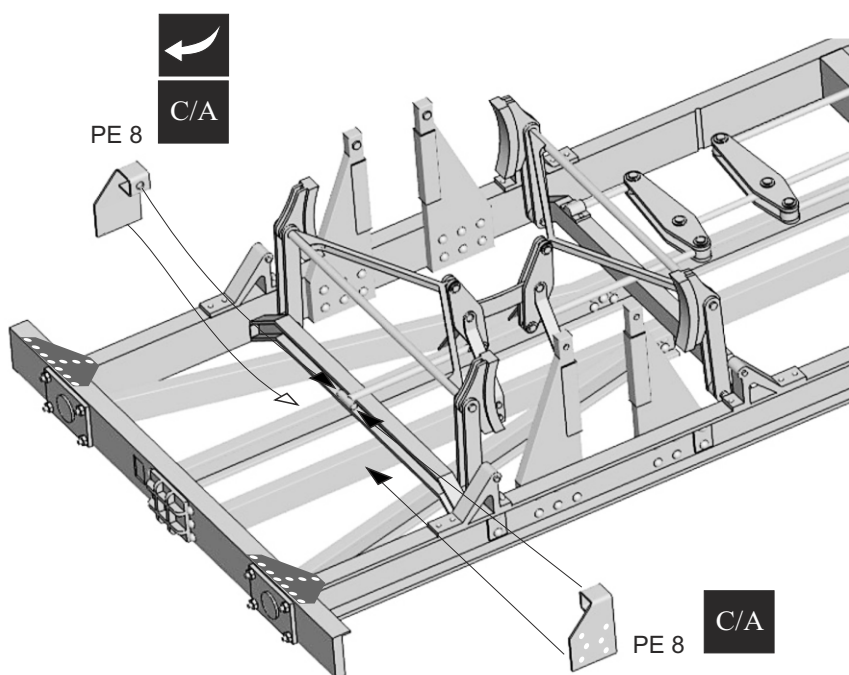


repeat step 8 on the other side

9

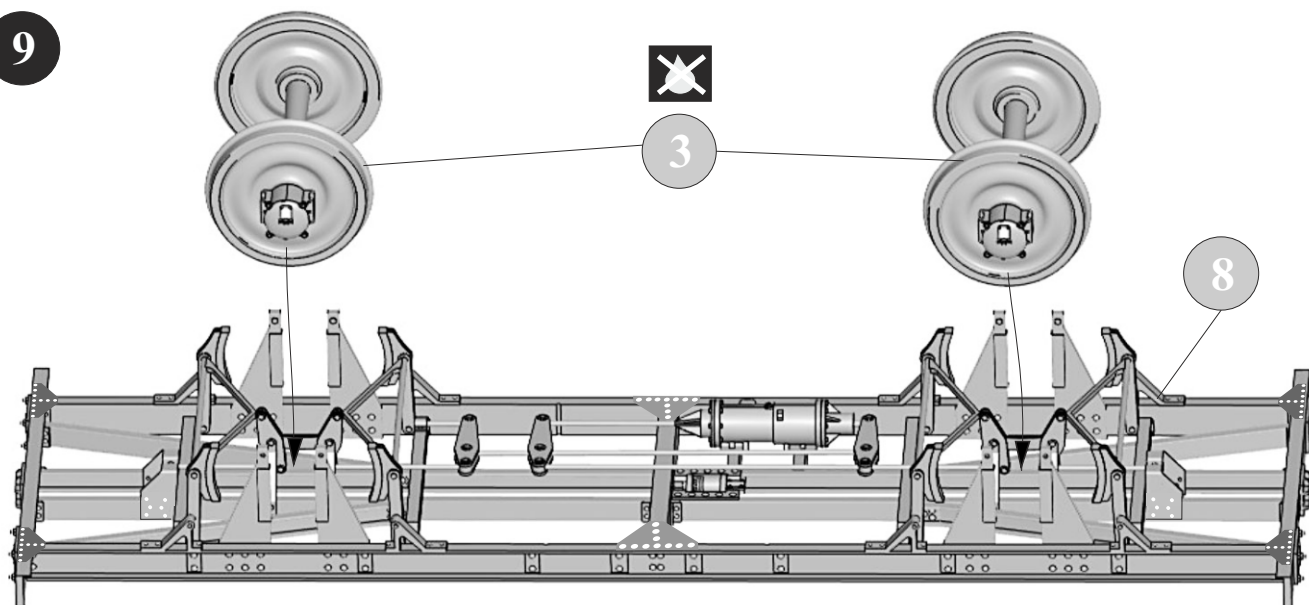

10

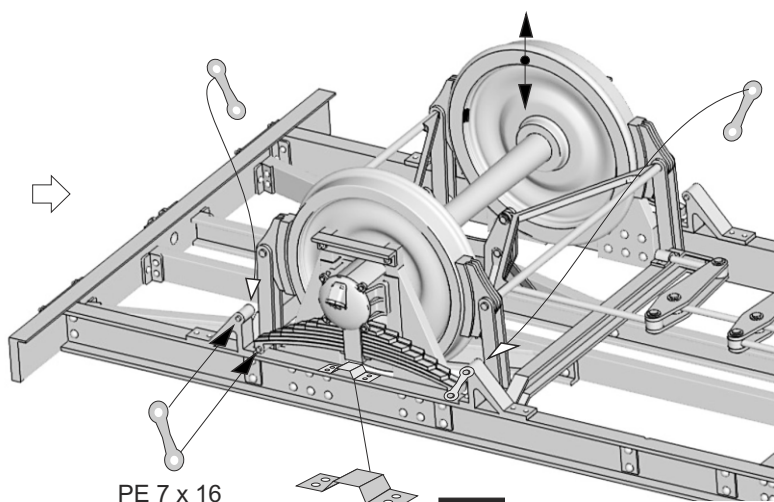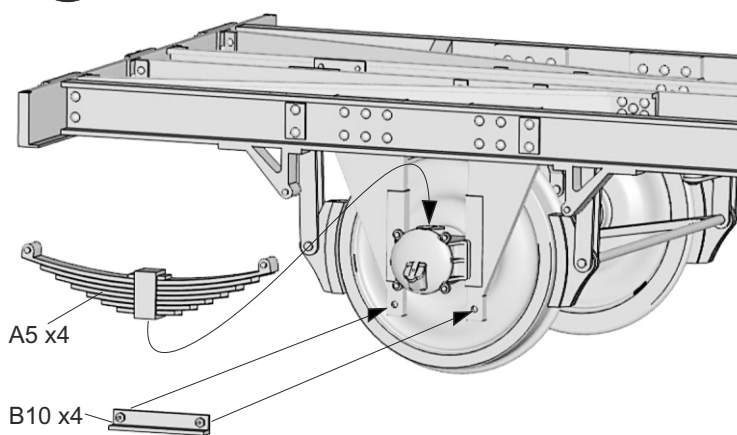


C/A

PE 11 x 4




repeat on the other sides

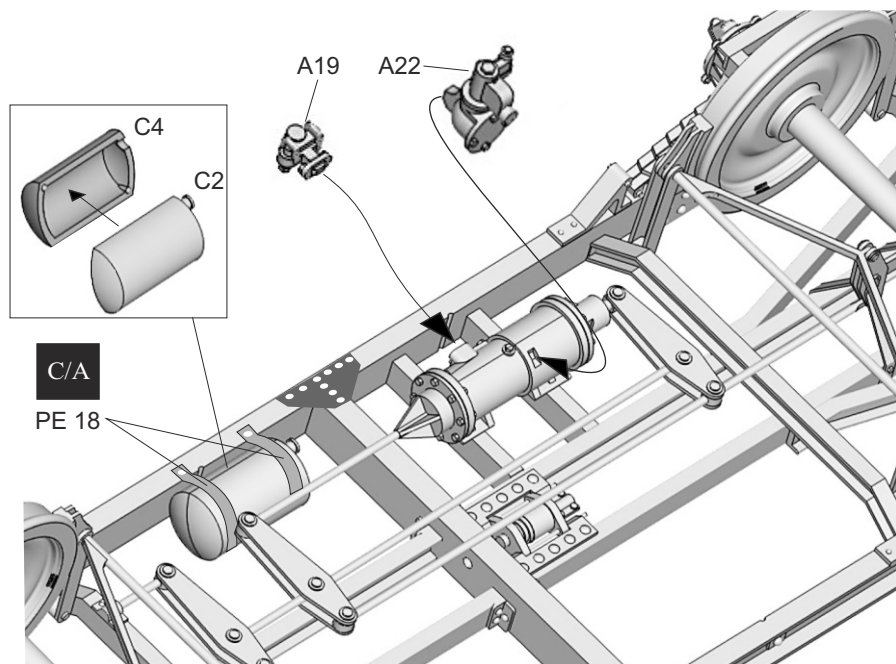

11


optional - tension rod connecting hooks with central spring

1mm



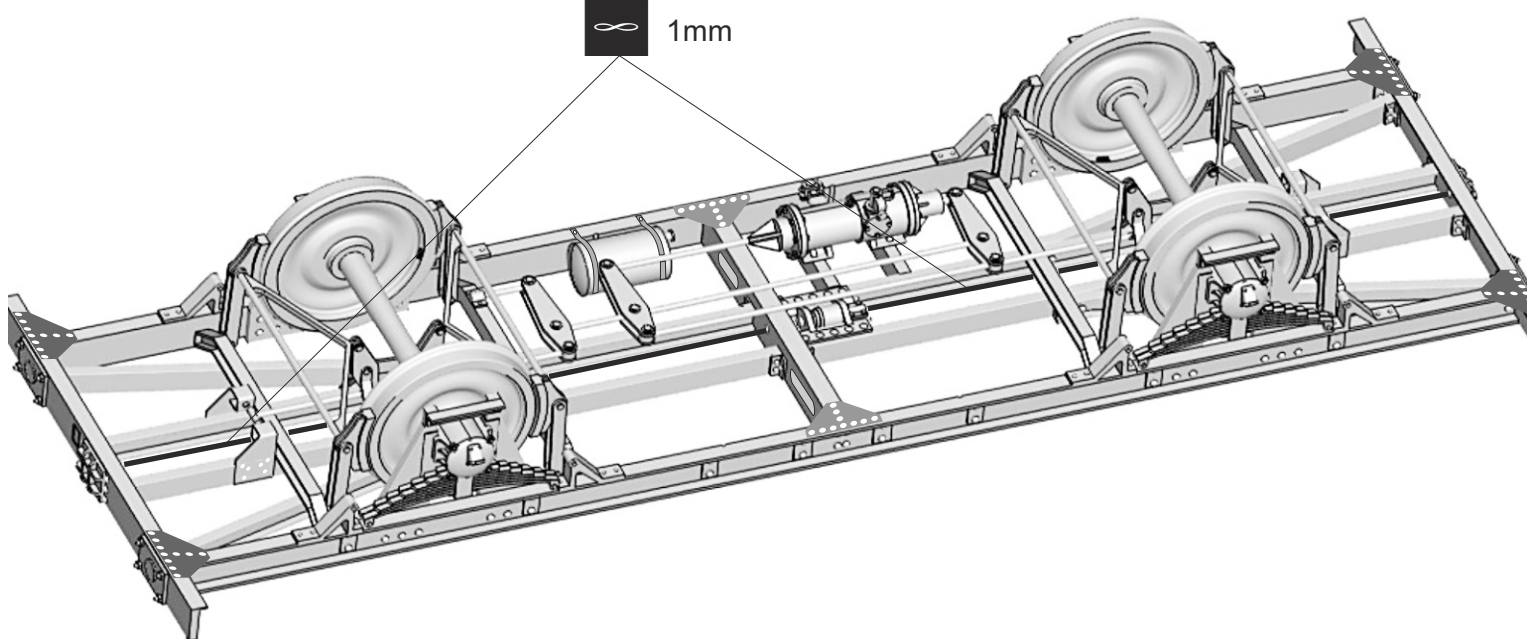


12

optional - air supply assembly

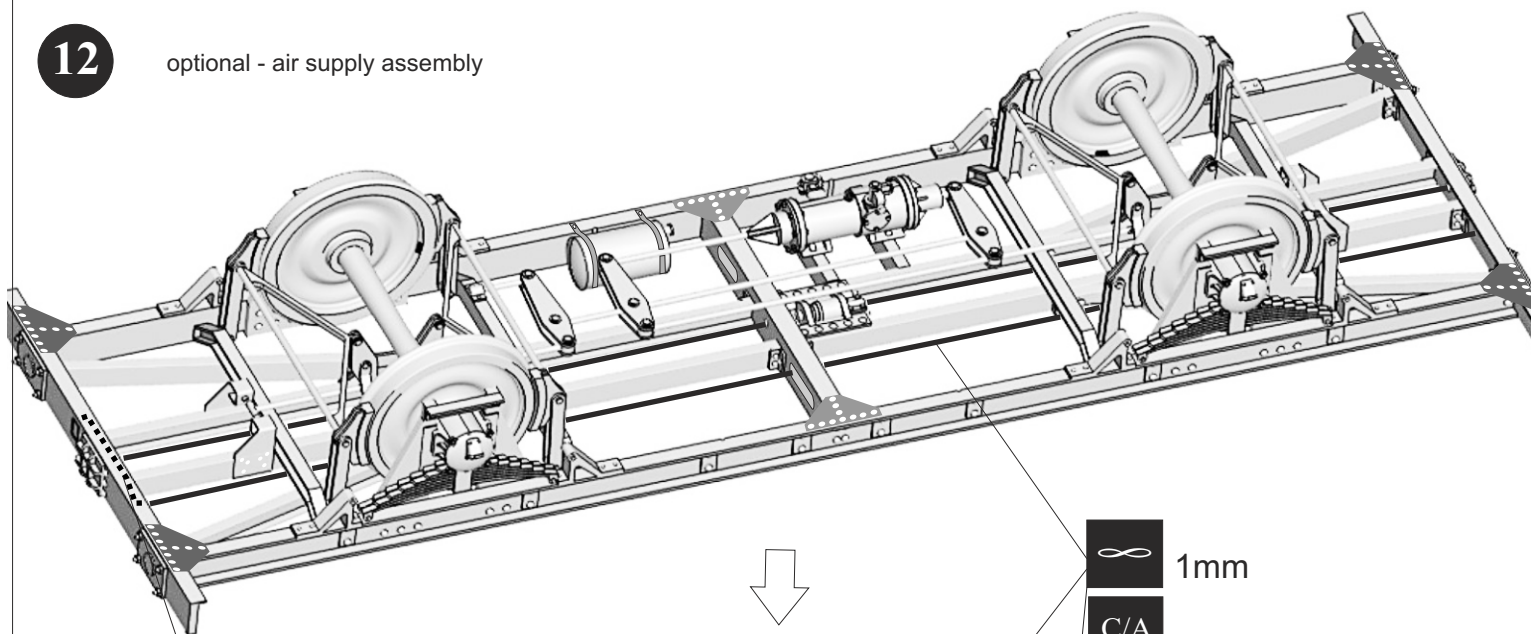

∞ 1mm
C/A

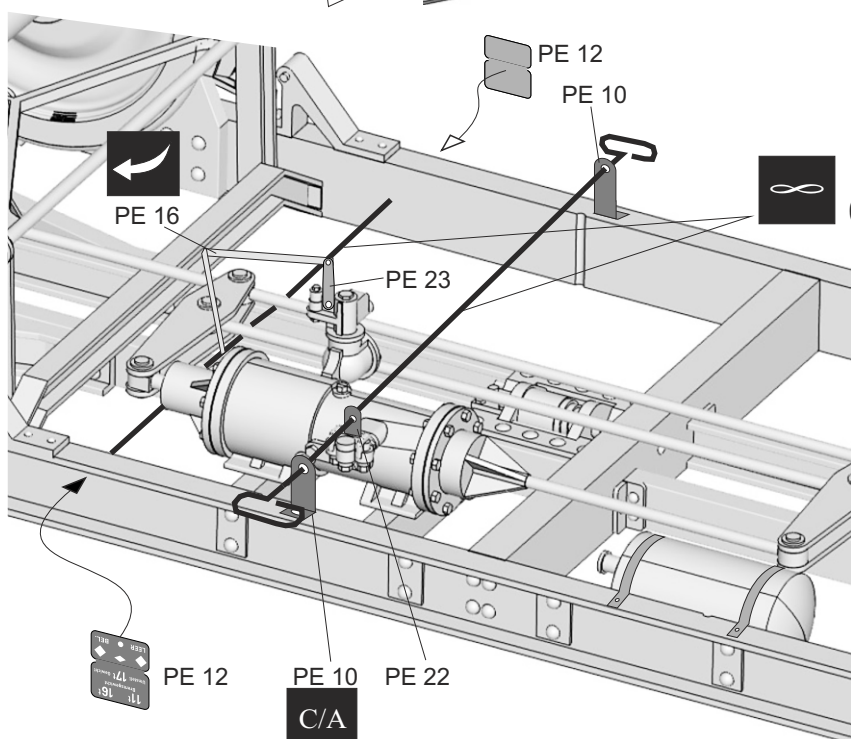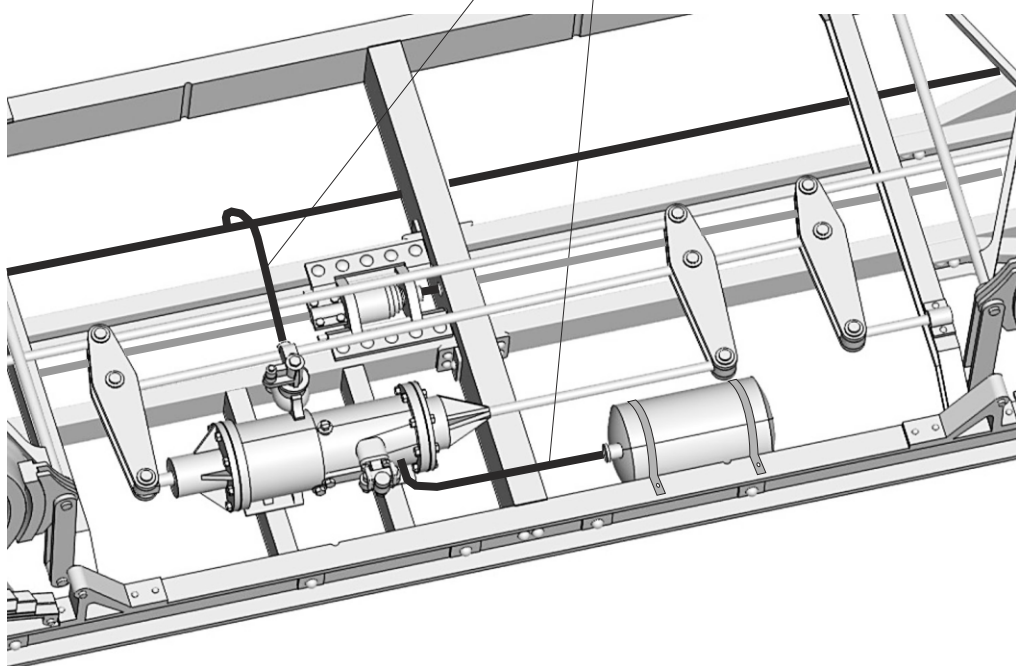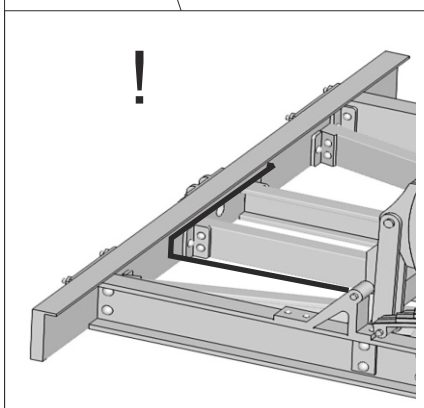


pulling rod template

∞ 0,3 mm

13


optional - safety holders

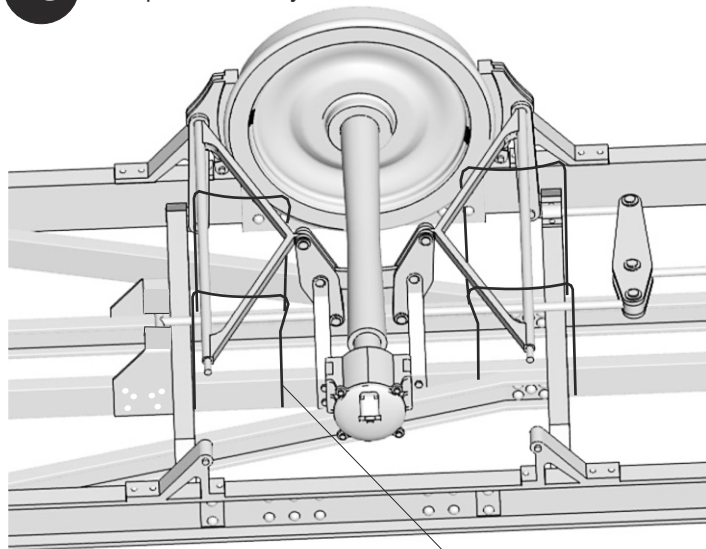


safety holders bending teplates



∞ 0,3 mm C/A


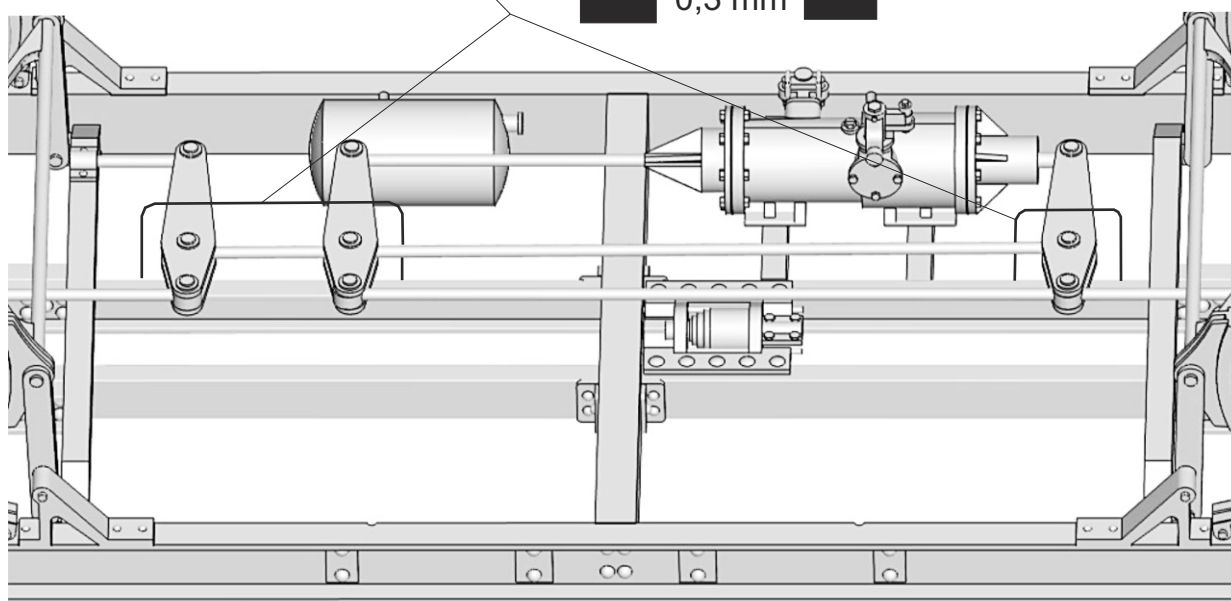


14

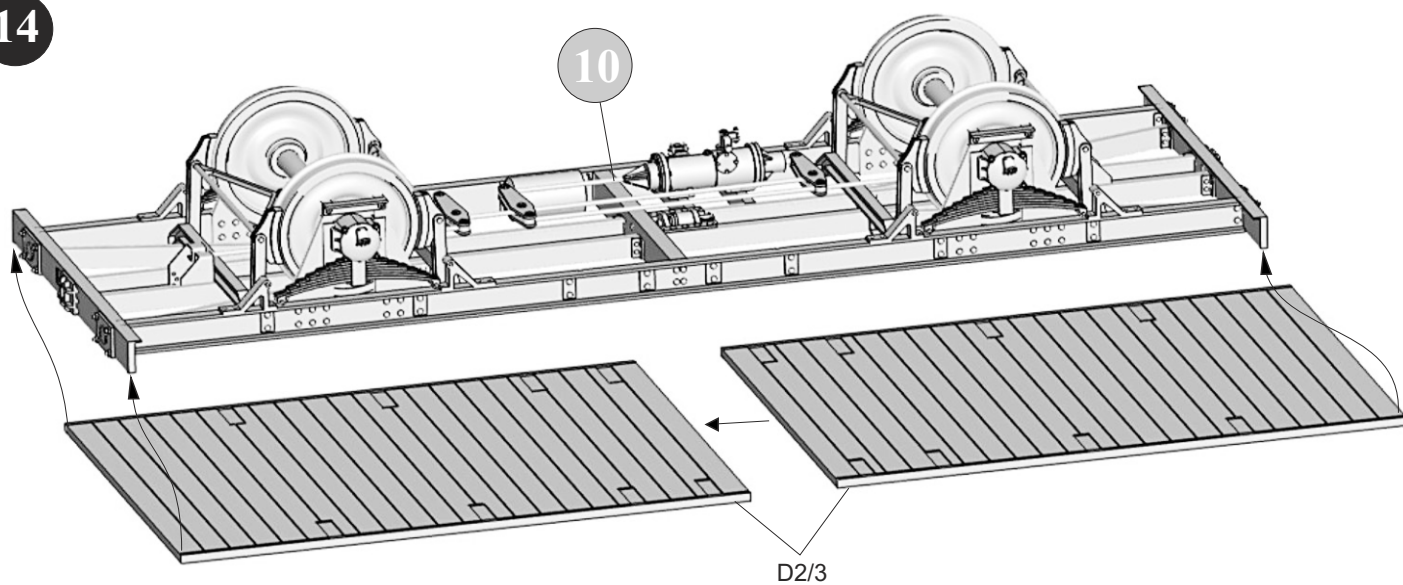


D2/3


15

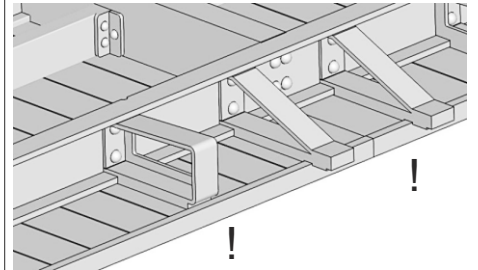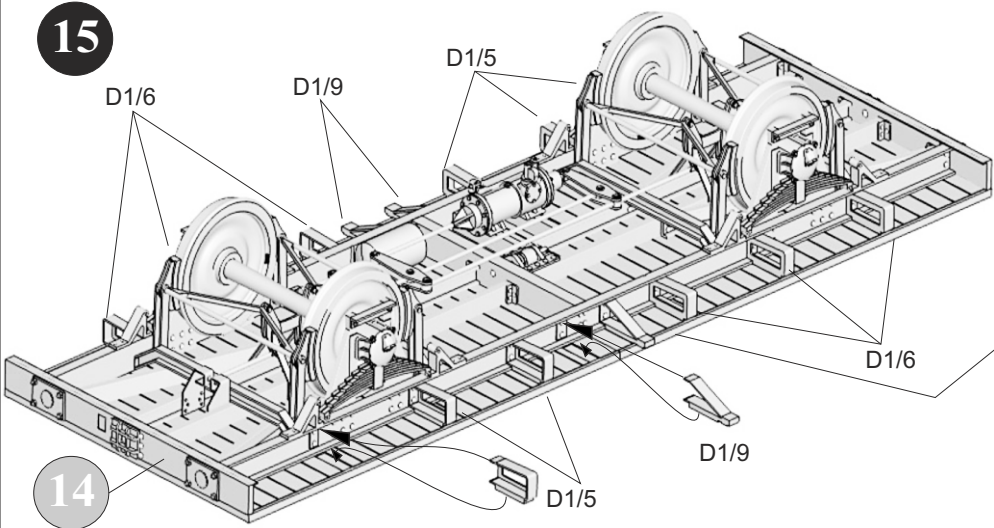





14


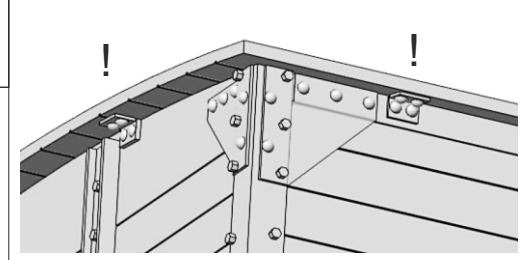


16

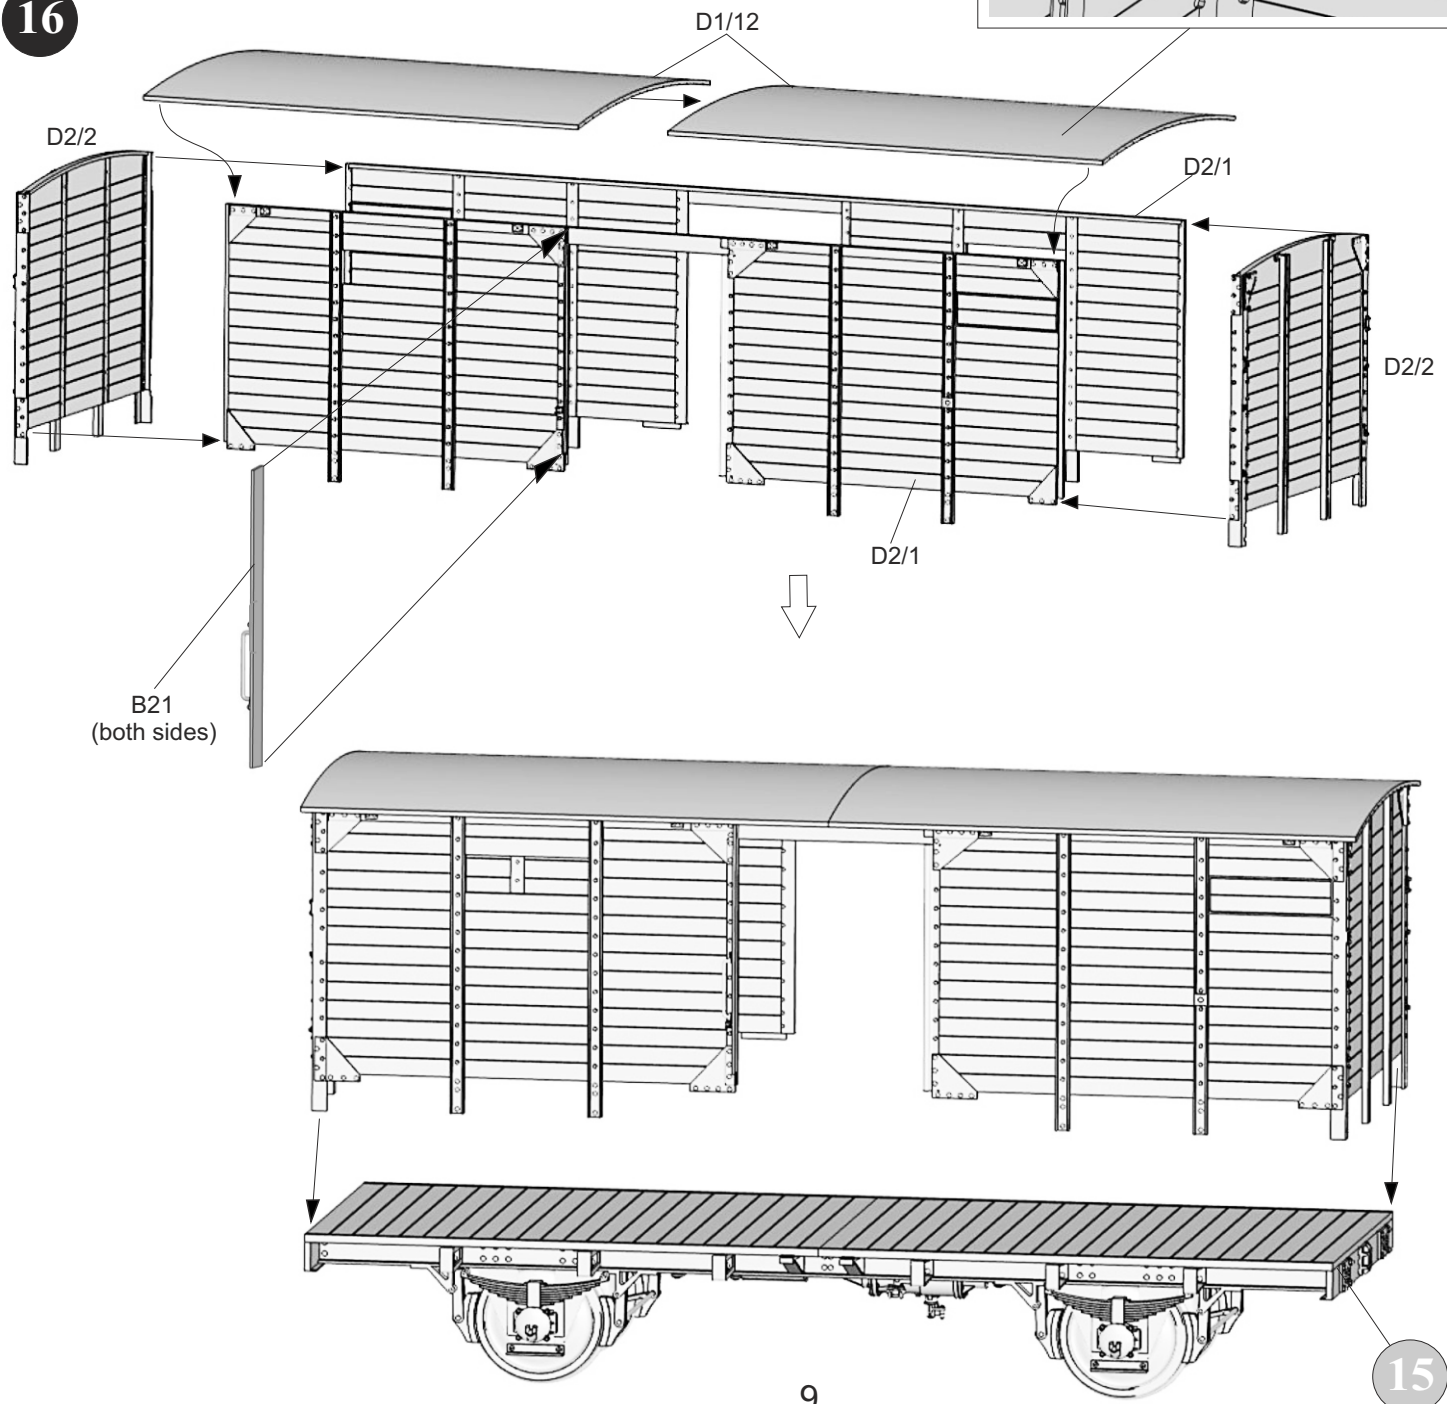


15

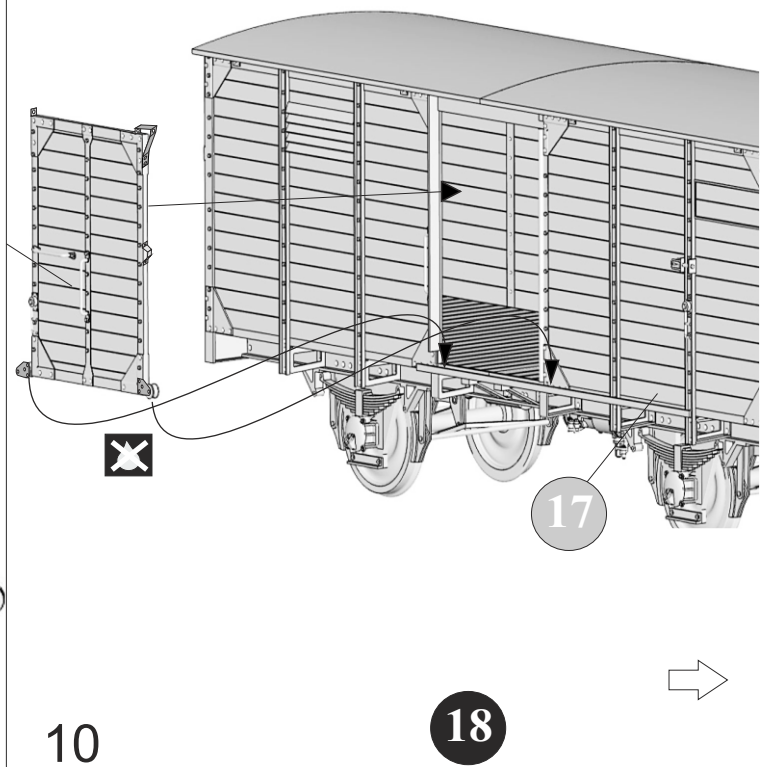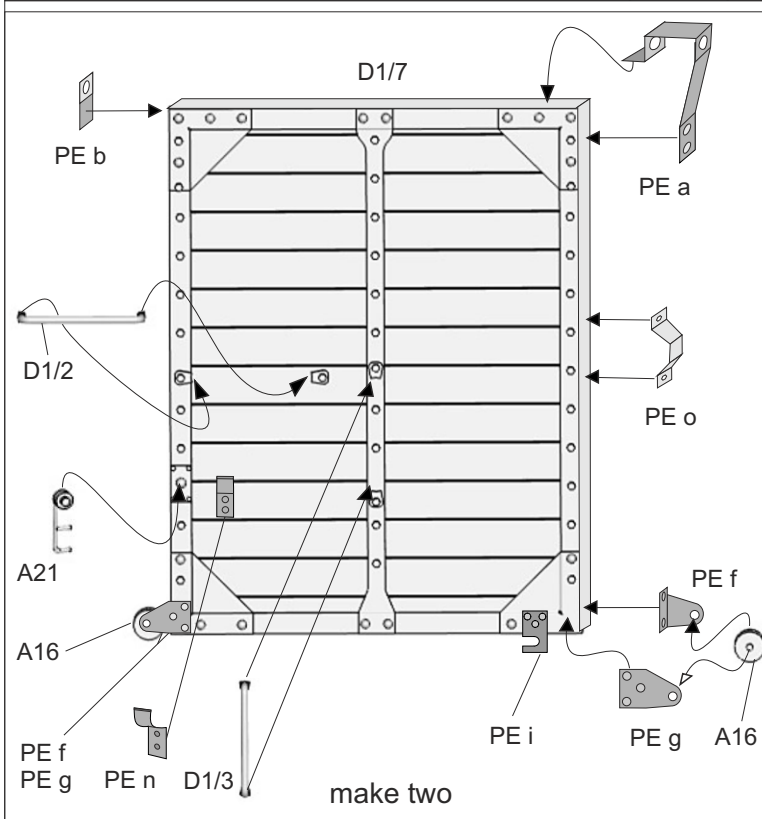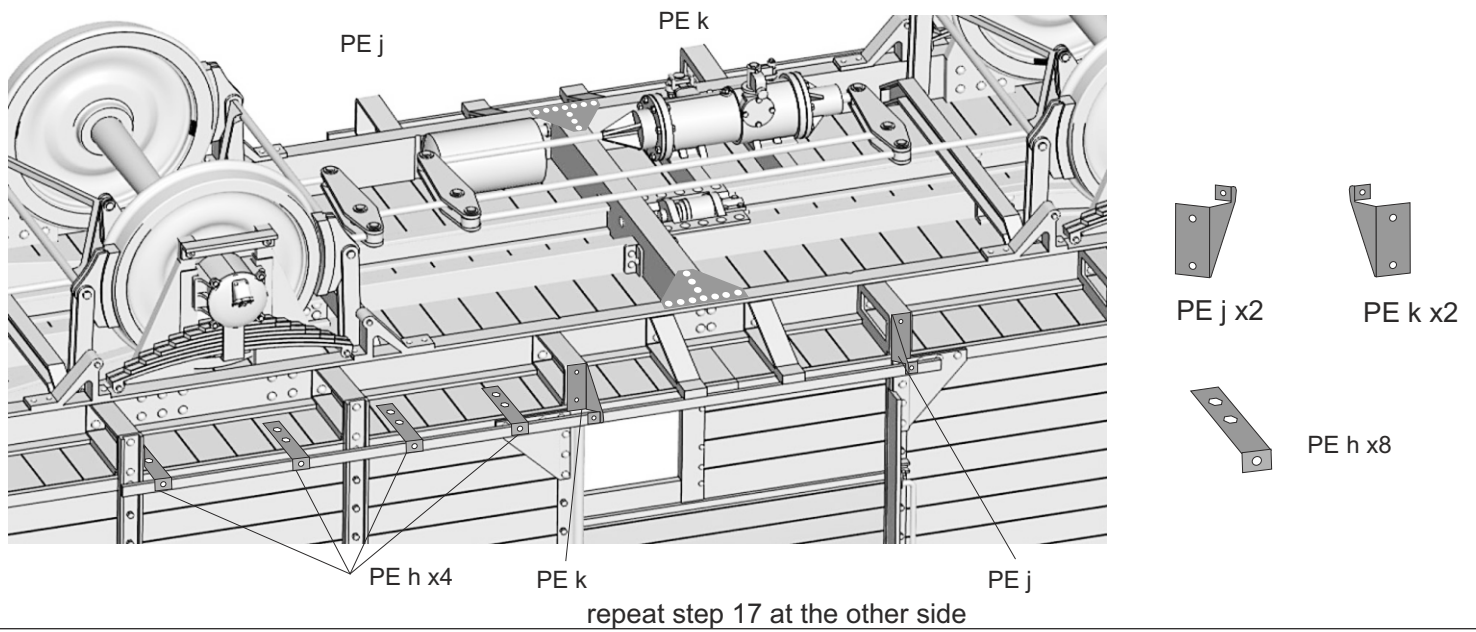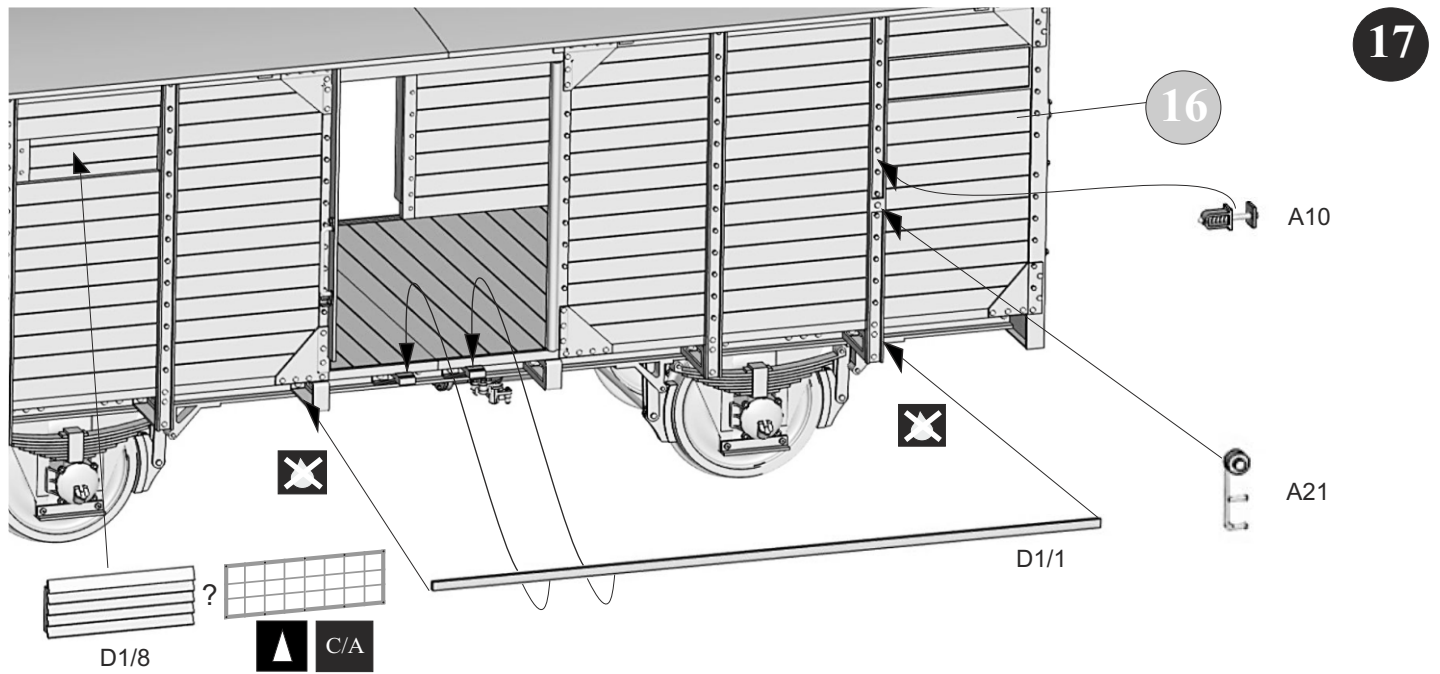

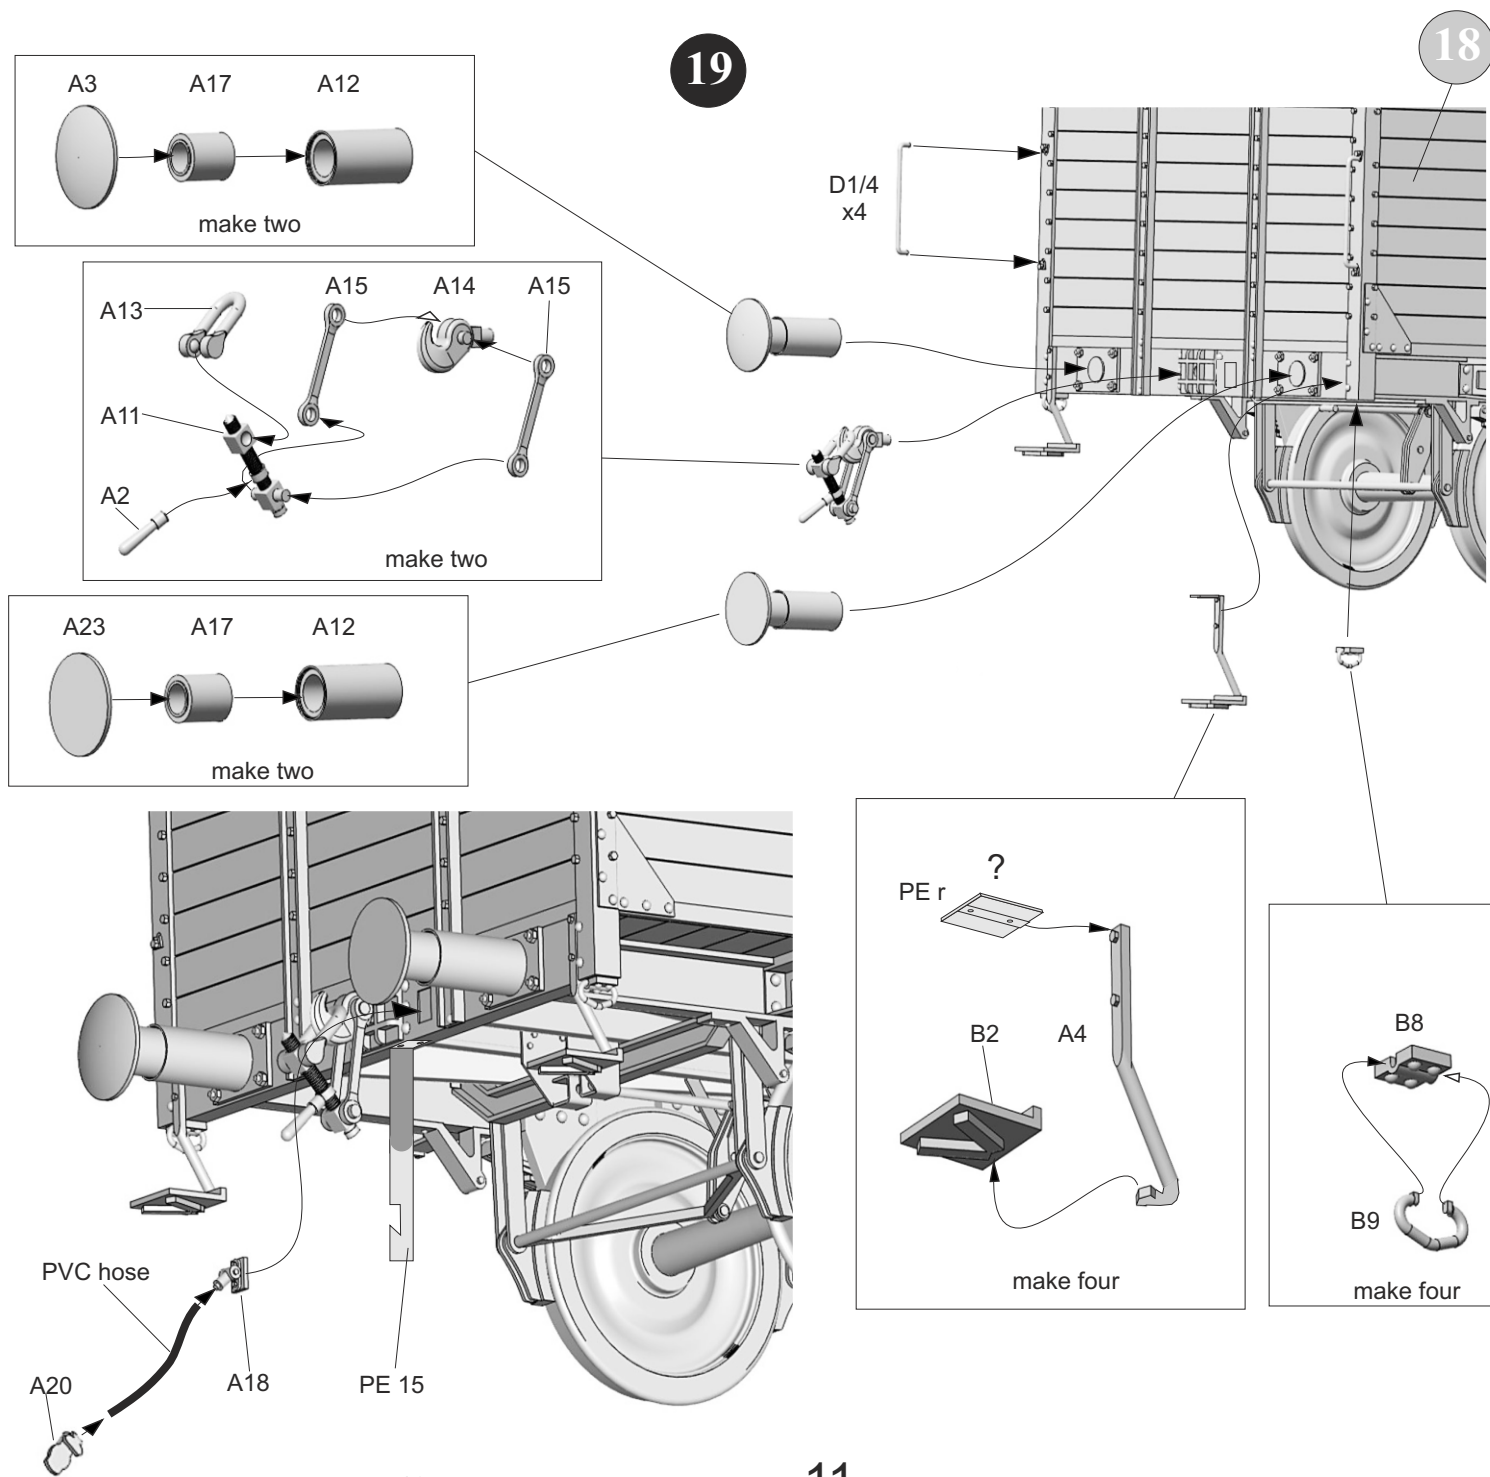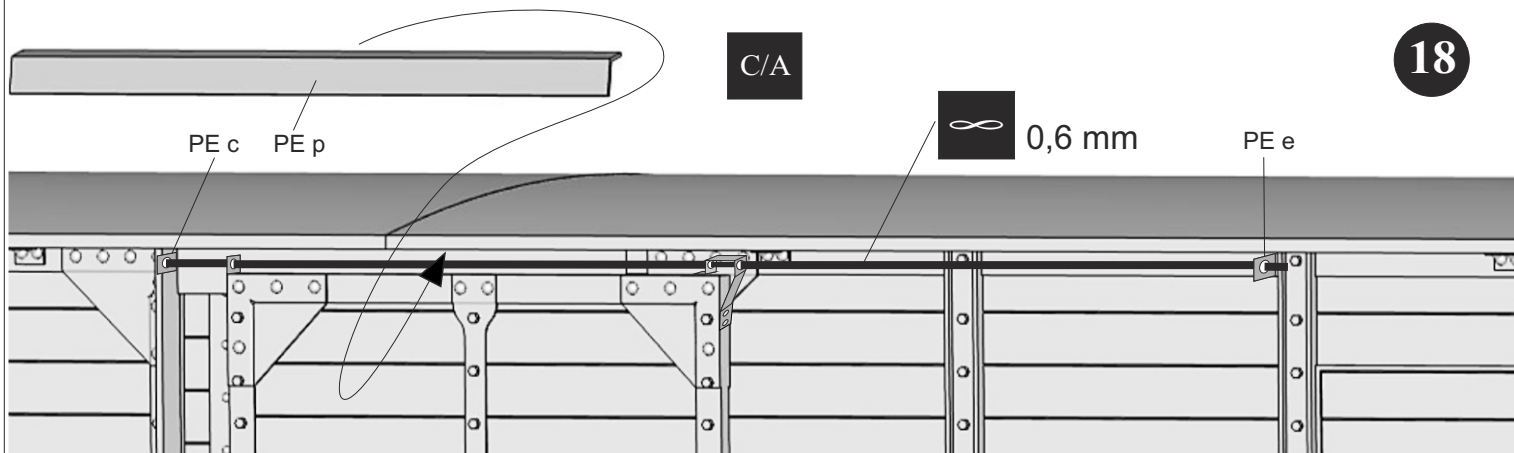




repeat step 19 on the other side

20 optional step rails and lamp mounts

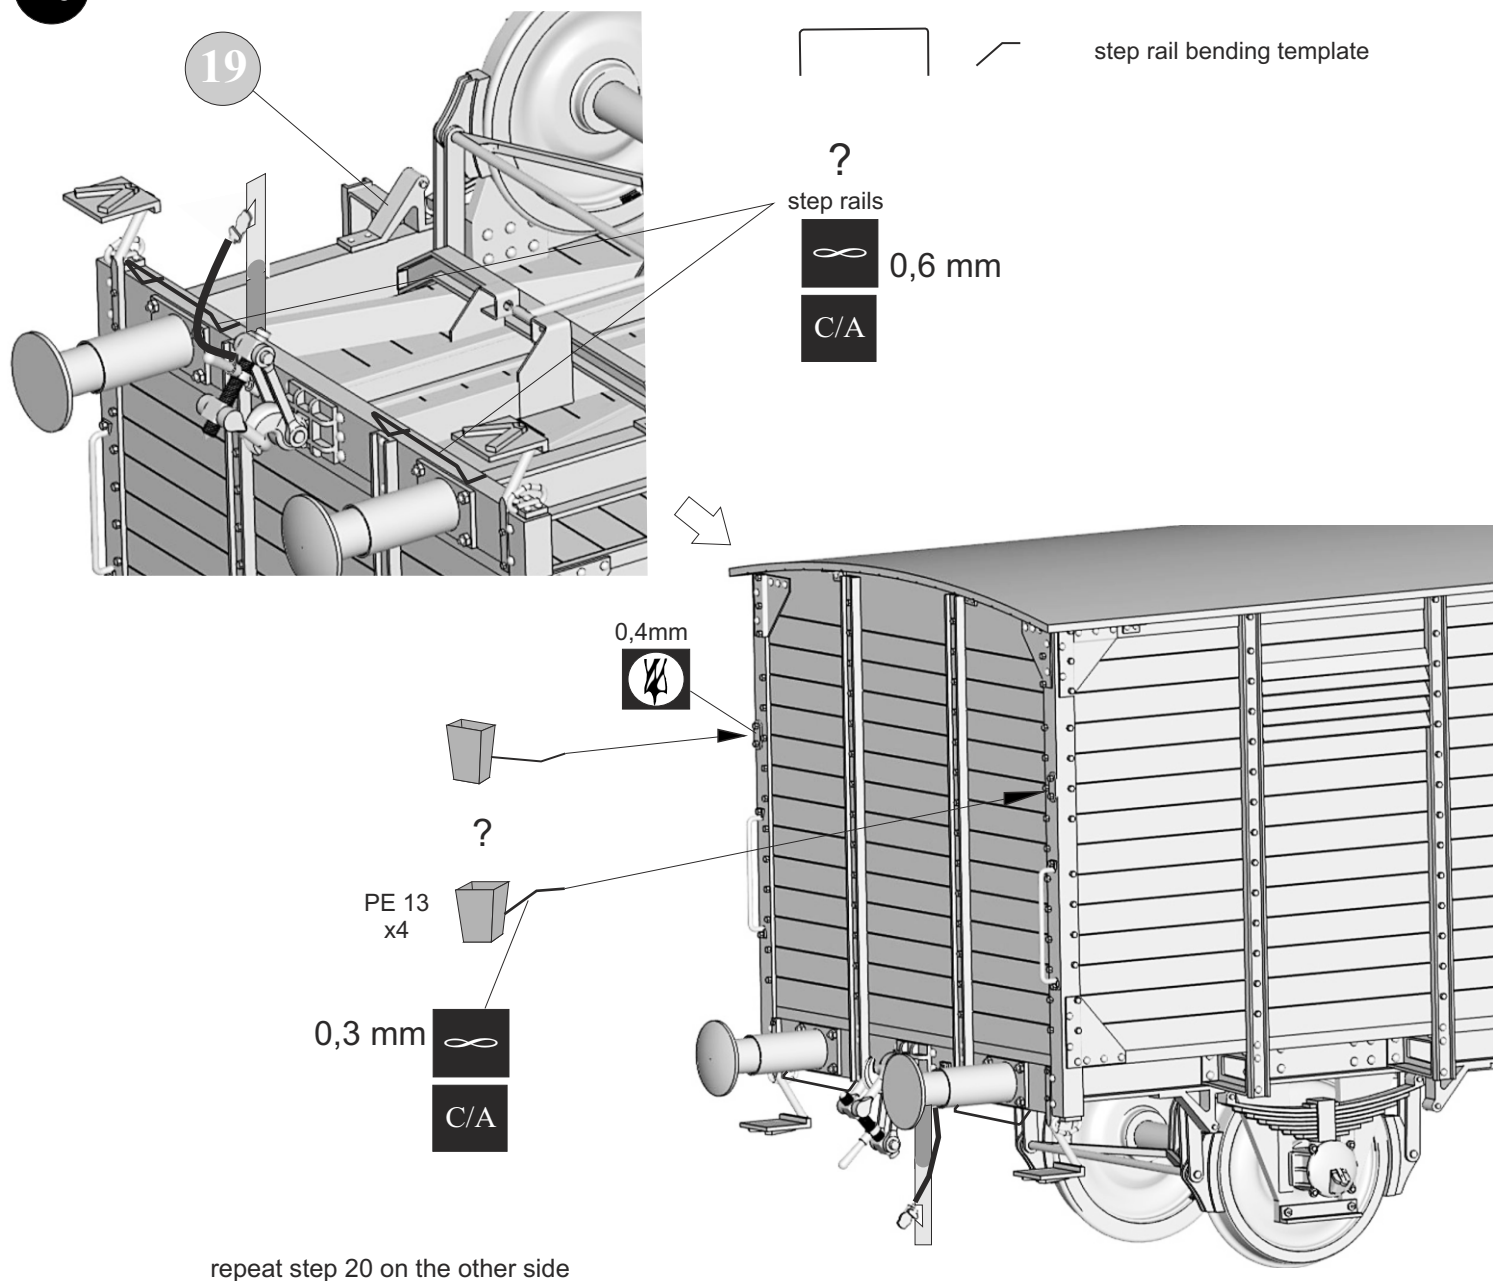

21

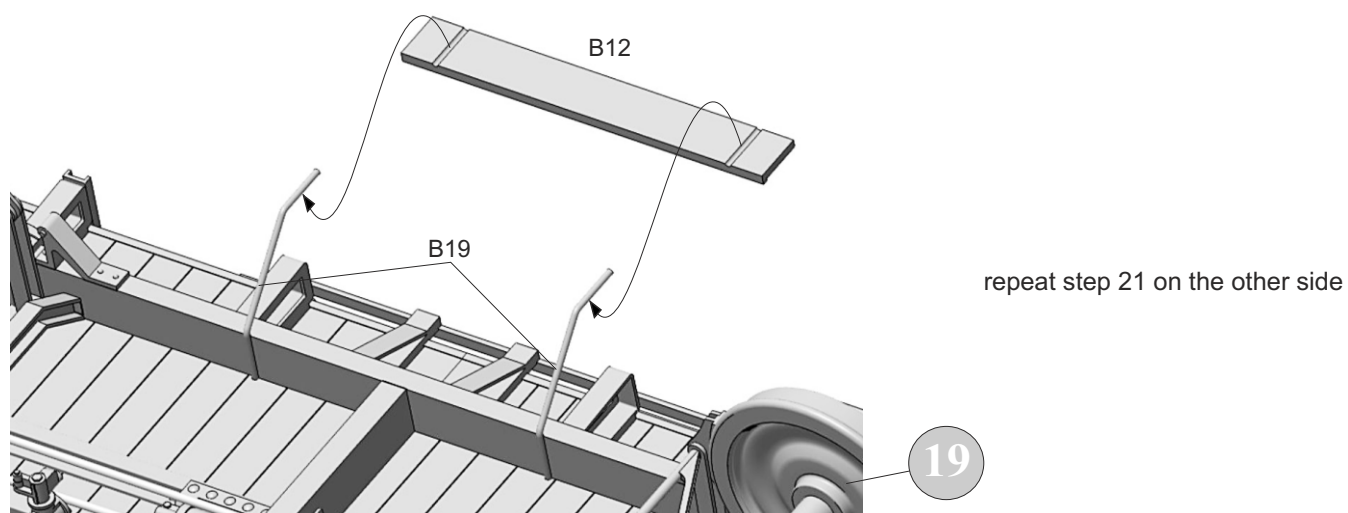

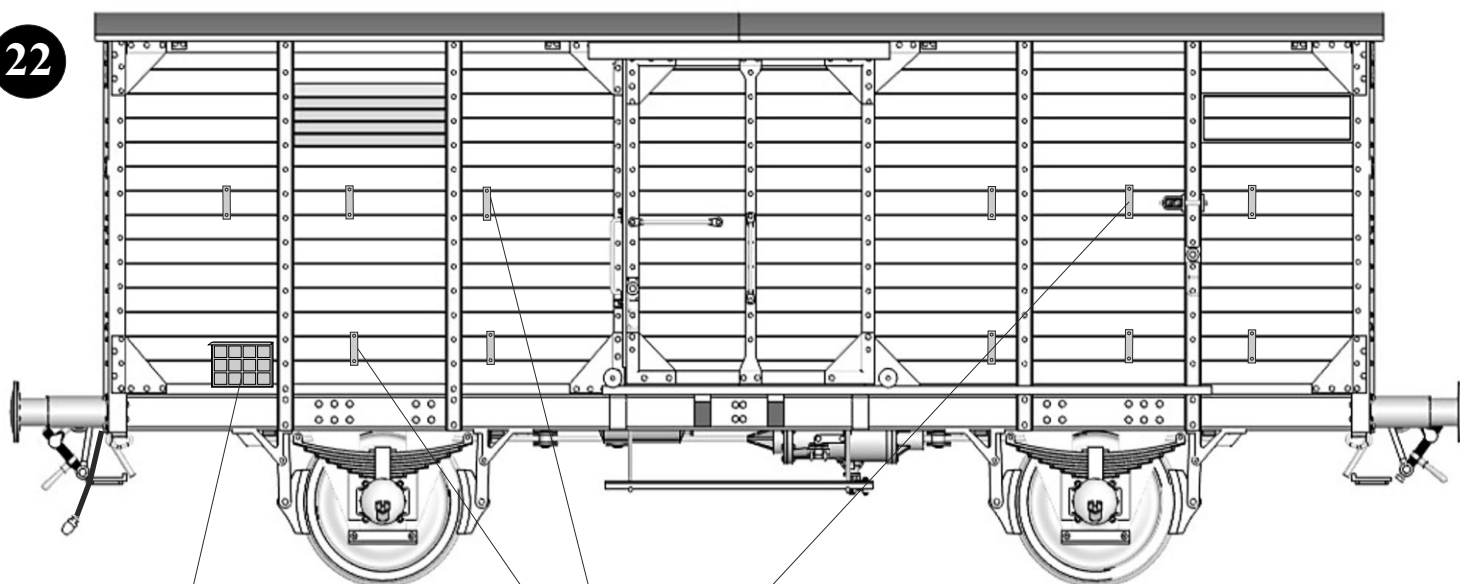

PE 14


PE 17

make two, repeat at the other side



?

PE m
x 30
used mainly
on Glt type
wagons

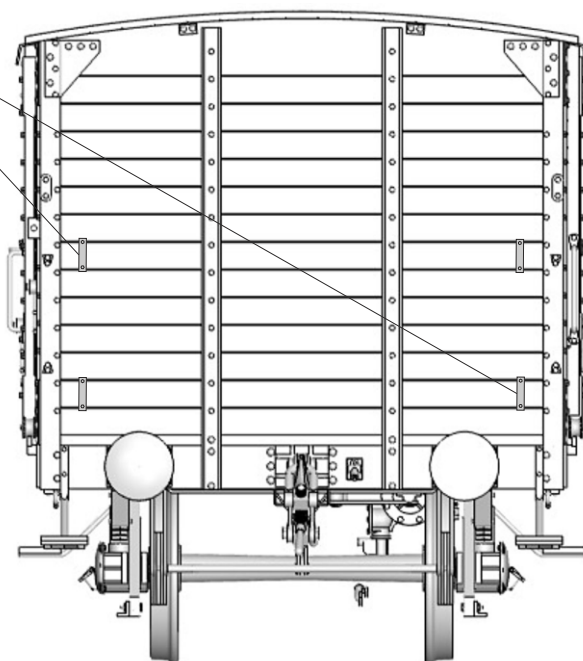

?

PE q

